

:: Quick Start Guide

Battery Charging Steps and Safety:

Remove the rechargeable Nimh AAA batteries from the vehicle before charging.
 Place charger on a fire resistant surface.
 Avoid any contact with water or other liquids.
 Be sure to select the correct charger for the type of battery you are charging. The included charger is for rechargeable Nimh AAA batteries only, and is not meant for alkaline batteries!

ALWAYS use a compatible charger for charging your batteries.

Caution: Never leave the batteries unattended while charging. Always disconnect the charger from the power source when finished charging.

Caution: Always disconnect / remove the batteries when you are finished driving the vehicle.

 


:: Quick Start Guide - (cont.)


Battery Installation:

1. Install the batteries with positive and negative in the orientation noted on the vehicle.
2. Secure the battery holder using two tabs on the side.

1

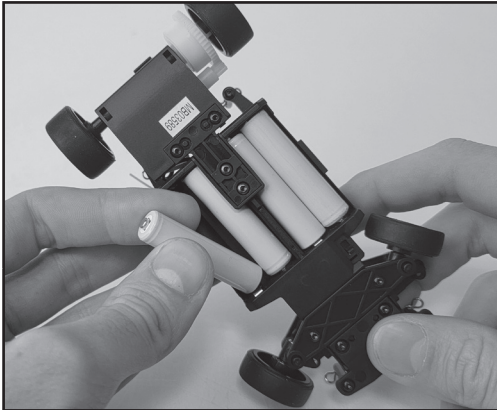

2

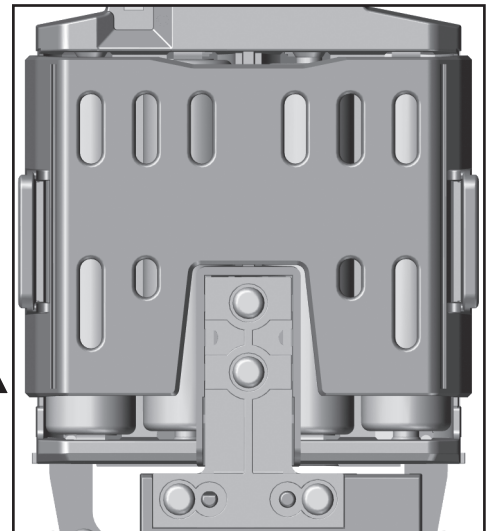 


:: Quick Start Guide - (cont.)

Radio System Tuning and Controls:

RULE: Transmitter on First/Vehicle on Second,
 Vehicle off First/ Transmitter off Last!

 - 1) Open the battery cover.
- 2) Install alkaline or rechargeable AA size batteries into the battery holder. There are [-] and [+] polarity indicators in the battery compartment on the side wall. [-] on the left and [+] on the right, towards the battery cover when opened.
- 3) Close the battery cover back into place, making sure it is completely closed and secure.

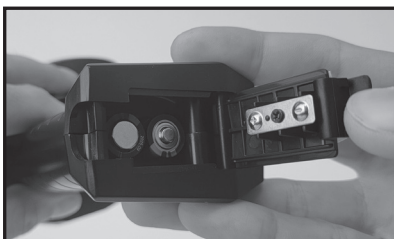

Gyro Controls:

The SR27 internal gyro helps stabilize the car and prevent spins when it is driven on low grip surfaces. When using the car on high grip racing surfaces, disabling the gyro is recommended. From the factory, the Datsun 240Z models come with the gyro enabled while the Nissan Z models come with the gyro disabled.

To turn the gyro on or off, first power on the car and radio, then press and hold the button for 3 seconds. If the LED flashes once, it indicates that the gyro is now turned on. If the LED flashes twice, it indicates that the gyro is now turned off. After the LED flash sequence, release the button. The car is now ready to drive with the new setting.



:: Quick Start Guide - (cont.)

Radio System Tuning and Controls:

- 4) Turn the power ON. If the power indicator LED fails to light, check the batteries for insufficient contact or incorrect polarity.

Throttle Limit Switch

Steering Reverse

Power Button



Steering Dual Rate

Steering Trim

**Channel 3
(not used)**

**Channel 4
(not used)**



:: Quick Start Guide - (cont.)

Radio System Tuning and Controls:

DO NOT hold the trigger when turning on the radio.

Transmitter requires four AA batteries. When the battery voltage is low, the LED will change from steady to a slow flash.

Refer to Radio owners manual for more in-depth instructions on radio operation and functions.



SCAN ME

SR27

Digital manual



 
**Push trigger
for Brake**

**Pull trigger
for Throttle**

Neutral

Throttle set to Neutral!

**Adjust steering
trim so front
wheels point
straight.**

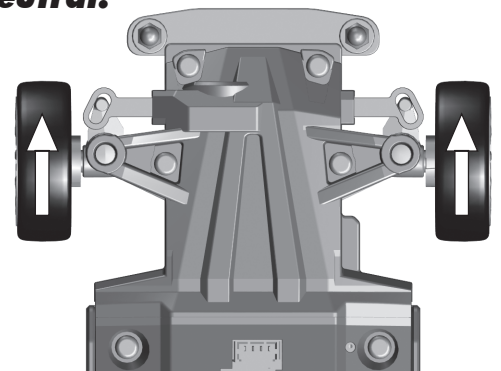

Install body and body clips. Turn on transmitter, then vehicle, ready to go!