


29254 Antenna Supplement

:: Antenna Replacement


1

Remove the receiver from your vehicle.

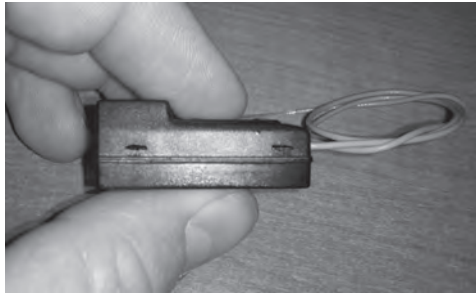


2

Carefully push tabs in on the receiver case.

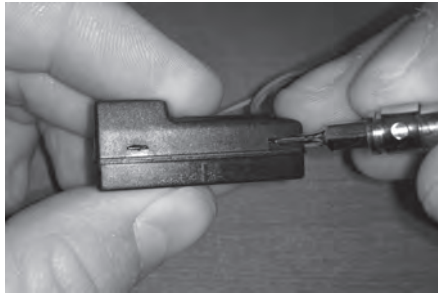

3


Remove the top of receiver case.

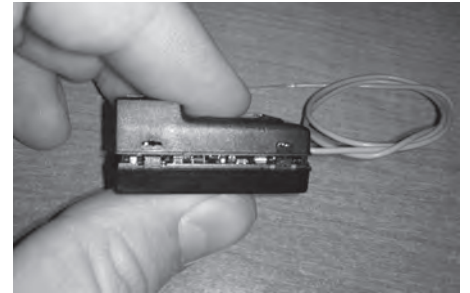

:: Antenna Replacement - (cont.)


4

Carefully unplug the old antenna wire from the board.

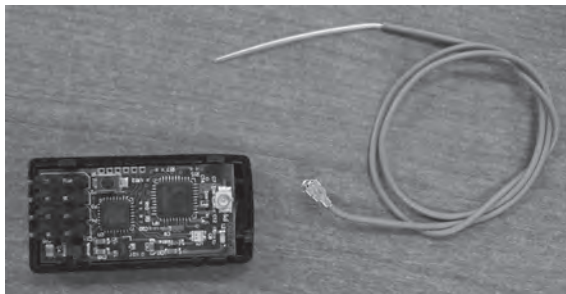


5

Install the new antenna wire into the board. Route wire into groove on the case.

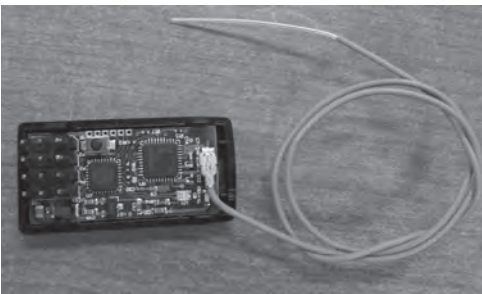

6

Install the top of the receiver case. Tabs will click into place. Install into vehicle.

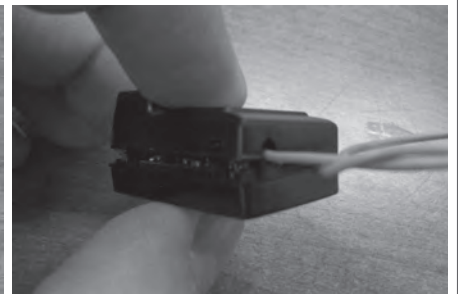

:: Antenna Replacement - (cont.)

7

Install servo and ESC wires into receiver. Feed antenna wire through antenna tube, stopping before the end of the tube. Check that steering and throttle work properly.



Receiver Wiring:

Your Receiver has multiple channel ports for plugs.

Channel 1 - you should always plug your steering servo into this channel port.

Channel 2 - you should always plug your speed control (ESC) into this channel port.

Channel 3 - Used for optional equipment such as fans, lights, ect...

Batt - Used for optional receiver battery pack.

Negative black wires on steering servo and speed control plugs should face the outside edge of receiver where channel markers are located.