

Bag 4-Step 5






As you tighten the diff bolt, you will notice the T-nut ears moving closer to the bottom of the outdrive slot. This compresses the spring behind the T-nut. The spring should be completely


compressed at the time the T-nut reaches the end of the slot. Caution! Pay close attention to the feeling when the spring is completely compressed. Do not overtighten the bolt. When you feel the spring completely compressed, loosen the diff bolt 1/8 of a turn. Your diff should now operate smoothly but with resistance as the outdrives move in opposite directions.


resistance as the outdrives move in opposite directions. After you have driven the car once, re-check the diff setting.



#Bag 6-Step 1

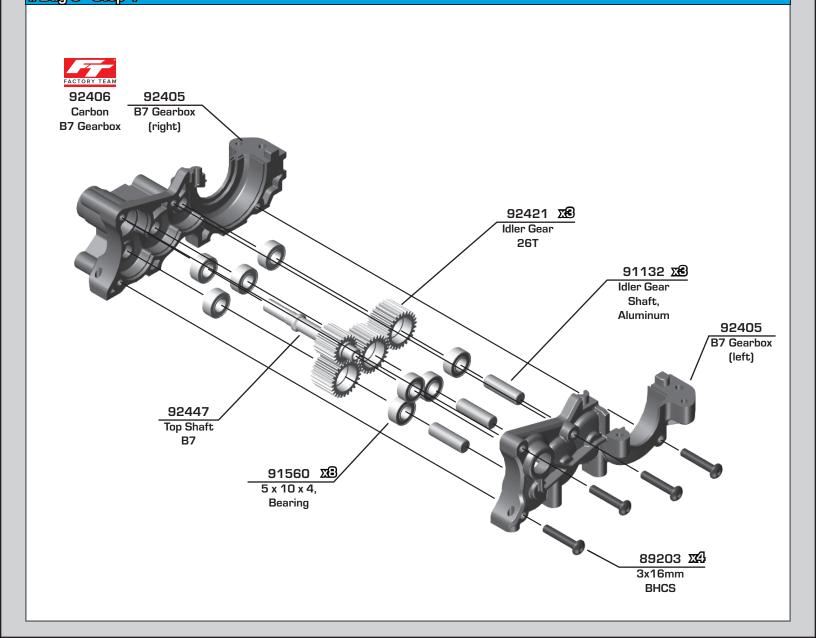

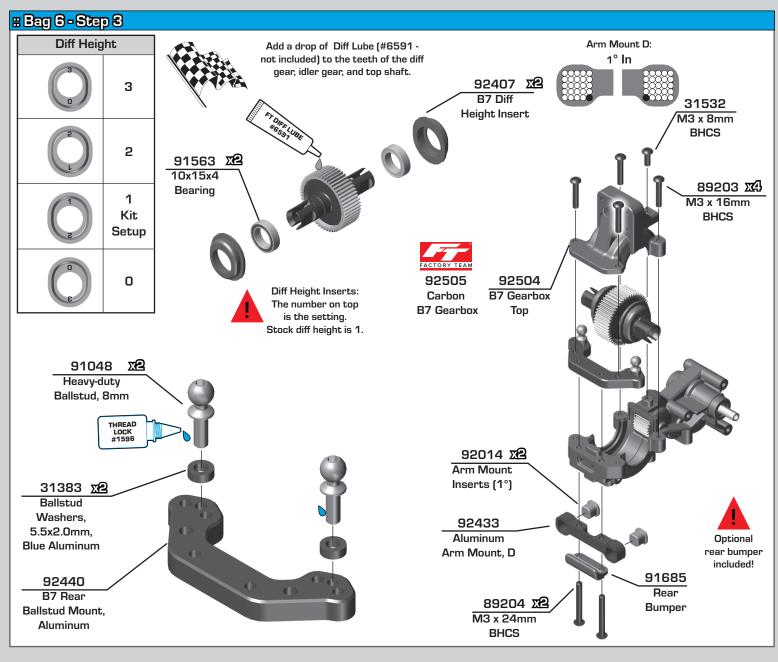

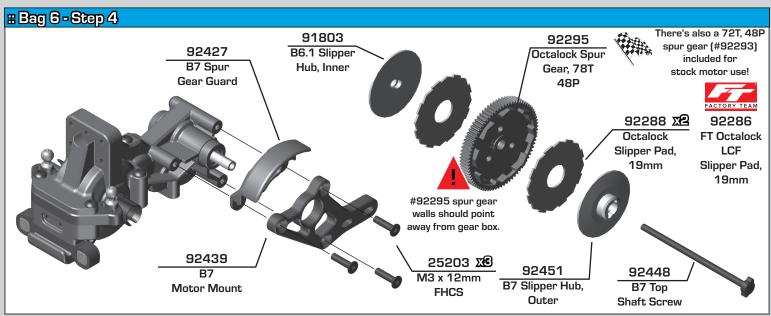

FIND IT ON ASSOCIATEDELECTRICS.COM

CARS & TRUCKS



Vehicle Spare Parts
GO TO:
AssociatedElectrics.com
Team Associated tab
Cars & Trucks
Scroll to your vehicle
Parts & Accessories link



Setups and Manuals
GO TO:
AssociatedElectrics.com
Team Associated tab
Manuals & Setups
Scroll to your vehicle



Tuning Guides & Tips
GO TO:
AssociatedElectrics.com
Support
A-Team Apps



Associated Electrics, Inc.
21062 Bake Parkway Lake Forest, CA 92630 USA

call: (949) 544-7500 - fax: (949) 544-7501
Check out the following web sites for all of our kits, current products, new releases, setup help, tips, and racing info!

www.AssociatedElectrics.com

FOLLOW US ON SOCIAL MEDIA



TeamAssociated ReedyPower ElementRC Factory Team



@TeamAssociatedRC
@ReedyPower

@Element_RC

@FactoryTeam_RC



@Team_Associated
@ReedyPower



@Associated Electrics