

# RC10B6.1DL TEAM KIT

1:10 Scale 2WD Electric Off Road Competition Buggy Kit Manual & Catalog

#90021L RC10B6.1DL Team Kit



**CHAMPIONS** *by* **DESIGN**  
AssociatedElectrics.com

# TEAM ASSOCIATED

## :: Introduction

Thank you for purchasing this Team Associated product. This assembly manual contains instructions and tips for building and maintaining your new vehicle. Please take a moment to read through the manual and familiarize yourself with the steps. We are continually changing and improving our designs; therefore, actual parts may appear slightly different than the illustrations. New parts will be noted on supplementary sheets located in the appropriate parts bags. Check each bag for these sheets before you start to build.

## :: RC10B6.1DL KIT Features

- Easy access ball differential
- Differential height adjustment with 0, 1, 2, & 3mm insert included
- New slipper assembly for better weight balance and shock clearance
- 3-gear Lay Down Stealth® transmission for lower and more rearward CG
- Heavy-duty V2 routed graphite front shock tower with tower guard
- Heavy-duty V2 routed graphite rear tower, LONG
- Heavy-duty V2 rear axle with 67mm bones
- V2 springs for a more reactive and nimble feel
- Innovative rear arm with molded inserts for ultra-fine lower shock mount adjustment
- Molded spur gear guard to help protect body from damage
- +1 steering block arms optimize feel on dirt tracks
- Battery strap allows the use of optional turnbuckle based braces
- Machined pistons included for better fit and smoother operation
- Aluminum rear clamping hex and front axle with laser etching
- Rear hubs feature large bearings and the easy-insert system to adjust camber link position and rear axle height
- One piece shock bushing to make assembly easier
- Aluminum C and D arm mount included for large range of anti-squat and toe adjustment
- Lightweight aluminum top shaft
- Factory Team upgraded ball bearing kit included (now oiled instead of greased for less drag)
- JConcepts B6 Light weight clear body and wing included

## :: Additional

Your new B6.1DL Team Kit comes unassembled and requires the following items for completion (refer to catalog section for suggestions):

- R/C two channel surface frequency radio system
- AA-size batteries for transmitter (#302 alkaline)
- Electronic Speed Control, ESC (#27002, 27003, 27004, 27005)
- Steering servo (#27106, #27107)
- R/C electric motor
- Pinion gear (48P), size determined by type/wind of motor
- Battery charger (a peak detection charger, or LiPo compatible charger)
- 2 cell LiPo battery pack (#27318, 27322, 27323, 27324)
- Polycarbonate specific spray paint

- Cyanoacrylate glue (CA)(#1597)
- Thread locking compound (#1596)
- Tires and Inserts, Fronts and Rears
- Wheels w/12mm Hex  
Front Wheels #9690, #9691, #91572, #91573  
Rear Wheels #9695, #9696, #91570, #91571

Tools included:

- Allen wrenches 1.5mm, 2.0mm
- #1113 12mm Shock Tool
- Multi-wrench

## :: Other Helpful Items


















- Silicone Shock Fluid (Refer to catalog for complete listings)
- Body Scissors (AE Part # 1737)
- FT Hex/Nut Wrenches (AE Part # 1519)
- Green Slime shock lube (AE Part # 1105)
- Soldering Iron
- Needle Nose Pliers
- FT Body Reamer (#1499)
- FT Ballcup Wrench (#1579)
- FT Dual Turnbuckle Wrench (#1114)
- Hobby Knife
- Shock Pliers (#1675)
- FT Universal Tire Balancer (#1498)
- Calipers or a Precision Ruler
- Wire Cutters

**Associated Electrics, Inc.**  
26021 Commercentre Dr.  
Lake Forest, CA 92630



**Customer Service**  
Tel: 949.544.7500  
Fax: 949.544.7501









**:: Hardware - 1:1 Scale View****Button Head (bhcs)**

	<b>2x4mm (31510)</b> <b>Aluminum (8545)</b>
	<b>2.5x6mm (31520)</b>
	<b>2.5x8mm (31521)</b>
	<b>2.5x10mm (31522)</b>
	<b>3x4mm (91158)</b>
	<b>3x5mm (31530)</b>
	<b>3x6mm (31531)</b> <b>Aluminum (8550)</b> <b>Titanium (91580)</b>
	<b>3x8mm (31532)</b> <b>Aluminum (8552)</b> <b>Titanium (91581)</b>
	<b>3x10mm (25211)</b> <b>Aluminum (8554)</b> <b>Titanium (91582)</b>
	<b>3x12mm (89202)</b> <b>Titanium (91583)</b>
	<b>3x14mm (25187)</b> <b>Titanium (91584)</b>
	<b>3x16mm (89203)</b> <b>Titanium (91585)</b>
	<b>3x18mm (2308)</b>
	<b>3x20mm (25188)</b> <b>Titanium (91587)</b>
	<b>3x22mm (25189)</b> <b>Titanium (91588)</b>
	<b>3x24mm (89204)</b> <b>Titanium (91589)</b>
	<b>3x30mm (91478)</b>




**Cap Head (shcs)**

	<b>1.6 x 5mm (91611)</b>
--	--------------------------





**Flat Head (fhcs)**

	<b>2x3mm (91743)</b>
	<b>2.5x8mm (31448)</b>
	<b>3x8mm (25201)</b> <b>Aluminum (8553)</b> <b>Titanium (91592)</b>
	<b>3x10mm (25202)</b> <b>Aluminum (8555)</b> <b>Titanium (91593)</b>
	<b>3x12mm (25203)</b> <b>Aluminum (8556)</b> <b>Titanium (91594)</b>
	<b>3x14mm (89208)</b> <b>Aluminum (8567)</b> <b>Titanium (91595)</b>
	<b>3x16mm (25204)</b> <b>Titanium (91596)</b>
	<b>3x18mm (89209)</b> <b>Titanium (91597)</b>

**Set Screws**

	<b>3x2.5mm (31500)</b>
	<b>3x3mm (25225)</b>
	<b>3x10mm (4671)</b>






**Shims and Washers**

	<b>5.5x0.5mm (31381)</b>
	<b>5.5x1.0mm (31382)</b>
	<b>5.5x2.0mm (31383)</b>
	<b>3x8mm Washer (89218)</b>














**Diff Balls**

	<b>5/64 Diff Thrust Balls (6574)</b>
	<b>3/32 Carbide Diff Balls (6581)</b>
	<b>3/32 Ceramic Diff Balls (6584)</b>





**Ball Bearings**

	<b>3x7x3mm (91475)</b>
	<b>5x8x2.5mm (31400)</b>
	<b>5x10x4mm (91560)</b>
	<b>6x13x5 (91562)</b>
	<b>10x15x4 (91563)</b>

**Ballstuds**

	<b>Silver 5mm long (31283)</b>
	<b>Ti Nitride 5mm long (31291)</b>
	<b>Silver 8mm long (31284)</b>
	<b>Ti Nitride 8mm long (31292)</b>
	<b>HD 6mm (91047)</b>
	<b>Ti Nitride HD 6mm (91118)</b>
	<b>Ti HD 6mm (91751)</b>
	<b>HD 8mm (91048)</b>
	<b>Ti Nitride HD 8mm (91119)</b>
	<b>Ti HD 8mm (91752)</b>
	<b>HD 10mm (91049)</b>
	<b>Ti Nitride HD 10mm (91120)</b>
	<b>Ti HD 10mm (91753)</b>

**Nuts (lock/plain)**

	<b>M3 Nut (91477)</b>
	<b>M3 Alum. Locknut, Blue (31550)</b>
	<b>M3 Locknut, Black (25215)</b>
	<b>M3 Locknut w/Flange (25612)</b>
	<b>FT 3mm Locknuts, Blue(25392)</b>
	<b>M4 Locknuts:</b>
	<b>Serrated Steel (Silver)(91826)</b>
	<b>Flanged (Black) (91148)</b>
	<b>FT Aluminum (Blue) (31551)</b>
	<b>Serrated Aluminum (Black) (91738)</b>

**Notes:**

## :: Table of Contents

1..... Cover	13 - 14.....Bag 7
2..... Introduction	14 - 15.....Bag 8
3.....1:1 Hardware "Fold Out"	15 - 16.....Bag 9
4..... Table of Contents	17 - 19.....Bag 10
5.....Bag 1	19 - 21..... Tuning Tips
5 - 8.....Bag 2	22 - 30.....Catalog
8 - 9.....Bag 3	31..... Notes / Contact Info
9 - 10.....Bag 4	32..... Setup Sheet "Kit Setup"
10 - 11.....Bag 5	33..... Setup Sheet "Blank"
11 - 13.....Bag 6	34..... Back Cover

## :: Notes



***This symbol indicates a special note or instruction in the manual.***



***This symbol indicates a Racers Tip.***



***There is a 1:1 hardware foldout page in the front of the manual. To check the size of a part, line up your hardware with the correct drawing until you find the exact size. Each part in the foldout has a number assigned to it for ordering replacement parts.***

**Associated Electrics, Inc.  
26021 Commercentre Dr.  
Lake Forest, CA 92630**



**Customer Service  
Tel: 949.544.7500  
Fax: 949.544.7501**



## :: Bag 1 - Step 1

**31382**   
**FT Ballstud  
Washer,  
Aluminum  
(1mm)**

  
Note orientation  
of steering rack.



**91475**   
**3 x 7 x 3  
Ball Bearing**

**91667**  
**Steering  
Rack**

**91048**   
**Heavy-duty  
Ballstud,  
8mm**


**31382**   
**FT Ballstud  
Washer,  
Aluminum  
(1mm)**


**91667**  
**Steering  
Bellcrank  
(Right)**

**91475**   
**3 x 7 x 3  
Ball Bearing**

**91667**  
**Steering  
Bellcrank  
(Left)**

## :: Bag 1 - Step 2

  
The steering  
bellcrank brace  
has offsets on one  
side. They should be  
installed towards  
the bearings.

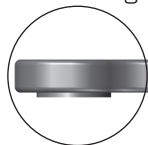

**91678**   
**M3 x 20mm  
BHCS  
Shouldered**

**91667**  
**Steering  
Bellcrank  
Brace**

**31283**  
**5mm Ball  
Stud, Long**

**91049**   
**Heavy-duty  
Ballstud,  
10mm**

**89202**   
**M3 x 12mm  
BHCS**

**31382**   
**FT Ballstud  
Washer,  
Aluminum  
(1mm)**

**91766**  
**Front  
Ball Stud  
Mount**



Do not overtighten steering bolts. Make sure  
there is free movement in the steering rack.

## :: Bag 2 - Step 1


**91656**  
**Bulkhead**

**91765**  
**Chassis,  
B6.1**

**25204**   
**M3 x 16mm  
FHCS**



There are two bulkhead settings  
(25°, 30°). 25° is the standard used.  
The arrow should point  
forward for the desired setting.

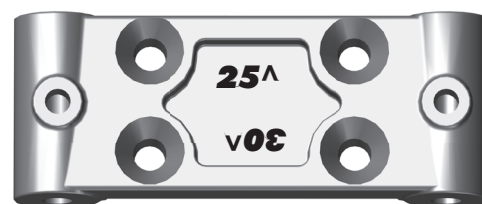

## :: Bag 2 - Step 2

**91652**  
**Side Rails**  
(L & R)

**91734**  
**Battery**  
**Foam, B6**



#91734 - Battery Foam  
There are two thickness options to accommodate any battery size.

**25202 x4**  
**M3 x 10mm**  
**FHCS**

**25201 x3**  
**M3 x 8mm**  
**FHCS**

## :: Bag 2 - Step 3

**91820 x2**  
**Steering**  
**Link, B6.1**

**31382**  
**FT Ballstud**  
**Washer, aluminum**  
(1mm)

**4671**  
**M3x10mm**  
**Set Screw**



Tighten the steering link ball cups all the way until snug.

**31284**  
**8mm Ball**  
**Stud, Long**

**31532**  
**M3 x 8mm**  
**BHCS**

**91728**  
**Servo**  
**Horn**

**91728**  
**Servo Horn**  
**Ring**

Servo not included!


## :: Bag 2 - Step 4

**A - Airtronics**  
**F - Futaba**  
**H - Hitec**  
**J - JR**

Printed here



Align the servo horn 90 degrees

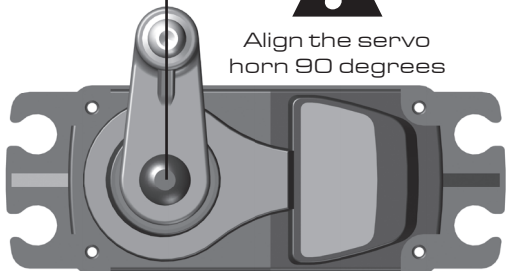

**91719 x2**  
**Servo**  
**Mount**

**91728 x2**  
**Servo**  
**Spacers**



**31532 x4**  
**M3 x 8mm**  
**BHCS**

**89218 x4**  
**M3 x 8mm**  
**Washer**






#91728 - Servo Spacers are not required for all servos.




## :: Bag 2 - Step 5


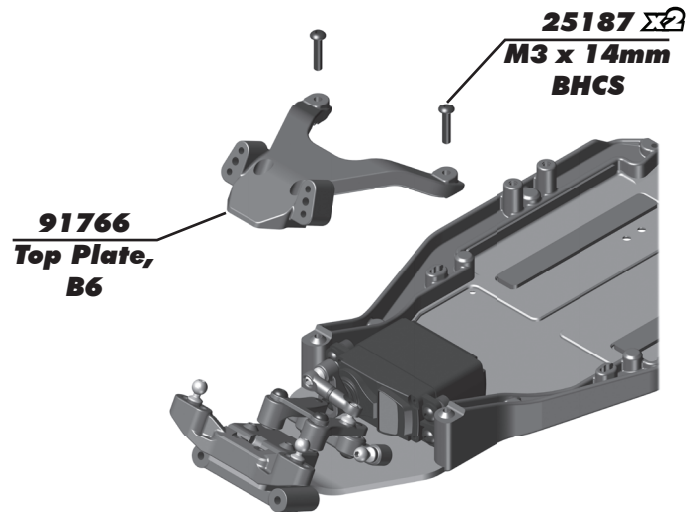
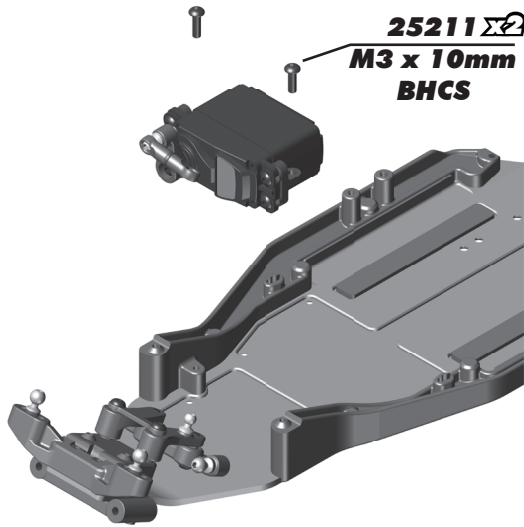


## :: Bag 2 - Step 6

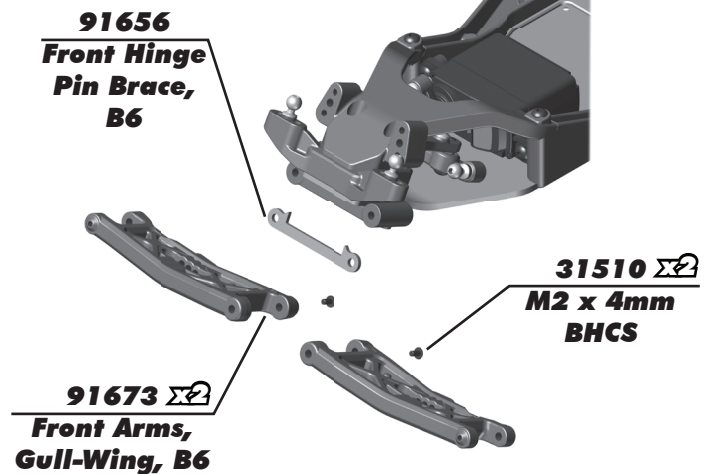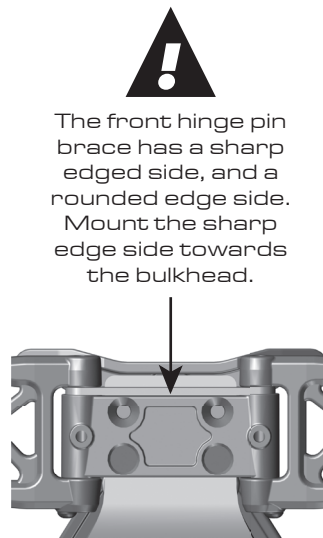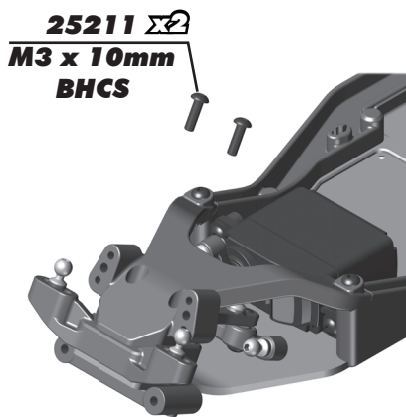

## :: Bag 2 - Step 7

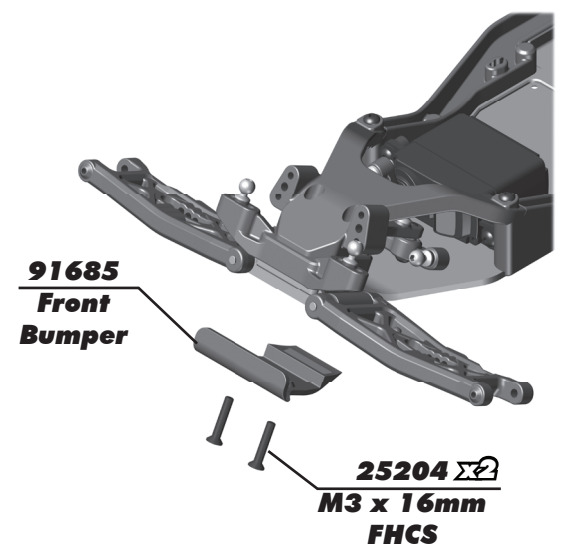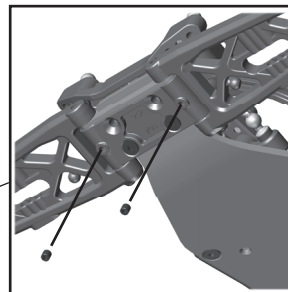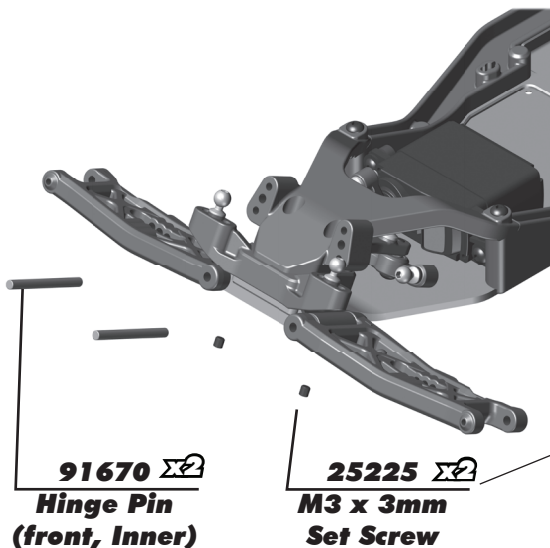


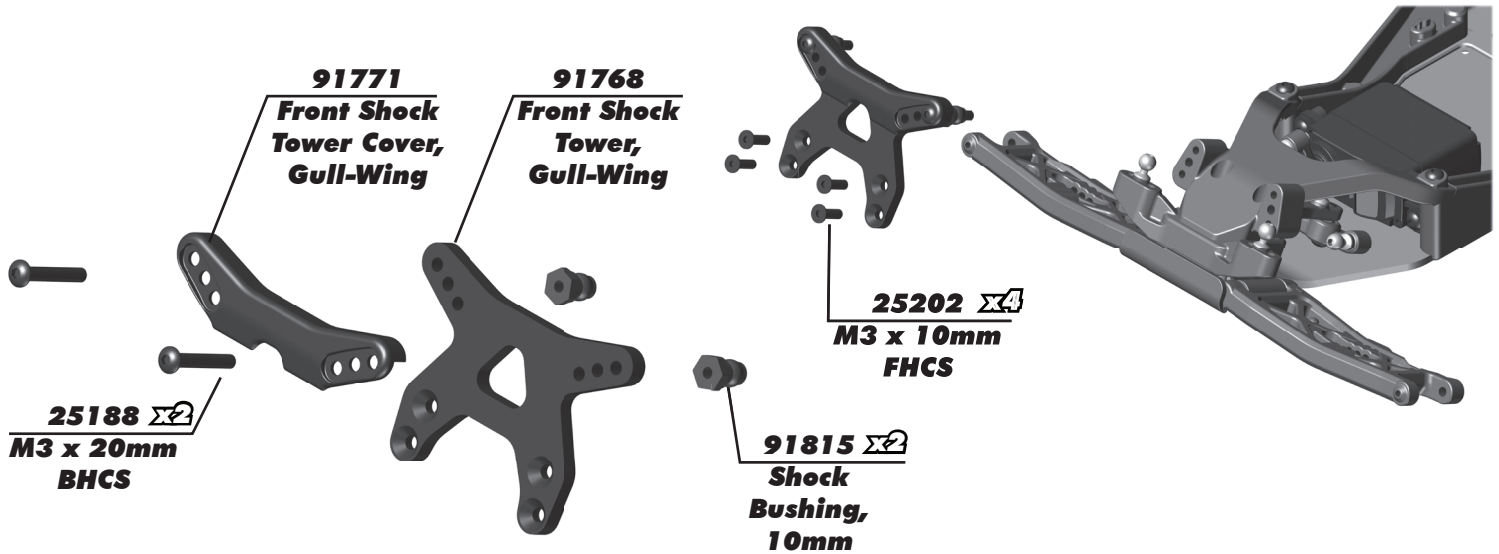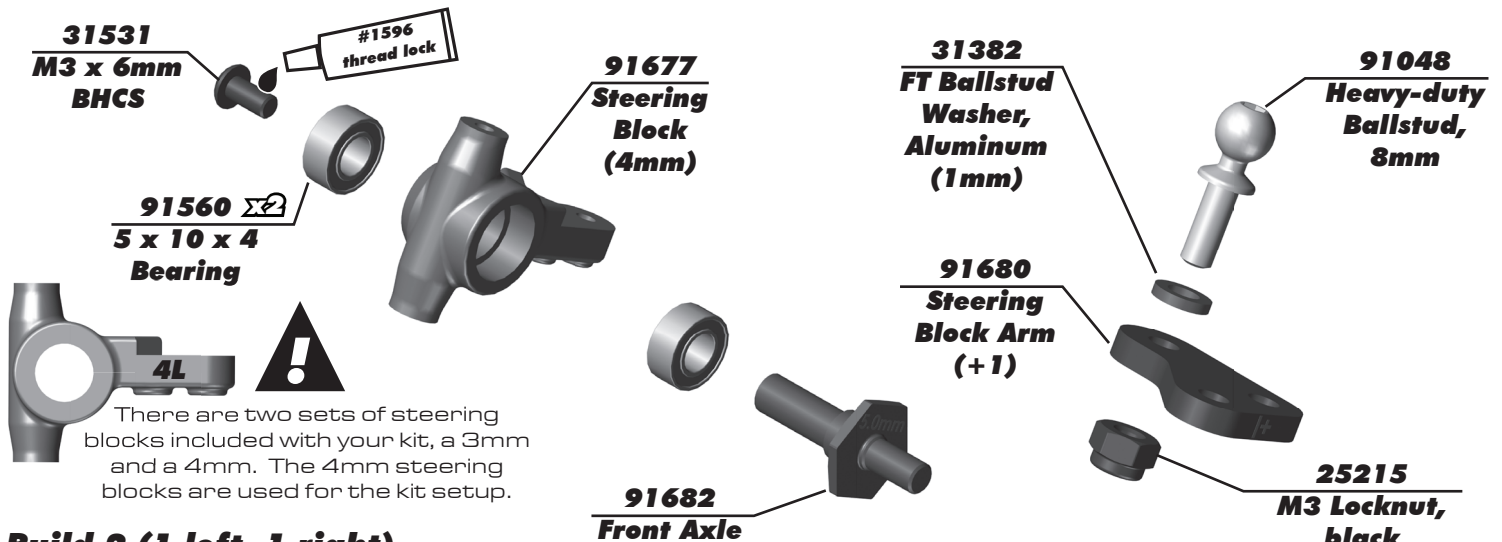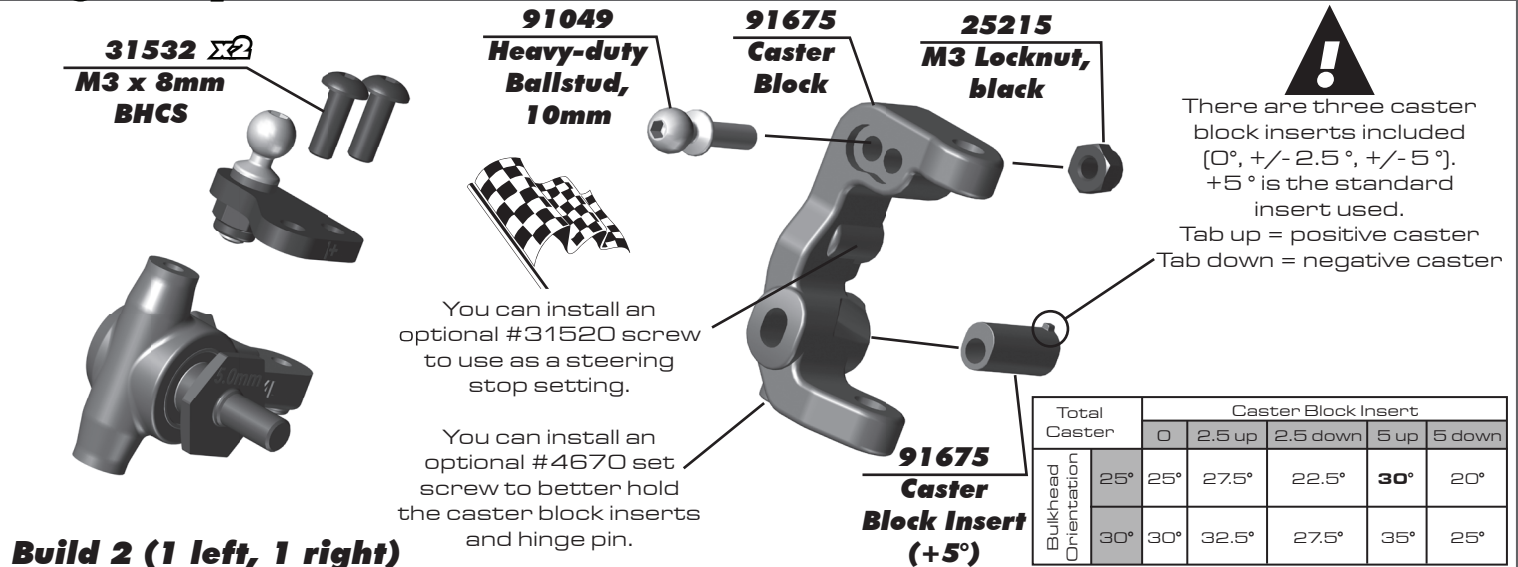**:: Bag 2 - Step 8****:: Bag 3 - Step 1****:: Bag 3 - Step 2**




### :: Bag 3 - Step 3

**25187**  $\Sigma 2$   
M3 x 14mm  
BHCS

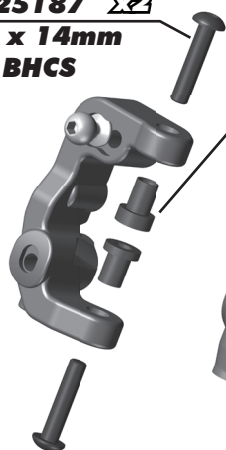

**91676**  $\Sigma 2$   
Caster Hat  
Bushing  
Top: 2mm  
Bottom: 1mm

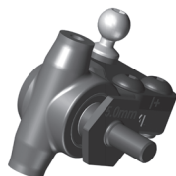


#91670 - Hinge Pin will be tight in the caster blocks, but should rotate freely in the front arms.

**91675**  
Caster Block  
Spacer

**91670**  $\Sigma 2$   
Hinge Pin  
(front, Outer)

**31510**  
M2 x 4mm  
BHCS

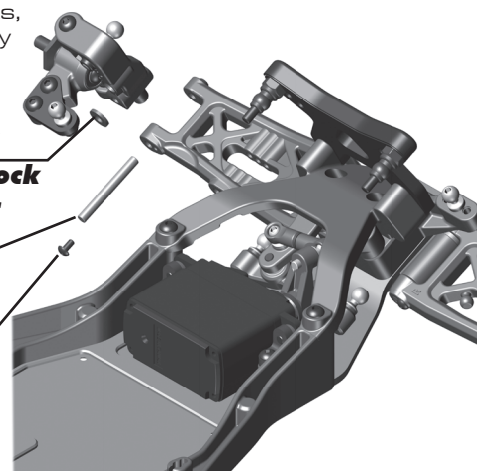


**Build 2 (1 left, 1 right)**


**Build 2 (1 left, 1 right)**

### :: Bag 4 - Step 1



**91777**  $\Sigma 2$   
Rear  
Arms (L&R)

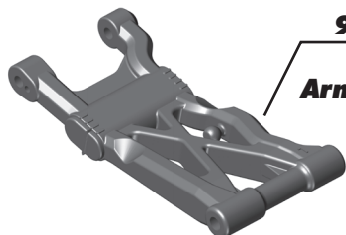

**91777**  $\Sigma 2$   
Rear Arm  
Threaded  
Insert

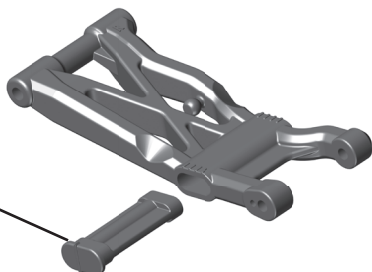


Install the rear arm threaded insert in the same position for the left and right side arms!

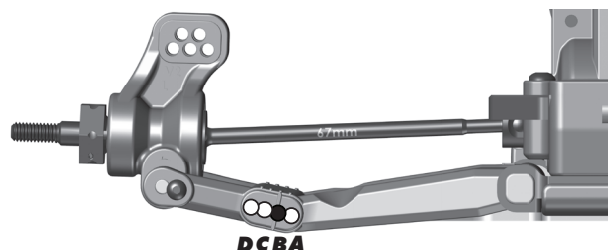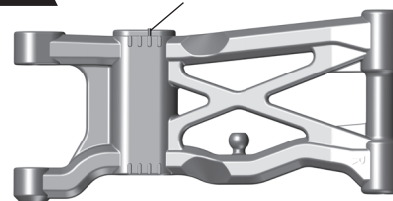

### :: Bag 4 - Step 2

**91772**  
Aluminum  
Arm Mount,  
C

**92014**  $\Sigma 2$   
Arm Mount  
Inserts  
(up, 0.5°)

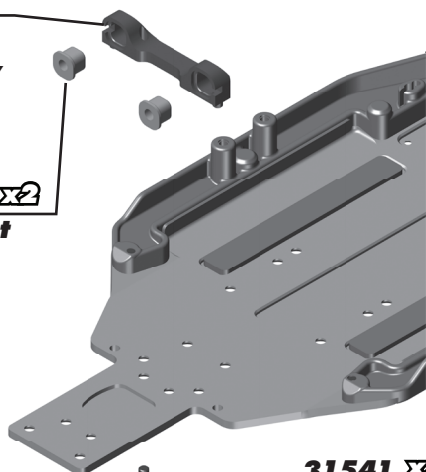

**31541**  $\Sigma 2$   
M3 x 6mm  
FHCS




See page 10 for  
pill chart tips

**92014**  $\Sigma 2$   
Arm Mount  
Inserts  
(up, 0.5°)



**91685**  
Rear  
Bumper

Center 0.5° Up

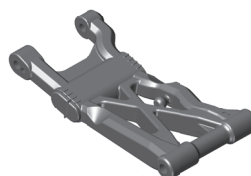

**91688**  
Aluminum  
Arm Mount, D

**91670**  
Hinge Pin  
(rear, Inner)

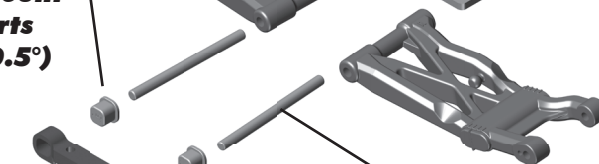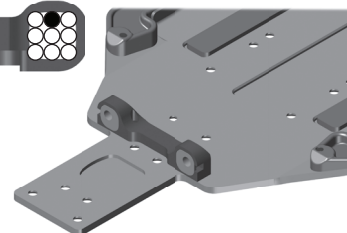



**:: Bag 4 - Step 3**



The (#91772) C and (#91688) D aluminum arm mounts allow for a large amount of setup combinations when using the (#92014) 0.5° and 1° arm mount inserts.

For a complete list of pill setup combinations, please visit our website by using the link or QR code below.


[https://www.teamassociated.com/pdf/cars\\_and\\_trucks/RC10B6/B6\\_B6D\\_Pill-Chart.pdf](https://www.teamassociated.com/pdf/cars_and_trucks/RC10B6/B6_B6D_Pill-Chart.pdf)




	Toe-In	Anti-Squat
<b>C Plate</b> Center 0.5° Up <b>D Plate</b> Center 0.5° Up	3° Kit Setup	1° Kit Setup
<b>Commonly used setups</b>		
<b>C Plate</b> Center <b>D Plate</b> Center	3°	1°
<b>C Plate</b> 1° Up <b>D Plate</b> Center	3°	2°

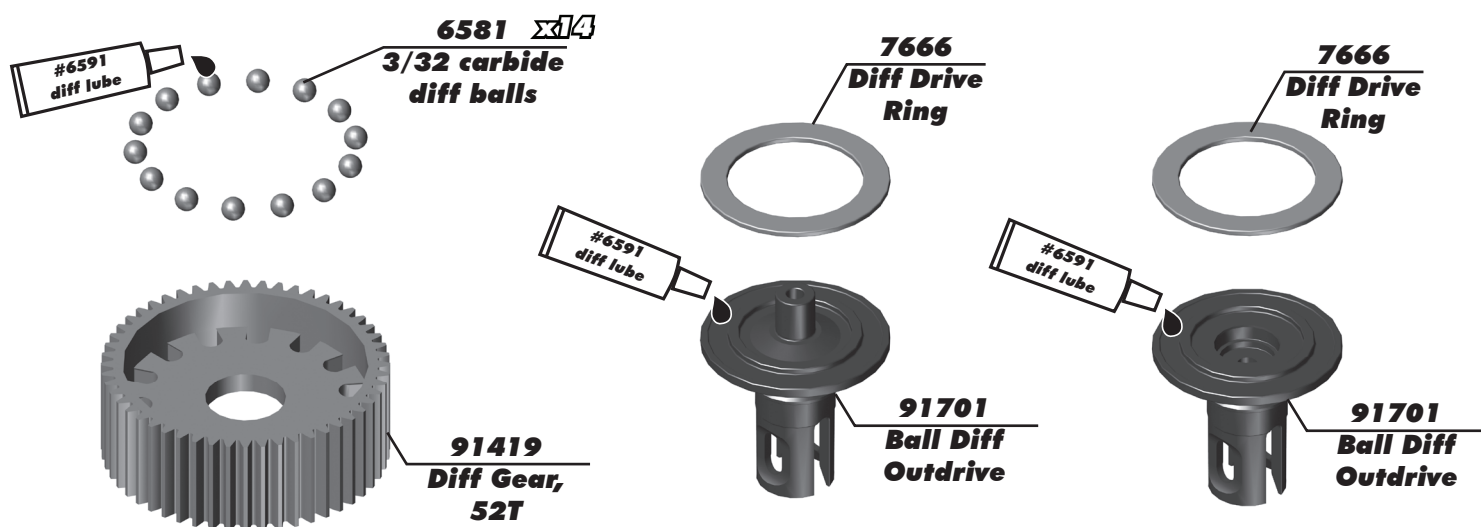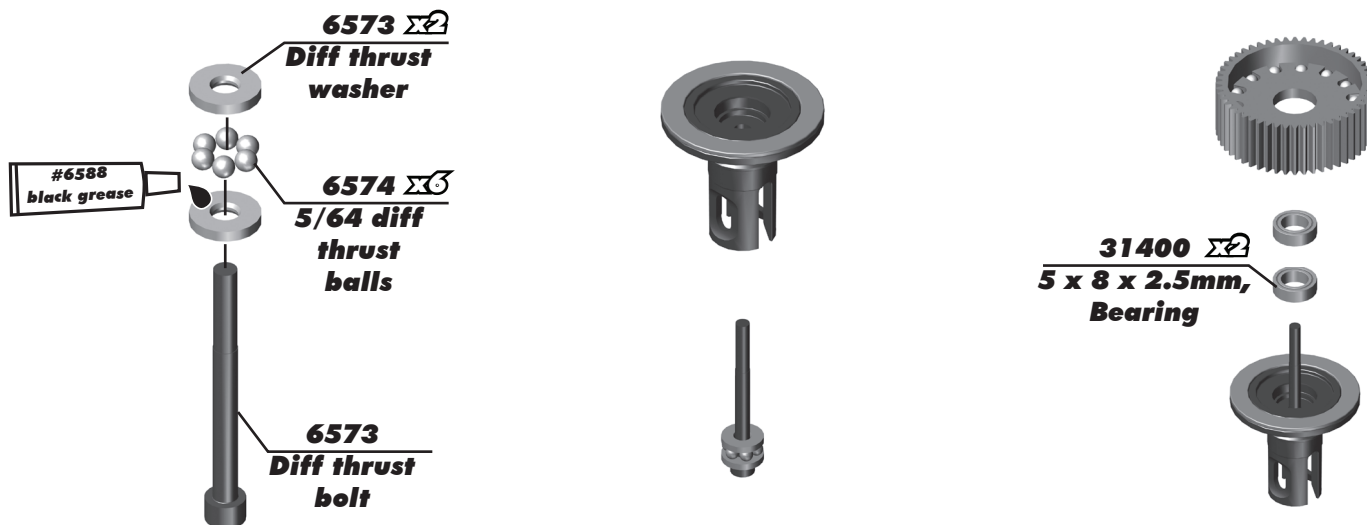**:: Bag 5 - Step 1****:: Bag 5 - Step 2**


## :: Bag 5 - Step 3

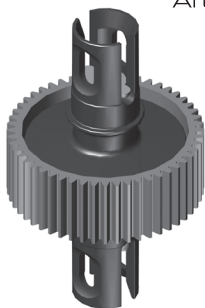


As you tighten the diff bolt, you will notice the T-nut ears moving closer to the bottom of the outdrive slot. This compresses the spring behind the T-nut. The spring should be completely compressed at the time the T-nut reaches the end of the slot. Caution! Pay close attention to the feeling when the spring is completely compressed. Do not overtighten the bolt. When you feel the spring completely compressed, loosen the diff bolt 1/8" of a turn. Your diff should now operate smoothly but with resistance as the outdrives move in opposite directions. After you have driven the car once, re-check the diff setting.

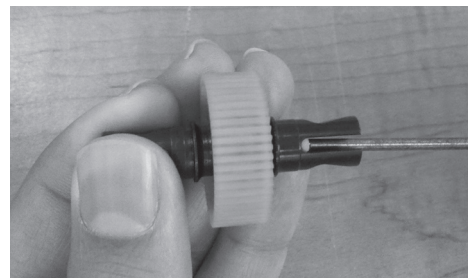

## :: Bag 6 - Step 1

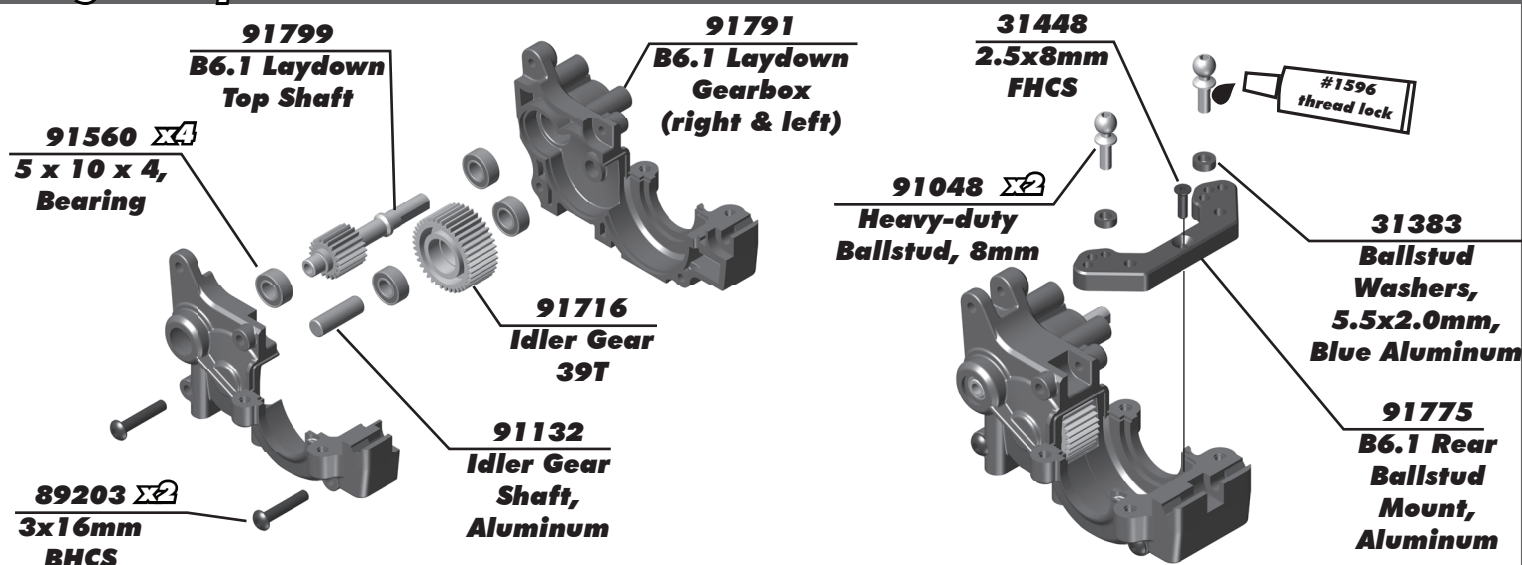





## :: Bag 6 - Step 2



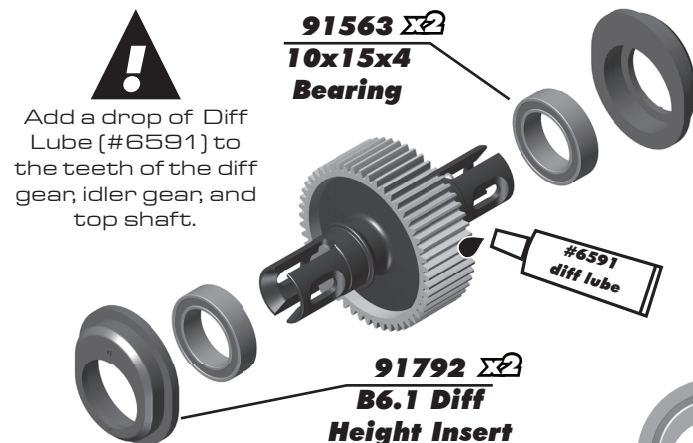


Add a drop of Diff Lube (#6591) to the teeth of the diff gear, idler gear, and top shaft.


Diff Height Inserts: The number on top is the setting. Stock diff height is 0.

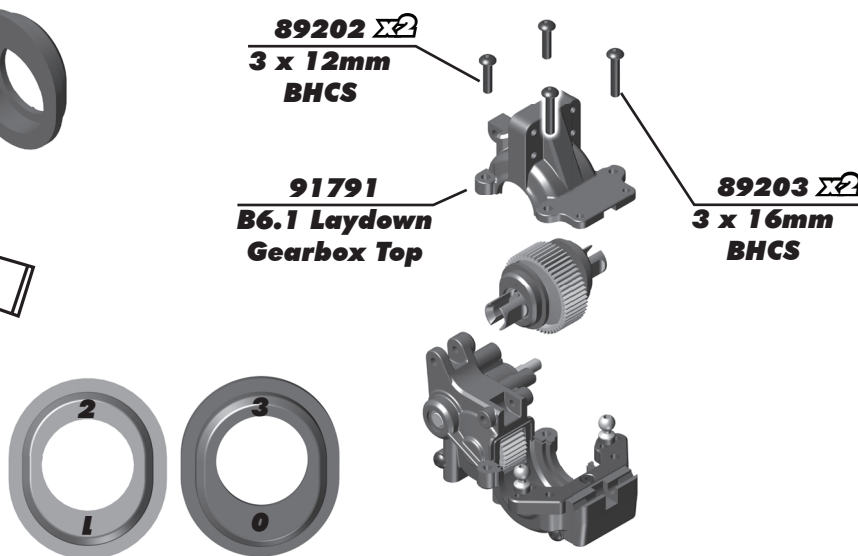

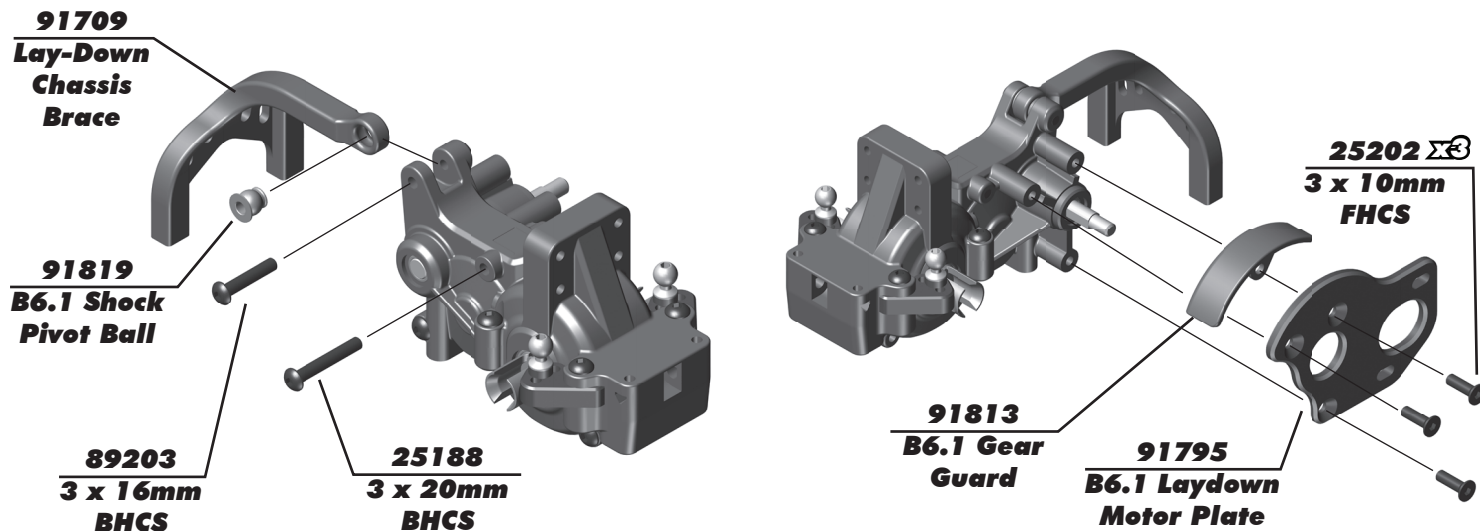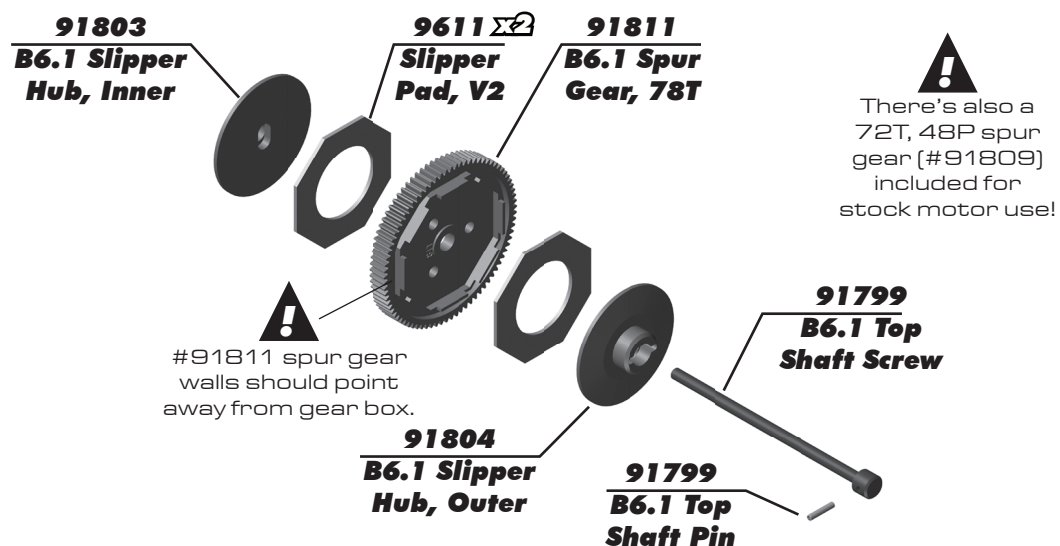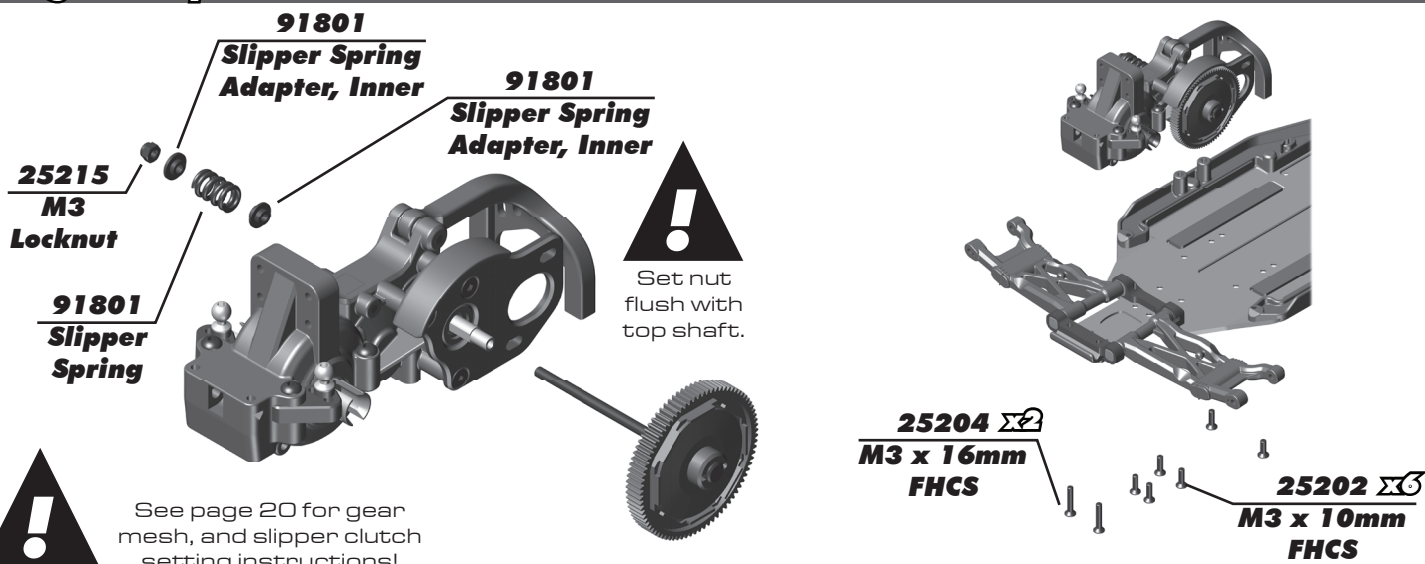
**:: Bag 6 - Step 3****:: Bag 6 - Step 4****:: Bag 6 - Step 5**

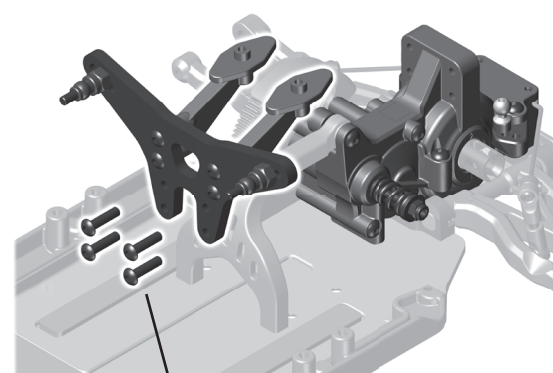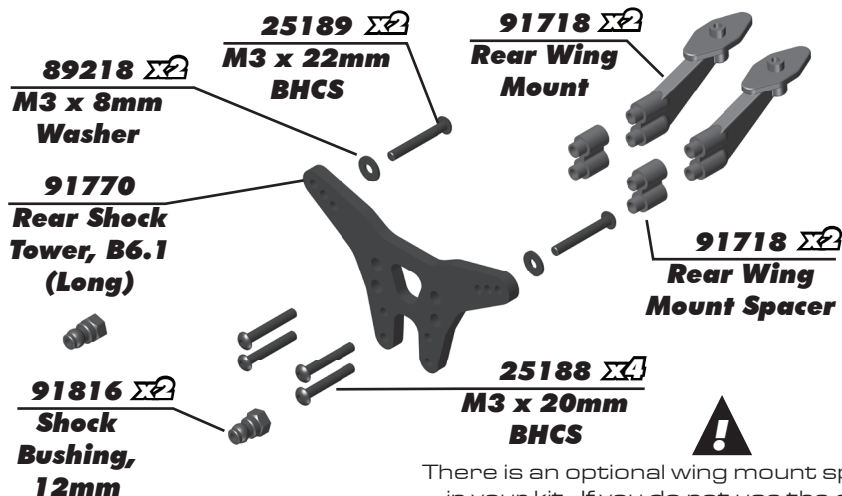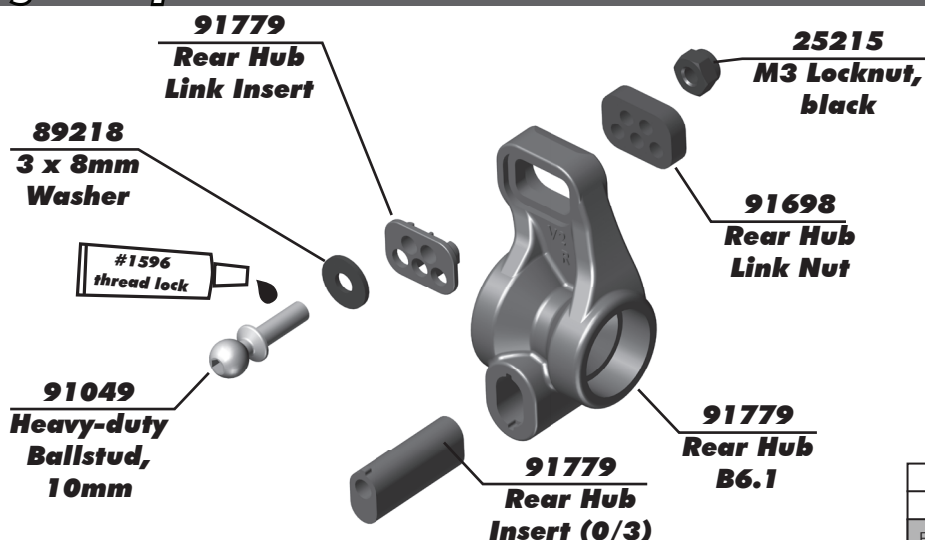**:: Bag 6 - Step 6****:: Bag 7 - Step 1****Rear Hub Link Setting (Right Side Shown):****Up****Down****Build x2 (right and left side)****Kit Setup: Tab up (0mm)**




Insert	0/3 up	0/3 down	1/2 up	1/2 down
Axle Height	0 (low)	+ 3mm	+ 1mm	+ 2mm
Recommended Ballstud location				

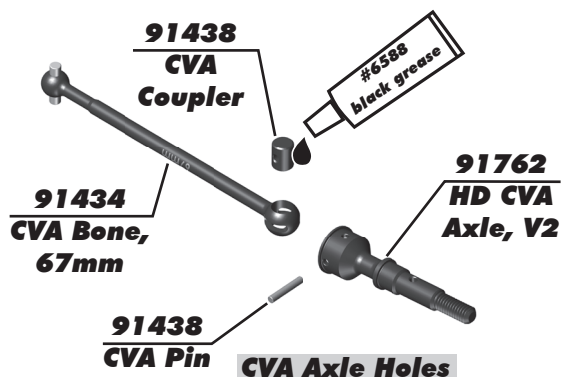**:: Bag 7 - Step 2**

There are two hole locations on the #91762 CVA axle. One is used for the included 67mm CVA bones, and one for the optional 65mm CVA bones. Use the inner hole for the included 67mm CVA bones.

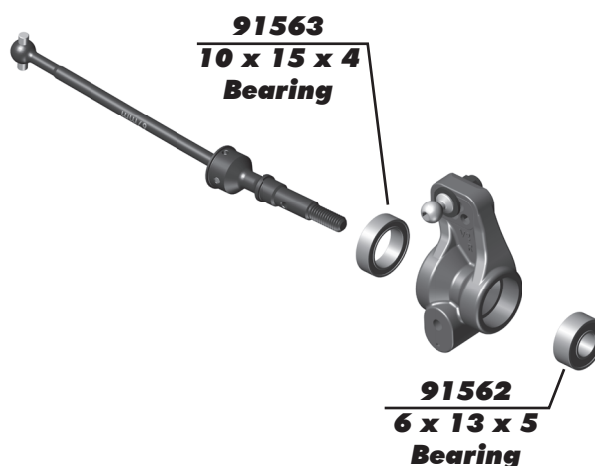

**67mm hole location****65mm hole location****Build x2 (right and left side)**

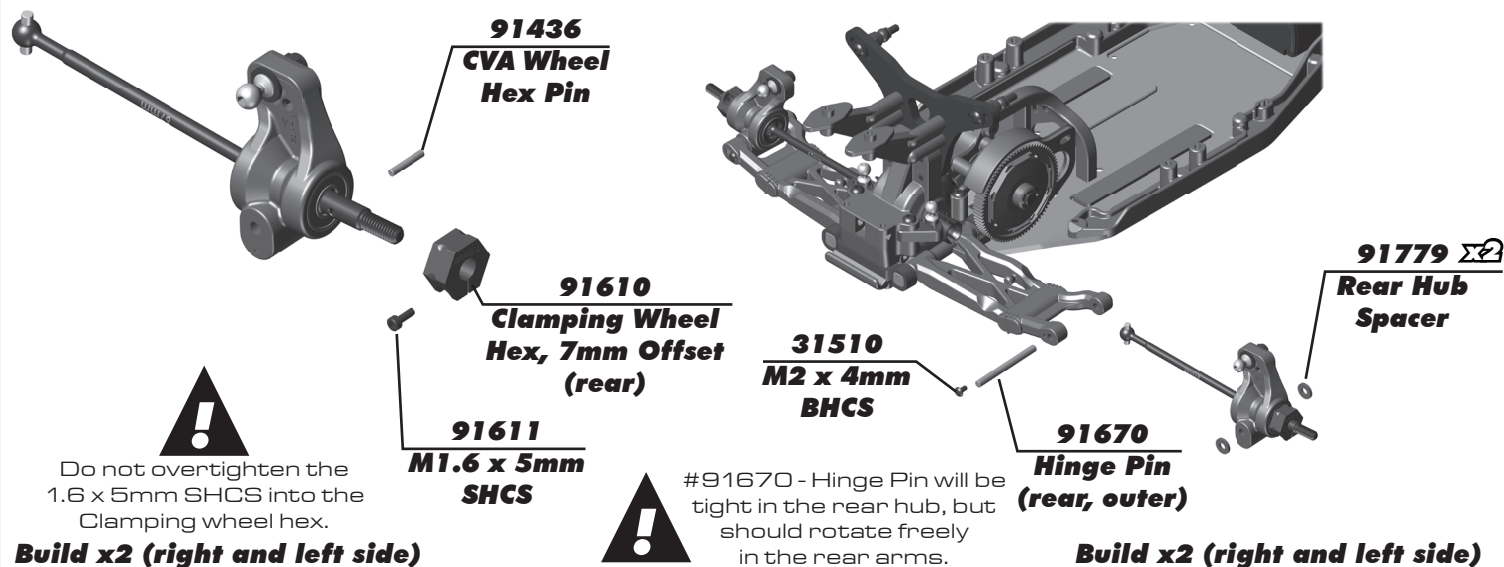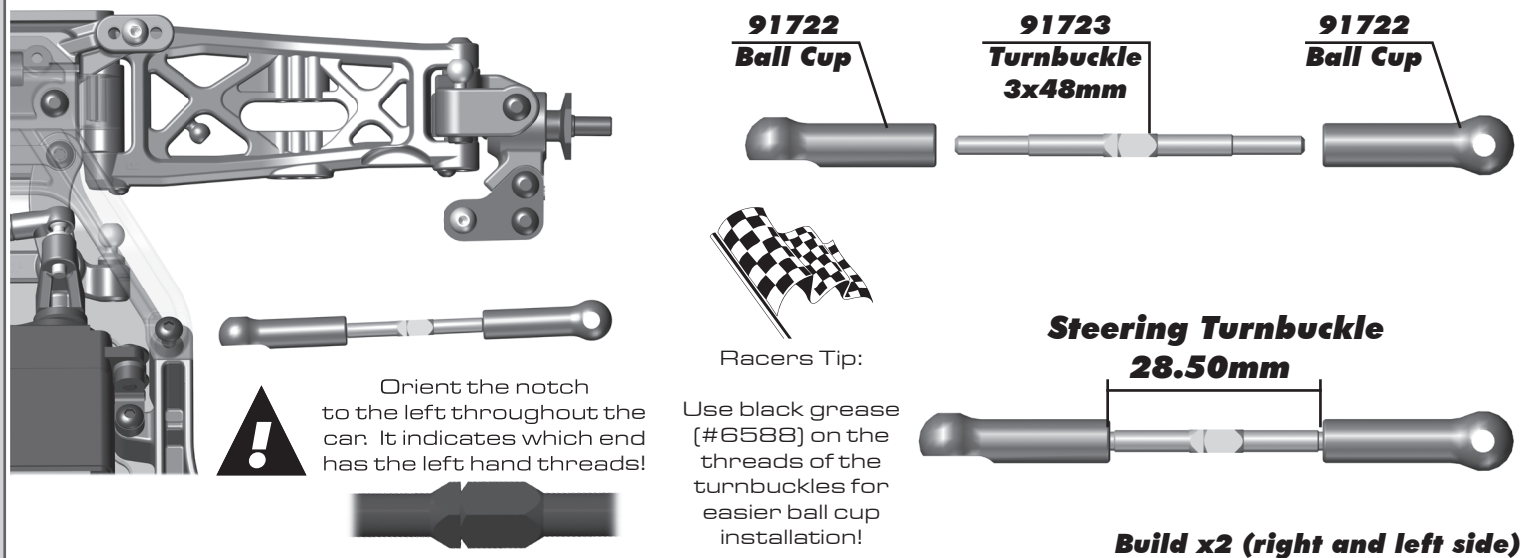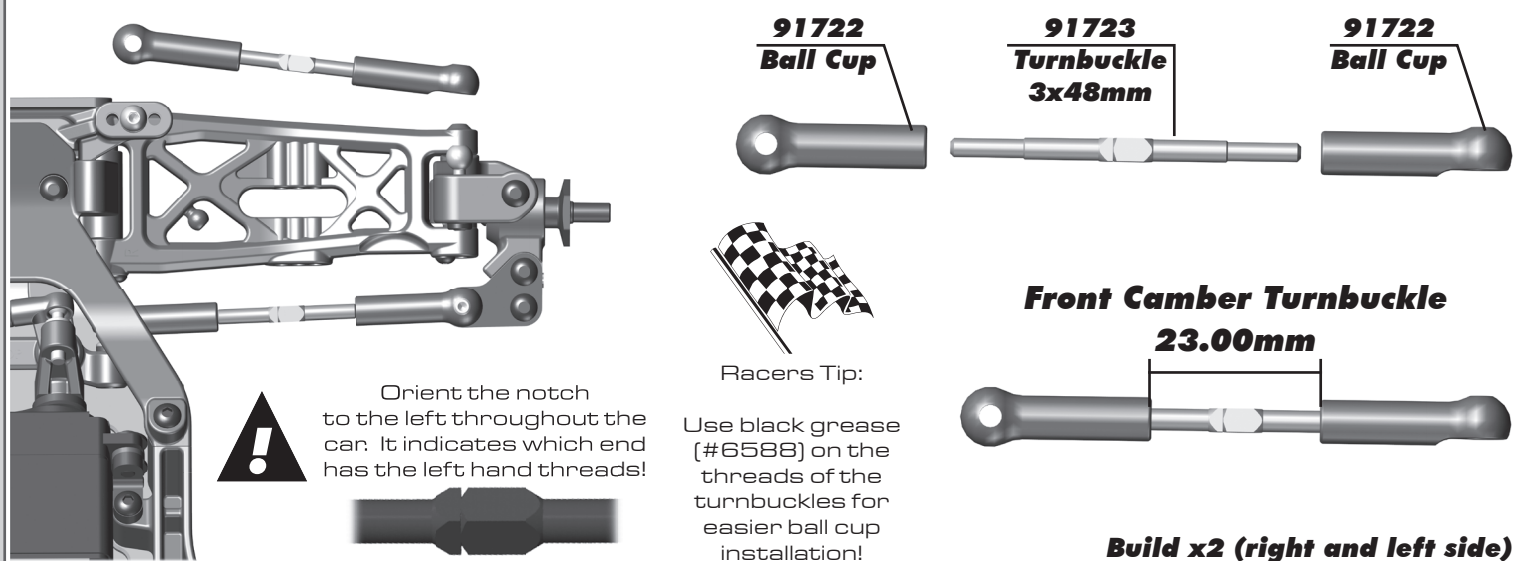

**:: Bag 7 - Step 3****:: Bag 8 - Step 1****:: Bag 8 - Step 2**




**:: Bag 8 - Step 3**

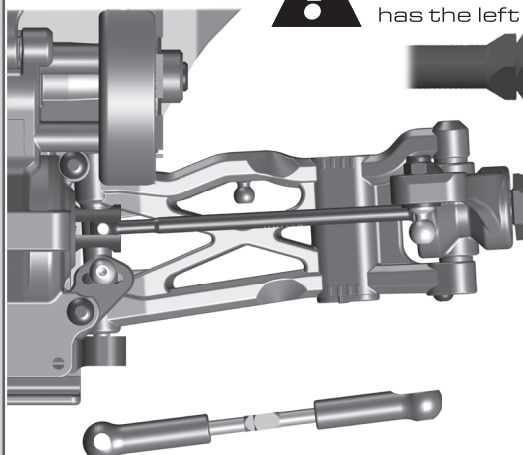

 Orient the notch to the left throughout the car. It indicates which end has the left hand threads!

**91722 Ball Cup**
**91723 Turnbuckle 3x48mm**
**91722 Ball Cup**

**Rear Camber Turnbuckle 23.75mm**

**Build x2 (right and left side)**



**Racers Tip:**  
 Use black grease (#6588) on the threads of the turnbuckles for easier ball cup installation!


**:: Bag 9 - Step 1**

**91626 FT 12mm V2 Shock Piston, 2x1.6 flat (front)**
**31510 M2 x 4mm BHCS**

**91627 FT 12mm V2 Shock Piston, 2x1.7 flat (rear)**
**89278 2.5mm Washer**

**91615 V2 3 x 21 Shock Shaft TiN (front)**
**91619 V2 3 x 27.5 Shock Shaft TiN (rear)**


 Mount the shock pistons with the number facing up!


**Racers Tip:**  
 Use a marker over the numbers on the pistons to make them easily visible!


**4187 Nylon Spacer, (.030)**  
**Front: 2 spacers**  
**Rear: 1 spacers**


**:: Bag 9 - Step 2**


**91480 12x23mm V2 Shock Bodies (front)**
**91491 12mm Shock Cap O-Ring**

**91482 12x31mm V2 Shock Bodies (rear)**
**31327 VCS3 Shock Bottom Cap O-Ring**

**91493 X2 X-Ring**
**91495 V2 Shock Spacer**
**91495 V2 Shock Hat Bushing**


 Lightly rub shock oil on the o-ring before installation!


**Racers Tip:**  
 Coating the o-rings with green slime (#1105) helps seal & reduce o-ring swell! **Green slime not included in kit!**


 There is a short and long shock eyelet. Front and rear shocks use the long eyelet.

**91820 Shock Eyelet**  
**Front Shocks - Long**  
**Rear Shocks - Short**

**91819 Shock Pivot Ball**

**Short / Long**

**:: Bag 9 - Step 3**

**Front Shock: 30 wt #5422**  
**Rear Shock: 30 wt #5422**

**Steps 2-3**   **Steps 4-5**   **Steps 6-7**   **Step 8**

**91814 12mm Shock Cap**

**Shock Bleeding Steps:**

1. Before assembly, get each bleed screw and thread it 1-2 turns into the shock cap, then remove the screw. This will make it easier when you are bleeding your shocks.
2. Pull shock shaft down.
3. Fill shock body 3/4 full with silicone shock fluid.
4. Slowly move the shock shaft up and down to remove air from under the piston.
5. Wait for bubbles to come to surface.
6. Fill shock body to top with silicone shock fluid.
7. Place a drop of oil in the cap and on cap threads.
8. Install cap (without bleed screw) and tighten completely.
9. Slowly compress shaft all the way to bleed excess silicone shock fluid out the hole in the cap [use rag around shock to catch excess fluid].
10. Install M2x4mm button head screw until snug while shaft is fully compressed.

**91492 M2 x 4mm BHCS**

**Stroke**

**Stroke Front: 20.5mm**  
**Rear: 28mm**

**Steps 9-10**

**:: Bag 9 - Step 4**

**91304 x4 12mm Threaded Collar O-ring**

**91304 x4 12mm Threaded Collar**

**Racers Tip:**  
Use your finger to rub shock oil on the o-ring for smoother adjustment!

**91831 12mm Front Spring, White (3.40lb)**

**91838 12mm Rear Spring, White (1.91lb)**

**#91310 12mm Shock Spring Cups**  
**0mm   5mm   9mm**

**91814 12mm shock spring cup (Front - 5mm, Rear - 5mm)**

**Front: 3.00mm**  
**Rear: 9.00mm**

**Build x2 front and x2 rear shocks**

**:: Bag 9 - Step 5**

**!**  
Use outside hole in front arm!

**25188 M3 x 20mm BHCS**

**25612 M3 Locknut w/Flange**


**25612 M3 Locknut w/Flange**

**25187 M3 x 14mm BHCS**


**Build x2 (right and left side)**

**Build x2 (right and left side)**


## :: Bag 10 - Step 1

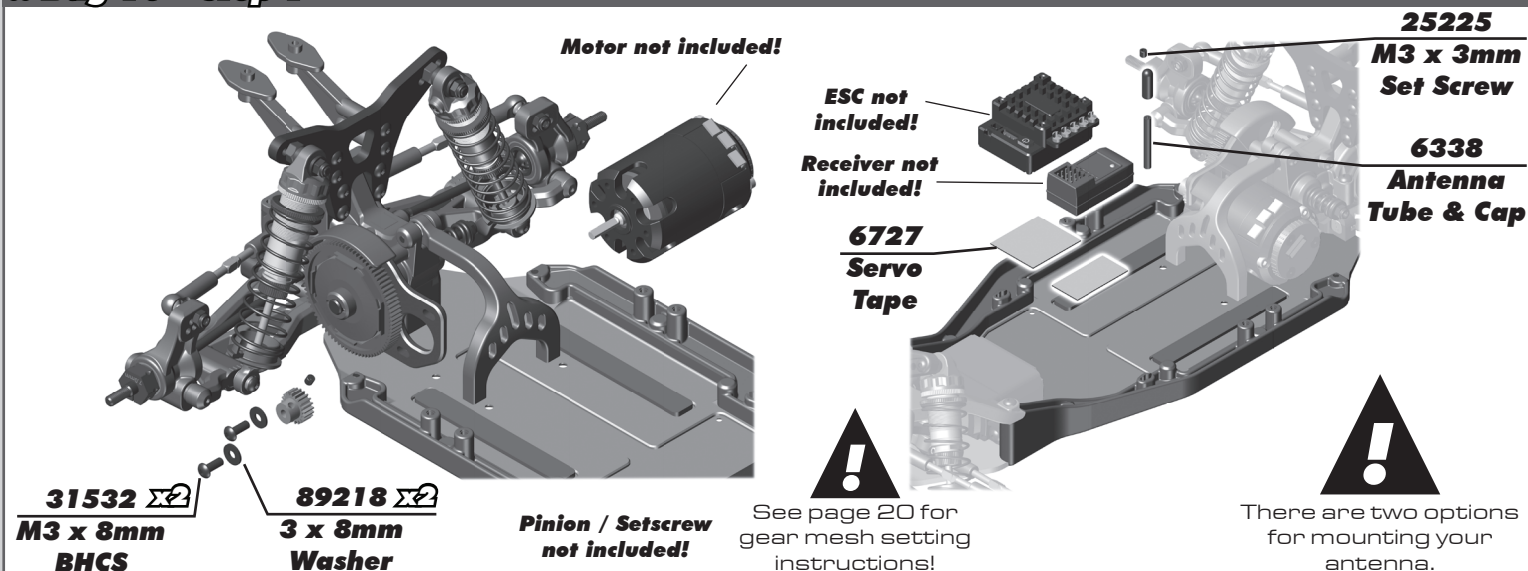


## :: Bag 10 - Step 2

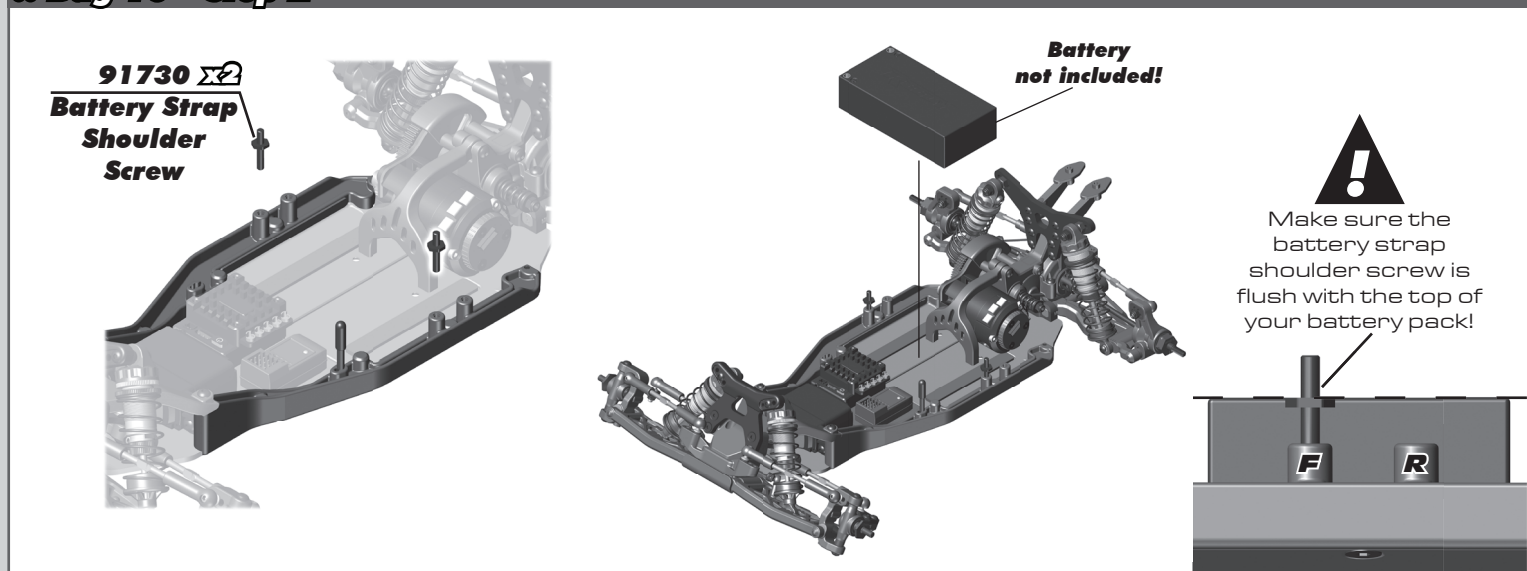

## :: Bag 10 - Step 3

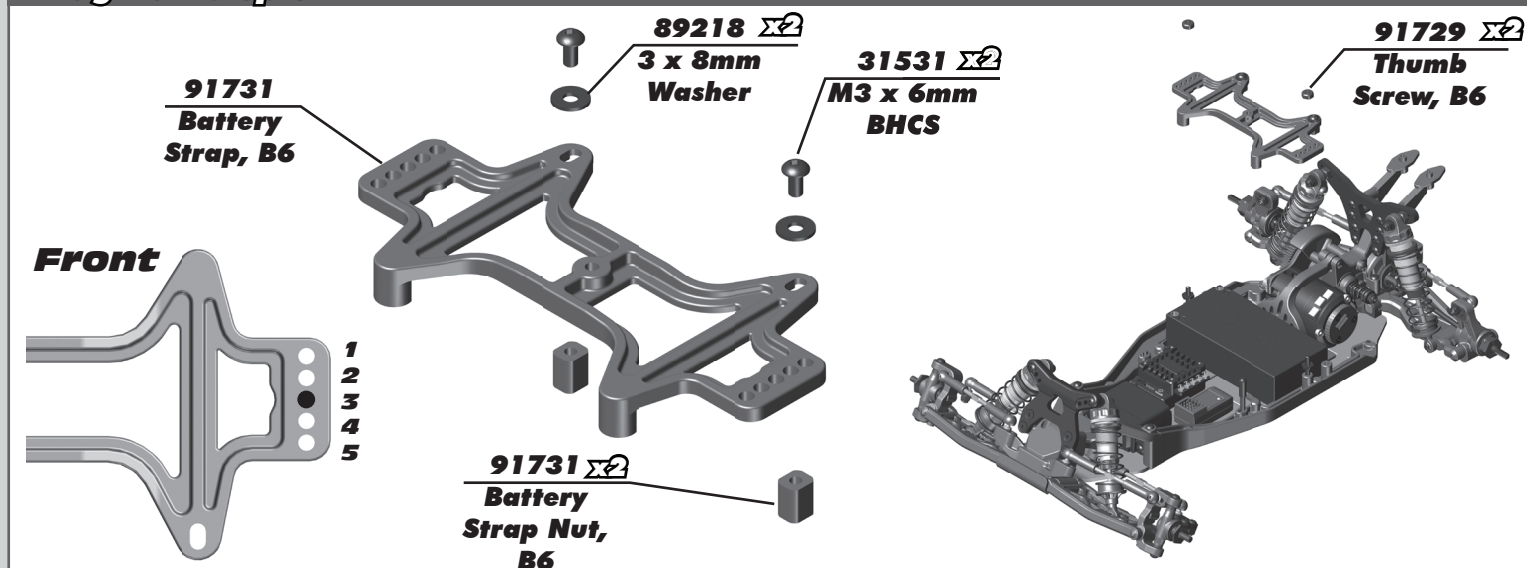

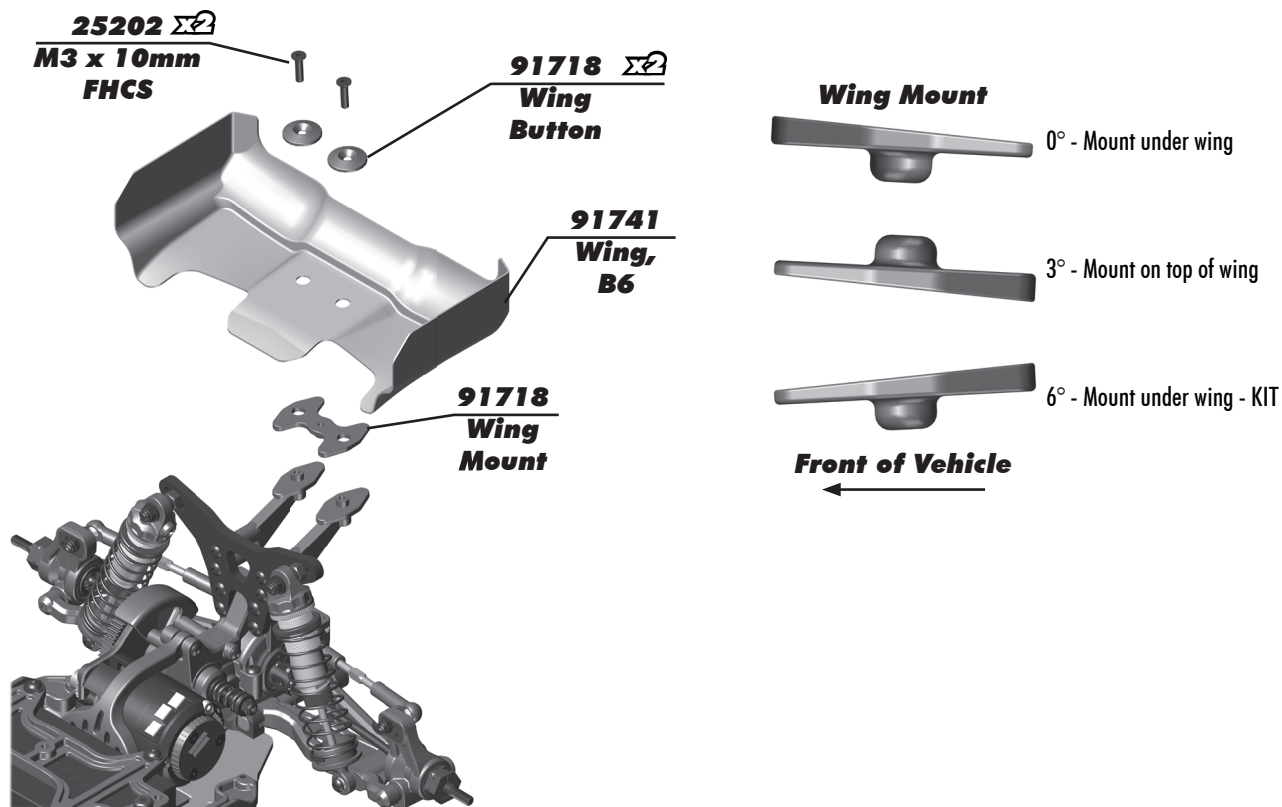**:: Bag 10 - Step 4****Body Trimming / Mounting:**

There are 3 body trimming options depending on what transmission and shock position you choose to run.



Laydown (Pic 1): Laydown Transmission.

- Cut Line A is for shocks mounted in front of arm.
- Cut line B is for shocks mounted in rear of arm.



Layback (Pic 2): Layback Transmission.

- Cut Line A is for shocks mounted in front of arm.
- Cut line B is for shocks mounted in rear of arm.

Standup (Pic 3): 3 Gear Stand Up Transmission.

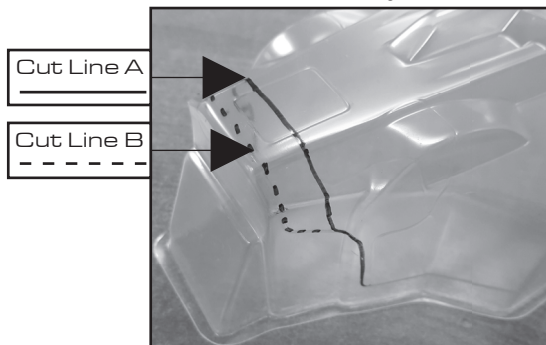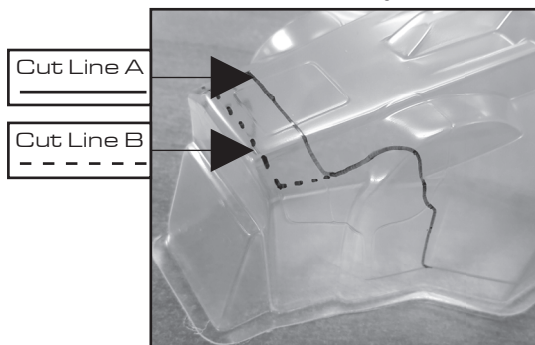**Pic 1:****Pic 2:****Pic 3:**

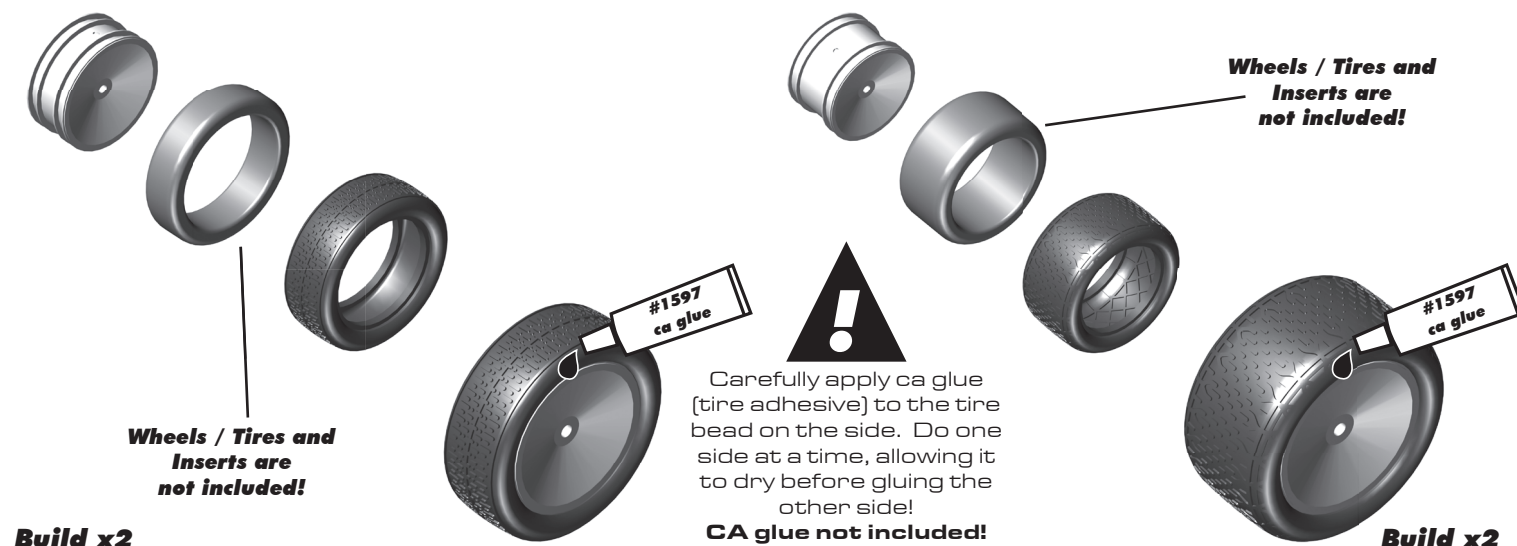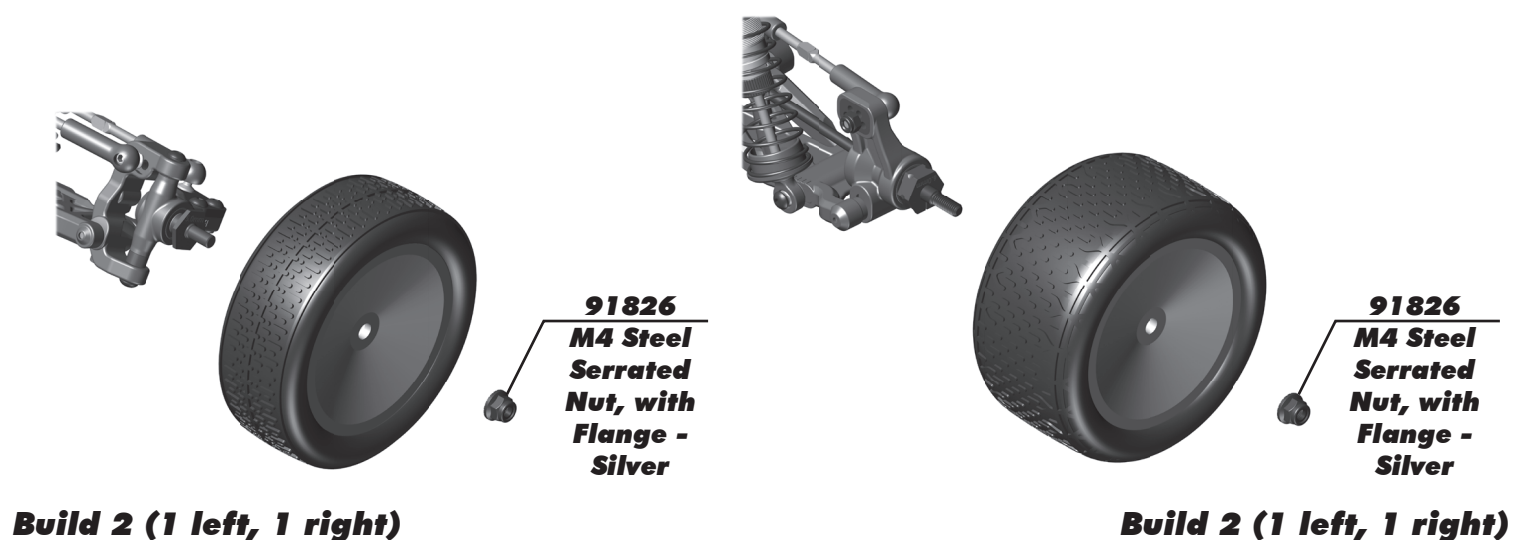

**:: Bag 10 - Step 5****:: Bag 10 - Step 6****:: Tuning Tips****Painting:**

Your Kit comes with a clear polycarbonate body. You will need to prep the body before you can paint it. Wash the INSIDE thoroughly with warm water and liquid detergent (do not use any detergents with scents or added hand lotion ingredients!). Dry the body using a clean, soft, lint-free cloth. Use the supplied window masks to cover the windows from the INSIDE of the body (RC cars get painted on the inside). Using high quality masking tape, apply tape to the inside of the body to create a design. Spray (use either rattle can or airbrush) the paint on the inside of the body (preferably dark colors first, lighter colors last). NOTE: ONLY use paint that is recommended for (polycarbonate) plastics. If you do not, you can destroy the body! After the paint has completely dried (usually after 24 hours), cut the body along the trim lines. Make sure to drill or use a body reamer to make the holes for the antenna if needed! Use hook and loop tape to secure the body to the side rails of the vehicle.

**Tips for Beginners:**

Before making any changes to the standard setup, make sure you can get around the track without crashing. Changes to your vehicle will not be beneficial if you can't stay on the track. Your goal is consistent laps. Once you can get around the track consistently, start tuning your vehicle. Make only ONE adjustment at a time, testing it before making another change. If the result of your adjustment is a faster lap, mark the change on the included setup sheet (make additional copies of the sheet before writing on it). If your adjustment results in a slower lap, revert back to the previous setup and try another change. When you are satisfied with your vehicle, fill in the setup sheet thoroughly and file it away. Use this as a guide for future track days or conditions. Periodically check all moving suspension parts. Suspension components must be kept clean and move freely without binding to prevent poor and/or inconsistent handling.



## :: Tuning Tips (cont.)


### Motor Gearing:

Proper motor gearing will result in maximum performance and run time while reducing the chance of overheating and premature motor failure. The gear ratio chart lists recommended **starting gear ratios** for the most widely used motor types. Gear ratios will vary depending upon motor brand, wind, and electronic speed control. Consult your motor and electronic speed control manufacturers for more information.

Team Associated is not responsible for motor damage due to improper gearing.

#### B6 Gear Ratio Chart (Internal Gear Ratio 2.60:1)

Motor	Pinion	Spur	Final Drive Ratio
17.5 Reedy S-Plus Brushless	29	72	6.45:1
13.5 Reedy S-Plus Brushless	27	75	7.22:1
10.5 Reedy 540-M3 Brushless	24	78	8.45:1
9.5 Reedy 540-M3 Brushless	23	78	8.82:1
8.5 Reedy 540-M3 Brushless	22	78	9.22:1
7.5 Reedy 540-M3 Brushless	21	78	9.65:1
6.5 Reedy 540-M3 Brushless	20	78	10.14:1

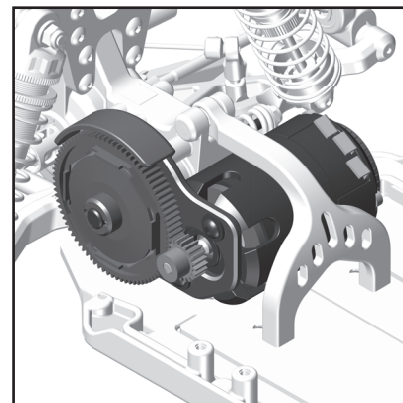

### Set The Gear Mesh:

You should be able to rock the spur gear back and forth in the teeth of the pinion gear without making the pinion gear move. If the spur gear mesh is tight, then loosen the #31532 screws and move the motor away, then try again. A gear mesh that is too tight or too loose will reduce power and damage the gear teeth.

### Diff Height Adjustment:

The diff height adjustment is a good way to tune the car for grip level. On high grip with low ride heights, a higher diff height will be a good option. On lower grip with higher ride heights, a lower diff height will be better.

### Gear Box Type:

Selecting the correct gear box is dependent on the type of track it will be used on. The optional 4 gear stand-up gear box is for the lowest grip conditions. This gear box moves the weight towards the rear of the car and also uses the rotation of the motor to transfer weight to the rear while on-power. The 3 gear stand-up gear box also moves the weight towards the rear of the car, but in this configuration, the motor's rotation helps with on-power steering. The lay-down gear box is used on high grip conditions when on-power steering and stability are most important. This gear box will change directions the quickest and generate the most steering. Layback is used for most indoor clay track conditions.

### Slipper Clutch:

The assembly instructions give you a base setting for your clutch. Turn the nut on the shaft so that the end of the top shaft is even with the outside of the nut. At the track, tighten or loosen the nut in 1/8 turn increments until you hear a faint slipping sound for 1-2 feet on takeoffs. Another popular way to set the clutch is to hold both rear tires firmly in place and apply short bursts of throttle. If the clutch is properly set, the front tires should lift slightly up off the surface.


### Caster:

Caster describes the angle of the caster block as it leans toward the rear of the vehicle. Positive caster means the kingpin leans rearward at the top. The kit includes three inserts to adjust caster angle at the caster block, 0°, 2.5°, and +5°. The total caster angle is the sum of the kick-up angle and the caster block angle. Standard total caster angle for the B6 is 30°, with 25° kick-up and +5° caster block angle.

For less entry steering and more exit steering, try 0° caster block angle.

### Front Camber:

Camber describes the angle at which the tire and wheel rides when looked at from the front. Negative camber means that the tire leans inward at the top. A good starting camber setting is -1°. Positive camber, where the top of the tire is leaning out, is not recommended. Optional #1719 camber gauge can be used to more accurately set camber.

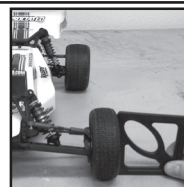

\*Testing camber with camber gauge


### Rear Camber:

Camber describes the angle at which the tire and wheel rides when looked at from the back. Negative camber means that the tire leans inward at the top. A good starting camber setting is -1°. Adding a small amount of positive camber, where the top of the tire is leaning out, will tend to improve straight-line acceleration on loose tracks. Optional #1719 camber gauge can be used to more accurately set camber.

## :: Tuning Tips

### Front Camber Links:


Changing the length of the camber link is considered a bigger step than adjusting the ball end height on the tower. Shortening the camber link (or lowering the ball end) will give the front end less roll and quicken steering response. Lengthening the camber link (or raising the ball end) will give the front more roll and slower steering response. Longer camber links are typically used on high grip tracks and shorter links tend to work better on medium-grip loose tracks.

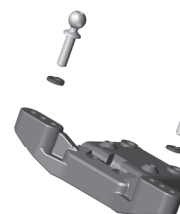

\*Raise or lower the ball end by adding or removing washers here

### Rear Camber Link:

Changing the length of the camber link is considered a bigger step than adjusting the ball end height on the rear chassis brace. Shortening the camber link (or lowering the ball end) will give the rear end less roll and the car will tend to accelerate or "square up" better. Lengthening the camber link (or raising the ball end) will give the rear more roll and more cornering grip. Longer camber links are typically used on high grip tracks, while shorter links tend to work better on medium grip loose tracks. The kit setting is the best compromise of cornering grip and acceleration.

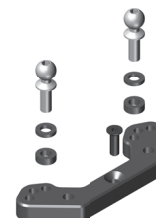

\*Raise or lower the ball end by adding or removing washers here

### Ackermann:

Ackermann is the angle difference between the front wheels when they are turned to steer the car. For minimal tire slip, it is standard for the inside wheel to steer to a greater angle than the outside wheel. The kit allows Ackermann adjustments by changing the washer thickness used behind the steering rack ballstuds. The kit setup uses 2mm washers and is most common for racing conditions. If corner entry steering is too aggressive, try increasing the Ackermann by removing shims from behind the steering rack ballstuds. Increasing the Ackermann will increase the angle difference of the front wheels when steered, resulting in a more stable car on corner entry.

### Kickup:

Kickup is the angle the front suspension arm mounts at where the front of the arm is higher than the rear. The standard kickup angle for the B6 is 25°, and is most common. If more corner entry steering is desired, try the included 30° front bulkhead.

### Axle Height:

Axle height is used to keep roll centers similar when large ride height changes are made. As a rule of thumb, high axle heights are used for lower ride heights (< 20mm) and low axle heights are used for higher (> 22mm) ride heights. The idea is to keep the arms close to level at ride height.

### Ride Height:

Ride height is the distance from the ground to the bottom of the chassis. The standard front ride height setting is 19mm (Ride Height Gauge # 1449). Check the front ride height by lifting up the entire car about 8-12 inches off the bench and dropping it. After the suspension "settles" into place, measure ride height (Ride Height Gauge # 1449). Raise or lower the shock collars as necessary.

The rear ride height setting you should use most often is 19mm (Ride Height Gauge # 1449). Check the rear ride height by lifting up the entire car about 8-12 inches off the bench and drop it. After the suspension "settles" into place, measure ride height (Ride Height Gauge # 1449). Raise or lower the shock collars as necessary.

### Wheelbase Adjustment:

You have three options for rear hub spacing; forward, middle, & back. The kit setting of middle is the most neutral, and will be used most often. For improved handling in bumps or rhythm sections, try moving the hubs to the back position. Hub forward is typically used on low grip or where there are lots of tight corners.



\*Spacers to the rear will place hubs forward, shortening the wheelbase

### Anti-Roll Bars:


The anti-roll bar kits (also called the "swaybar") allows you to add roll resistance to the front and/or rear end with minimal effect on handling over bumps and jumps. It is an especially helpful tuning item on high-grip tracks.

### Shock Mounting Position:


The rear shocks can be mounted on the front or rear of the rear suspension arm. Mounting the shocks on the front of the arm reduces rear weight bias. This causes the car to turn quicker and also steer more on-power. Usually this is used on high bite tracks in order to keep the car steering while applying throttle. Mounting the shocks on the rear of the arm increases rear weight bias and keeps the rear end planted while making the steering radius larger. This setting is typically easier to drive and will produce more rear traction.

**:: Shocks**

4187	.030 Nylon Washer	12
31327	VCS3 Shock Bottom Cap and O-Ring	2 ea.
31510	2x4mm BHCS	6
89278	2.5mm Washer	20
91304	12MM Threaded Collar and O-Ring	2
91480	12x23MM V2 Shock Bodies	2
91482	12x31MM V2 Shock Bodies	2
91491	12MM V2 Shock Rebuild Kit	1
91492	M2 x 4mm BHCS with Washer	2
91493	FT Low Friction X-Rings	8
91495	12 mm V2 X-Ring Rebuild Kit	1
91615	3 x 21mm Shock Shaft (V2), TiN	2
91619	3 x 27.5mm Shock Shaft (V2), TiN	2
91626	FT 12mm Pistons (V2), 2x1.6 mm, flat	4
91627	FT 12mm Pistons (V2), 2x1.7 mm, flat	4
91814	B6.1 Shock Caps/Spring Cups	4 ea.
91819	B6.1 Shock Pivot Balls	4
91820	B6.1 Ball Ends	1

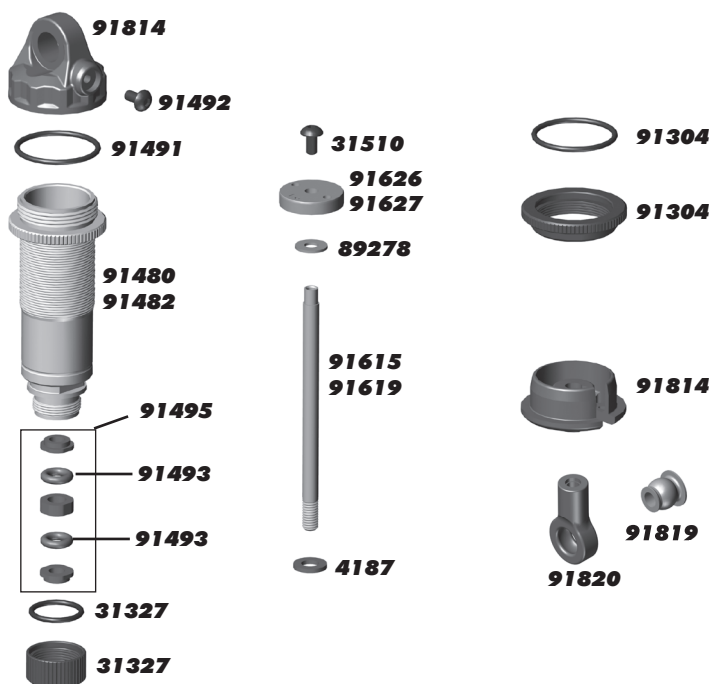**:: Ball Differential**

1733	Diff Shims	8
6573	Diff Thrust Washer & Bolt	2
6574	Precision Diff Thrust Balls, 5/64"	6
6575	Locking T-Nut, Diff Thrust Bolt, & Cover	1
6581	3/32" Carbide Diff Balls	12
6582	Diff Thrust Spring	1
7666	Diff Drive Rings, 2.60:1	2
7677	Ball Diff Rebuild Kit	1
31400	Bearing, 5 x 8mm	2
91419	Diff Gear, B5	1
91701	Ball Diff Outdrive, B6	1 ea.
91702	Ball Diff Kit, B6	1

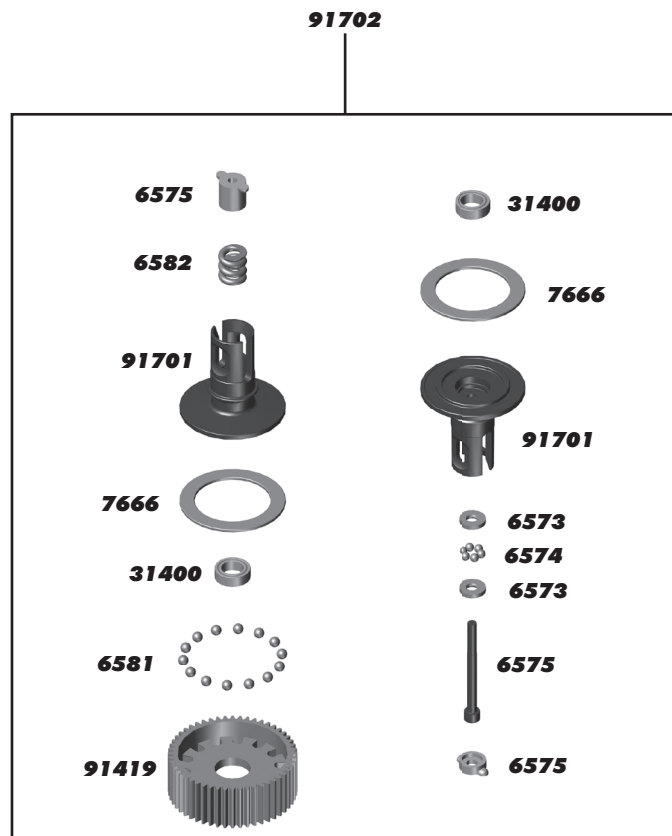**:: Shock Springs**

91830	Front Shock Spring, Green 3.10lbs	Pr.
91831	Front Shock Spring, White 3.40lbs - KIT	Pr.
91832	Front Shock Spring, Gray 3.61lbs	Pr.
91833	Front Shock Spring, Blue 3.91lbs	Pr.
91834	Front Shock Spring, Yellow 4.30lbs	Pr.
91835	Front Shock Spring, Red 4.60lbs	Pr.
91836	Front Shock Spring, Orange 5.10lbs	Pr.
91837	Rear Shock Spring, Green 1.81lbs	Pr.
91838	Rear Shock Spring, White 1.91lbs - KIT	Pr.
91839	Rear Shock Spring, Gray 2.00lbs	Pr.
91840	Rear Shock Spring, Blue 2.20lbs	Pr.
91841	Rear Shock Spring, Yellow 2.30lbs	Pr.


**:: Shock Fluid**

5420	10 Weight Silicone Shock Fluid	2oz.
5421	20 Weight Silicone Shock Fluid	2oz.
5422	30 Weight Silicone Shock Fluid	2oz.
5423	40 Weight Silicone Shock Fluid	2oz.
5424	22.5 Weight Silicone Shock Fluid	2oz.
5425	80 Weight Silicone Shock Fluid	2oz.
5426	27.5 Weight Silicone Shock Fluid	2oz.
5427	15 Weight Silicone Shock Fluid	2oz.
5428	25 Weight Silicone Shock Fluid	2oz.
5429	35 Weight Silicone Shock Fluid	2oz.
5430	45 Weight Silicone Shock Fluid	2oz.
5431	55 Weight Silicone Shock Fluid	2oz.
5432	32.5 Weight Silicone Shock Fluid	2oz.
5433	37.5 Weight Silicone Shock Fluid	2oz.
5434	42.5 Weight Silicone Shock Fluid	2oz.
5435	50 Weight Silicone Shock Fluid	2oz.
5436	60 Weight Silicone Shock Fluid	2oz.
5437	70 Weight Silicone Shock Fluid	2oz.
5438	47.5 Weight Silicone Shock Fluid	2oz.



## :: Transmission

25188	M3 x 20mm BHCS	10
25202	M3 x 10mm FHCS	10
25204	M3 x 16mm FHCS	10
31383	Ballstud Washers, 5.5x2.0 mm, blue aluminum	10
31448	M2.5 x 8mm FHCS	10
31532	M3 x 8mm BHCS	10
89202	M3 x 12mm BHCS	10
89203	M3 x 16mm BHCS	10
89218	M3 x 8mm Washers	10
91048	Heavy-duty Ballstuds, 8 mm	10
91132	4x4 FT Idler Shafts, aluminum	2
91560	FT Bearings, 5x10x4 mm	4
91709	B6 Chassis Braces	1 ea.
91716	B6 Idler Gear, 39T, laydown	2
91775	B6.1 Rear Ballstud Mount	1
91791	B6.1 Laydown Gearbox	1
91795	B6.1 Laydown Motor Plate	1
91799	B6.1 Laydown Top Shaft	1
91813	B6.1 Gear Cover	1
91819	B6.1 Shock Pivot Balls	4

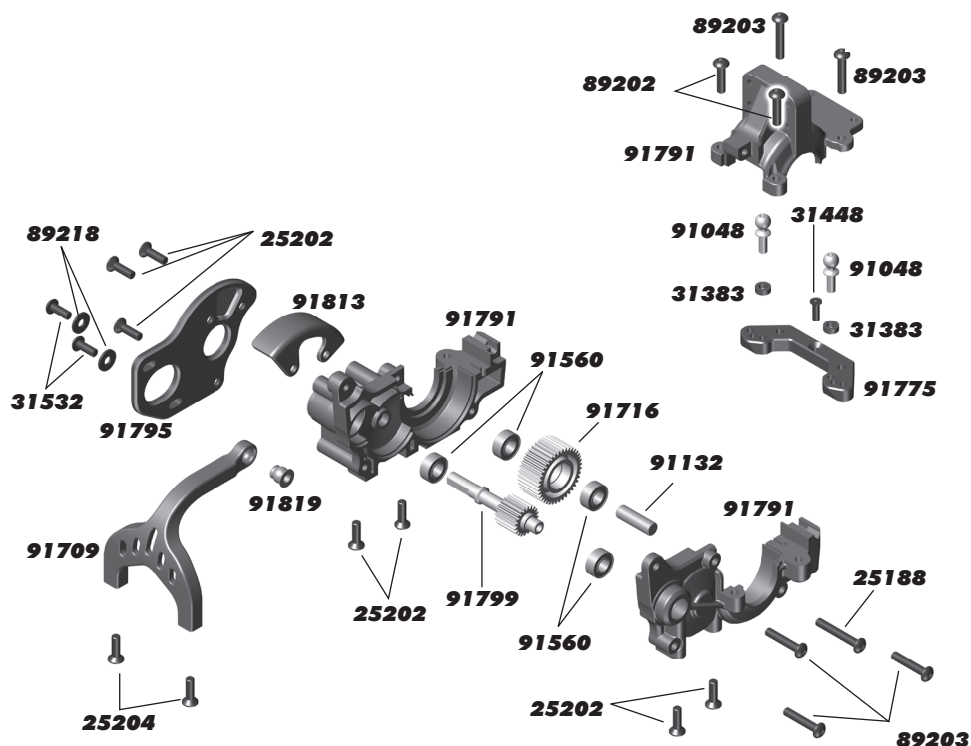


## :: Slipper Clutch

9611	Slipper Pad, V2	2
25215	Locknuts, M3	10
91799	B6.1 Laydown Top Shaft	1
91801	B6.1 Slipper Spring and Adaptors	1
91803	B6.1 Slipper Hub, Inner	1
91804	B6.1 Slipper Hub, Outer	1
91805	B6.1 HTC Slipper Hub Outer	1
91808	B6.1 Spur Gear, 69T - 48P	1
91809	B6.1 Spur Gear, 72T - 48P	1
91810	B6.1 Spur Gear, 75T - 48P	1
91811	B6.1 Spur Gear, 78T - 48P - KIT	1
91812	B6.1 Spur Gear, 81T - 48P	1




## :: Pinion Gears

1335	17T 48P Aluminum Pinion Gear	1	1349	31T 48P Aluminum Pinion Gear	1
1336	18T 48P Aluminum Pinion Gear	1	1350	32T 48P Aluminum Pinion Gear	1
1337	19T 48P Aluminum Pinion Gear	1	1351	33T 48P Aluminum Pinion Gear	1
1338	20T 48P Aluminum Pinion Gear	1	1352	34T 48P Aluminum Pinion Gear	1
1339	21T 48P Aluminum Pinion Gear	1	1353	35T 48P Aluminum Pinion Gear	1
1340	22T 48P Aluminum Pinion Gear	1	25225	M3 x 3mm Set Screw	20
1341	23T 48P Aluminum Pinion Gear	1			
1342	24T 48P Aluminum Pinion Gear	1			
1343	25T 48P Aluminum Pinion Gear	1			
1344	26T 48P Aluminum Pinion Gear	1			
1345	27T 48P Aluminum Pinion Gear	1			
1346	28T 48P Aluminum Pinion Gear	1			
1347	29T 48P Aluminum Pinion Gear	1			
1348	30T 48P Aluminum Pinion Gear	1			

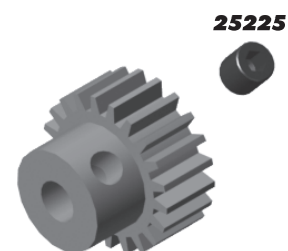


## :: Optional Gear Differential

31522	M2.5 x 10mm BHCS	10
91563	FT Bearings, 10x15x4 mm	4
91780	B6.1 Gear Differential Rebuild	1
91782	B6.1 Gear Differential Seals	1
91783	B6.1 Gear Differential Case	1
91784	B6.1 Aluminum Cross Pins	2
91785	B6.1 Gear Differential Outdrives	2
91786	B6.1 Gear Differential	1
91792	B6.1 Differential Height Inserts	2 ea.
5450	Silicone Diff Fluid 1,000CST	1
5451	Silicone Diff Fluid 2,000CST	1
5452	Silicone Diff Fluid 3,000CST	1
5444	Silicone Diff Fluid 4,000CST	1
5453	Silicone Diff Fluid 5,000CST	1
5446	Silicone Diff Fluid 6,000CST	1
5454	Silicone Diff Fluid 7,000CST	1
5455	Silicone Diff Fluid 10,000CST	1
5466	Silicone Diff Fluid 15,000CST	1
5456	Silicone Diff Fluid 20,000CST	1
5457	Silicone Diff Fluid 30,000CST	1
5458	Silicone Diff Fluid 60,000CST	1
5448	Silicone Diff Fluid 80,000CST	1
5459	Silicone Diff Fluid 100,000CST	1
5461	Silicone Diff Fluid 200,000CST	1
5463	Silicone Diff Fluid 500,000CST	1
5465	Silicone Diff Fluid 1,000,000CST	1

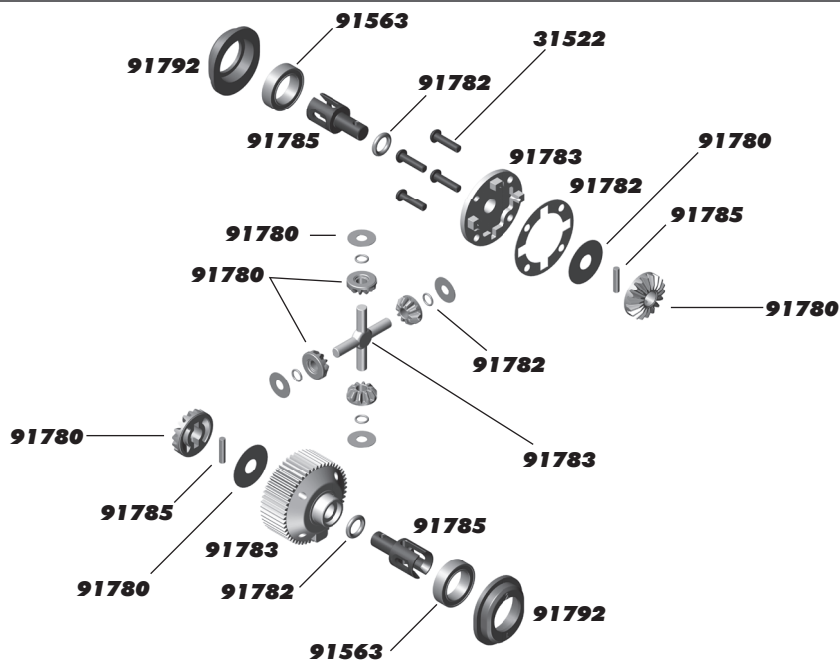


## :: Turnbuckles and Servo Mounts

4671	M3 x 10mm Set Screw	6
25211	M3 x 10mm BHCS	20
31284	Ball Studs Long, 8mm	6
31382	FT Ballstud Washer, aluminum 1mm	10
31532	M3 x 8mm BHCS	6
89218	M3 x 8mm Washers	10
91719	Servo Mount, B6	2
91722	Ball Cups, B6	12
91723	3 x 48mm Turnbuckle	2
91728	B6 Servo Horns, 15.5 mm	1
91820	B6.1 Ball Ends	1

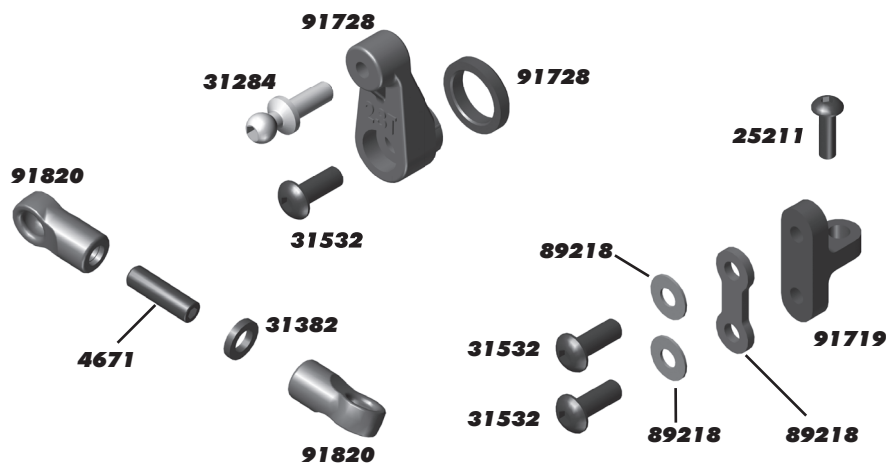

## :: Battery Strap


31531	M3 x 6mm BHCS	20
89218	3 x 8mm Washers	10
91729	Thumb Screw, B6	2
91730	Battery Strap Shoulder Screw	2
91731	Battery Strap, B6	1

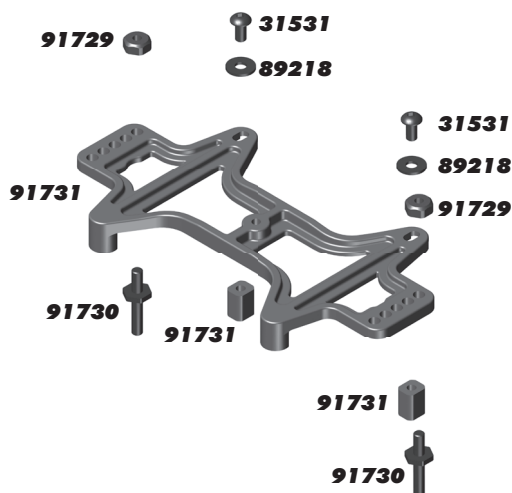




## :: Front Arm

25187	M3 x 14mm BHCS	10
25188	M3 x 20mm BHCS	10
25215	M3 Locknut, Black	10
31382	FT Ballstud Washer, aluminum 1mm	10
31510	M2 x 4mm BHCS	6
31531	M3 x 6mm, BHCS	6
31532	M3 x 8mm, BHCS	6
91048	Heavy-duty Ballstud, 8mm	8
91049	Heavy-duty Ballstud, 10mm	8
91560	FT Bearing, 5 x 10 x 4	4
91670	Hinge Pin Set, B6	1
91673	Front Arm, Gull-Wing, B6	2
91676	B6 Caster Hat Bushings	2 ea.
91680	B6 Steering Block Arms (+1)	2
91682	Front Axle, B6	2
91776	B6.1 Caster/Steering Blocks	1
91826	M4 Serrated Wheel Nut, Steel (Silver)	10

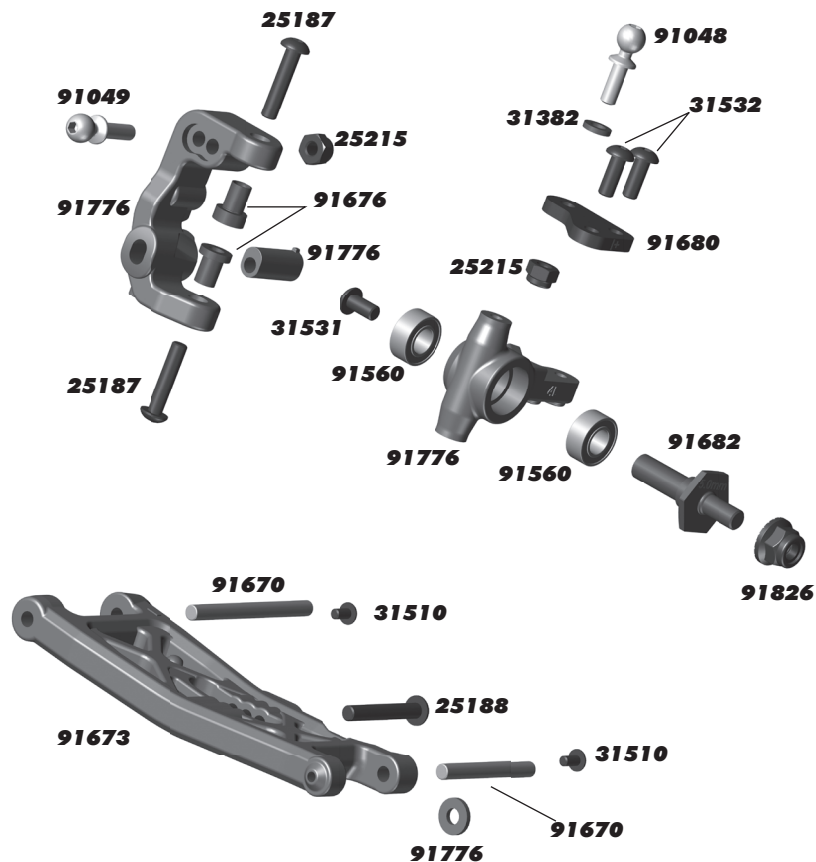


## :: Rear Arm

25187	M3 x 14mm BHCS	10
25215	M3 Locknut, Black	10
31510	M2 x 4mm BHCS	6
89218	Washer, 3 X 8mm	10
91049	Heavy-duty Ballstud, 10mm	8
91434	Rear CVA Bones, 67 mm	2
91436	CVA/Wheel Hex Pin, B5	4
91438	CVA Rebuild Kit, B5	1
91562	FT Bearing, 6 x 13 x 5	4
91563	FT Bearing, 10 x 15 x 4	4
91610	FT Clamping Wheel Hexes, 7.0mm	2
91611	M1.6 x 8mm SHCS	4
91670	Hinge Pin Set, B6	1
91698	Rear Hub Link Nut, B6	2
91762	B6 Heavy Duty Rear Axles V2	2
91777	B6.1 Rear Arms	Pr.
91779	B6.1 Rear Hub	Pr.
91826	M4 Serrated Wheel Nut, Steel (Silver)	10

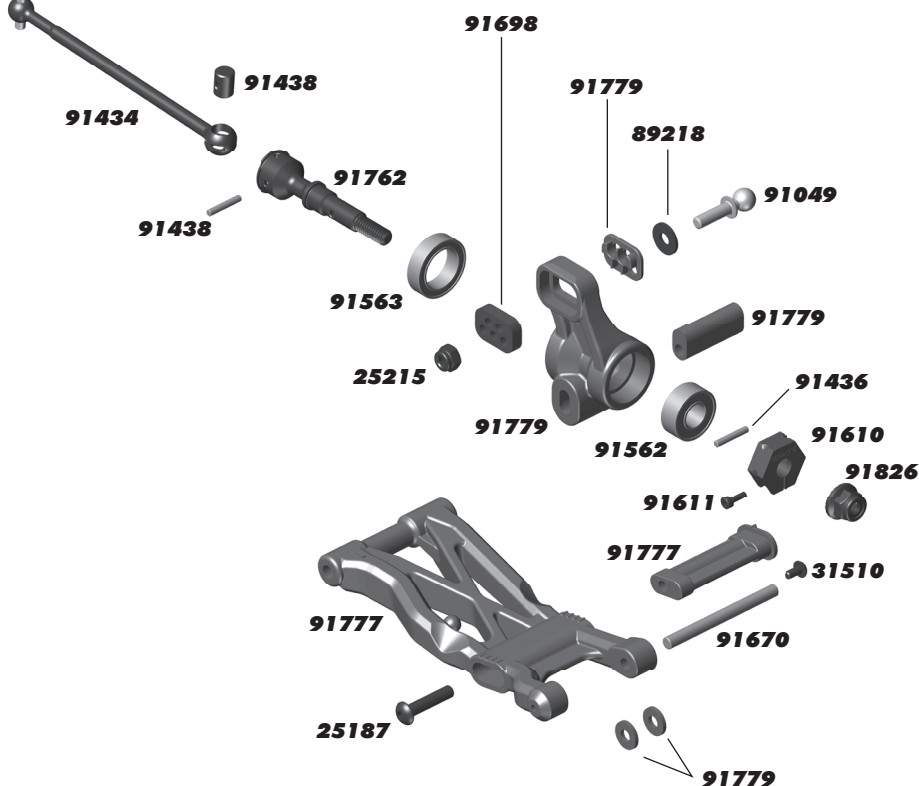


**:: Front Shock Tower**


<b>25188</b>	<b>M3 x 20mm BHCS</b>	<b>10</b>
<b>25202</b>	<b>M3 x 10mm FHCS</b>	<b>10</b>
<b>25612</b>	<b>M3 Locknuts w/Flange</b>	<b>10</b>
<b>91768</b>	<b>B6.1 Front Shock Tower</b>	<b>1</b>
<b>91771</b>	<b>B6.1 Shock Tower Covers</b>	<b>1</b>
<b>91815</b>	<b>Shock Bushing, 10mm</b>	<b>4</b>

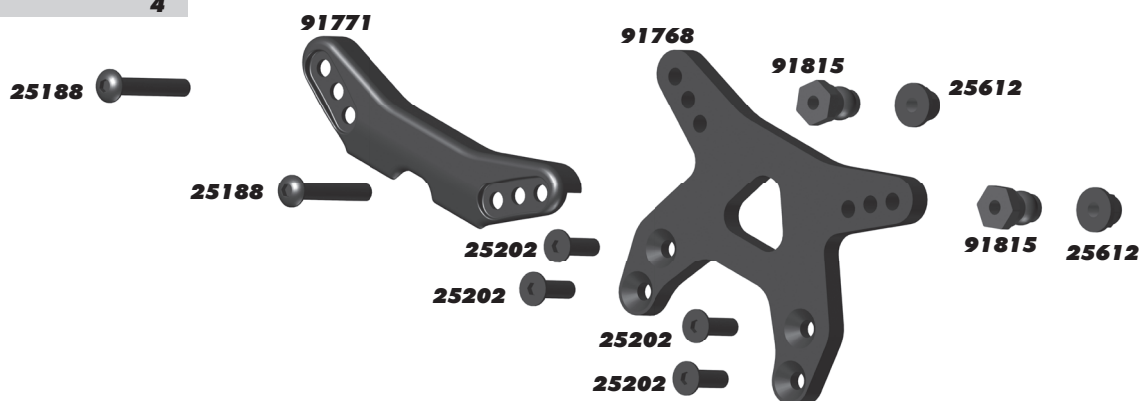**:: Rear Shock Tower**

<b>25188</b>	<b>M3 x 20mm BHCS</b>	<b>10</b>
<b>25189</b>	<b>M3 x 22mm BHCS</b>	<b>10</b>
<b>25202</b>	<b>M3 x 10mm FHCS</b>	<b>10</b>
<b>25612</b>	<b>M3 Locknuts w/Flange</b>	<b>10</b>
<b>89202</b>	<b>M3 x 12mm BHCS</b>	<b>10</b>
<b>89218</b>	<b>M3 x 8mm Washers</b>	<b>10</b>
<b>91718</b>	<b>Wing / Body Mount Set, B6</b>	<b>1</b>
<b>91770</b>	<b>B6.1 Rear Shock Tower, Long</b>	<b>1</b>
<b>91816</b>	<b>Shock Bushing, 12mm</b>	<b>4</b>

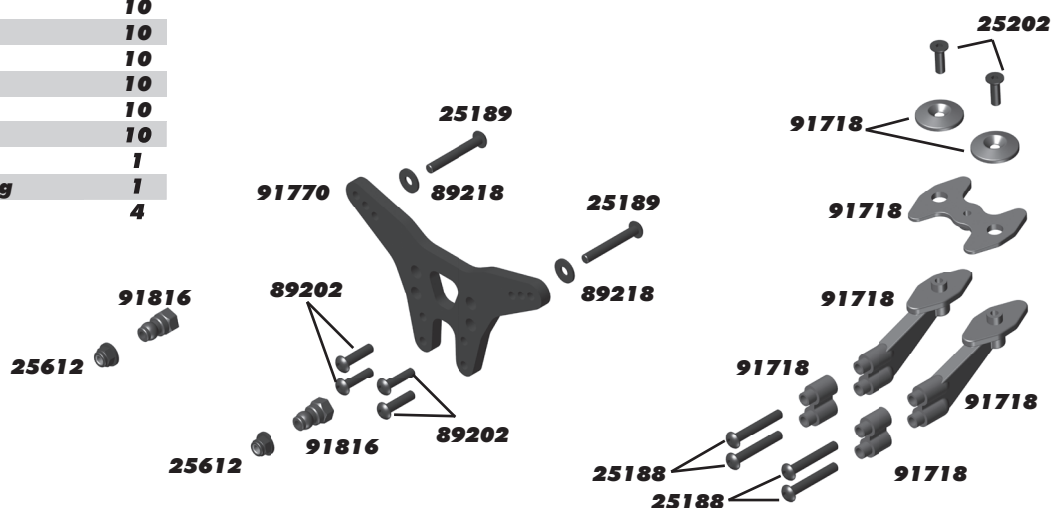
**:: Wheels**

<b>9690</b>	<b>Buggy Front Wheel, hex, white</b>	<b>2</b>
<b>9691</b>	<b>Buggy Front Wheel, hex, yellow</b>	<b>2</b>
<b>9695</b>	<b>Buggy Rear Wheel Hex, white</b>	<b>2</b>
<b>9696</b>	<b>Buggy Rear Wheel Hex, yellow</b>	<b>2</b>

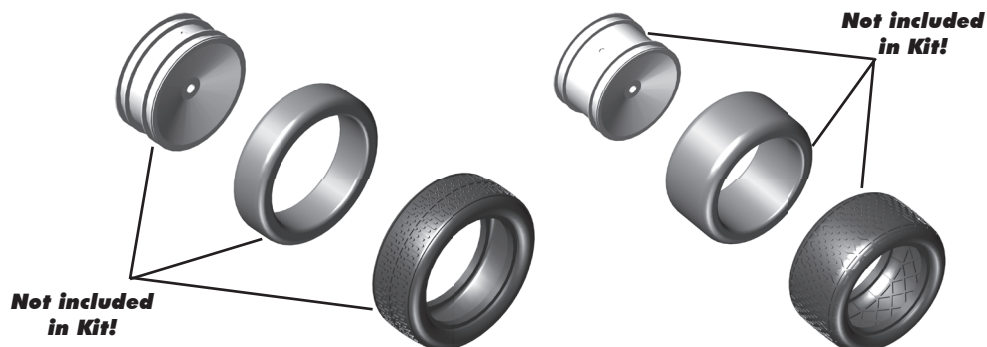


## :: Front Bulkhead / Steering

25187	M3 x 14mm BHCS	10
25204	M3 x 16mm FHCS	10
25211	M3 x 10mm BHCS	10
25225	M3 x 3mm Set Screw	10
31283	Ball Studs, Long, 5mm	6
31382	Ballstud Washers, 5.5x1.0 mm, blue aluminum	10
89202	M3 x 12mm BHCS	8
91048	Heavy-duty Ballstud, 8mm	8
91049	Heavy-duty Ballstud, 10mm	8
91475	3x7x3 Ball Bearing	1
91656	Bulkhead, B6	1
91667	Steering Assembly, B6	1
91678	M3 x 20mm BHCS, Shouldered	10
91685	Bumpers, B6	1 ea.
91766	B6.1 Top Plate, Ballstud Mount	1 ea.

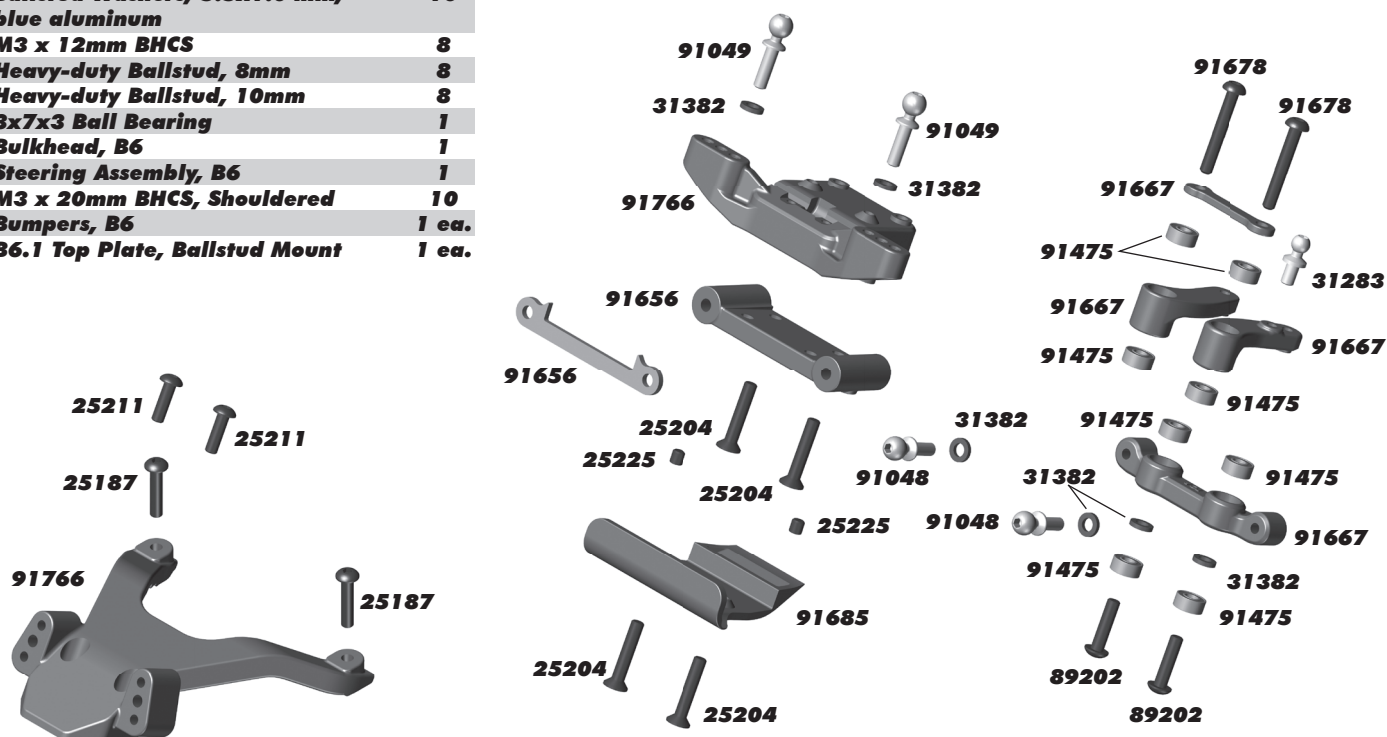

## :: Chassis

6338	Antenna Tube & Cap (black)	1
25201	M3 x 8mm FHCS	20
25202	M3 x 10mm FHCS	20
25204	M3 x 16mm FHCS	20
25225	M3 x 3mm Set Screw	20
31541	M3 x 6mm FHCS	10
91652	Side Rails, B6	Pr.
91670	Hinge Pin Set, B6	1
91685	Bumpers, B6	1 ea.
91688	Aluminum Arm Mount (D), B6	1
91722	B6.1 Aluminum Arm Mount (C)	1
91734	Battery Foam, B6	1
91765	B6.1 Chassis	1
92014	Arm Mount Inserts	4 ea.

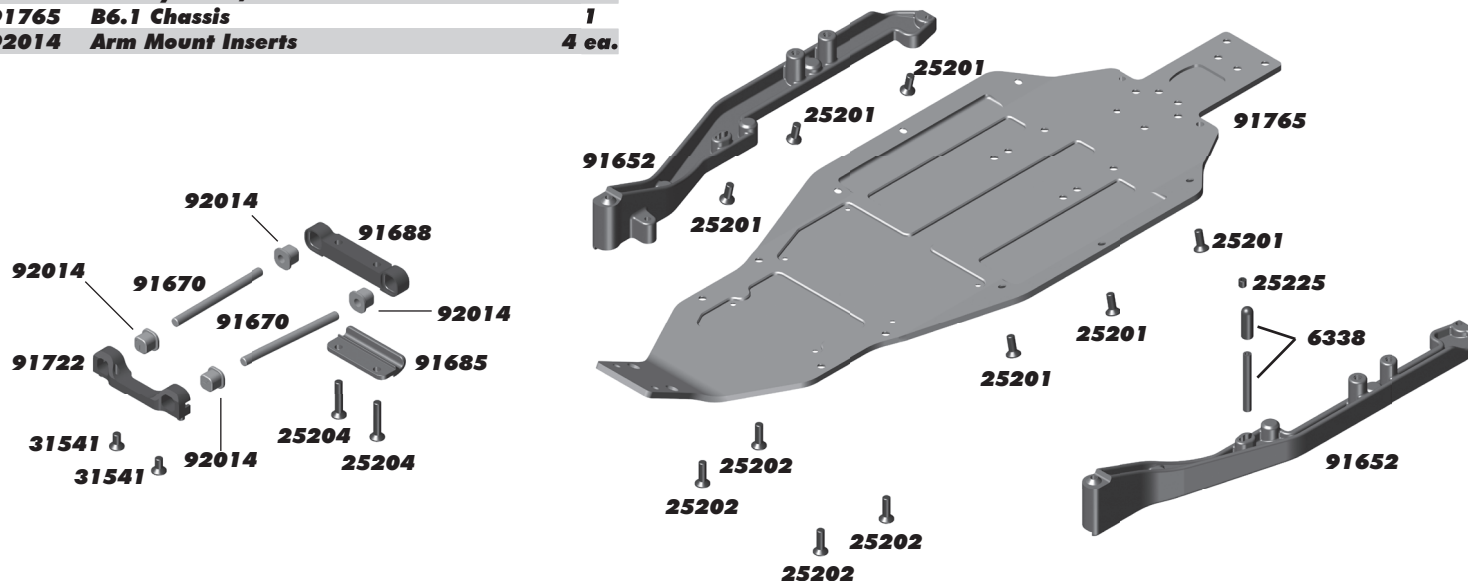

**:: Factory Team and Option Parts**

1369	FT Alum. Clamping Servo Horn 23T, 15.5 mm	1
1370	FT Alum. Clamping Servo Horn 25T, 15.5 mm	1
27128	Servo Washers, black aluminum	4
71034	FT Clamping Wheel Hexes, 6.0 mm	2
91494	FT 12mm Machined Shock Spacers, V2	1
91495	12mm V2 X-Ring Rebuild Kit	1
91553	Factory Team Bearing Kit, B5, B5M	1
91580	Titanium Screws, 3x6mm BHCS	4
91581	Titanium Screws, 3x8mm BHCS	4
91582	Titanium Screws, 3x10mm BHCS	4
91583	Titanium Screws, 3x12mm BHCS	4
91584	Titanium Screws, 3x14mm BHCS	4
91585	Titanium Screws, 3x16mm BHCS	4
91588	Titanium Screws, 3x22mm BHCS	4
91589	Titanium Screws, 3x24mm BHCS	4
91592	Titanium Screws, 3x8mm FHCS	4
91593	Titanium Screws, 3x10mm FHCS	4
91594	Titanium Screws, 3x12mm FHCS	4
91595	Titanium Screws, 3x14mm FHCS	4
91596	Titanium Screws, 3x16mm FHCS	4
91597	Titanium Screws, 3x18mm FHCS	4
91609	Clamping Wheel Hex, (5.0mm)	2
91625	FT 12 mm Pistons V2, 2x1.5 mm, flat	4
91626	FT 12 mm Pistons V2, 2x1.6 mm, flat	4
91627	FT 12 mm Pistons V2, 2x1.7 mm, flat	4
91628	FT 12 mm Pistons V2, 3x1.4 mm, flat	4
91653	B6 Side Rails, hard	Pr.
91658	RC10B6 Aluminum Front Bulkhead	1
91659	RC10B6 Brass Front Bulkhead	1
91663	RC10B6 Front Tower (Gull-Wing) - Req. #91673 or #91674	1
91668	RC10B6 Aluminum Steering Bell Crank	1
91669	RC10B6 Aluminum Steering Rack	1
91672	RC10B6 Flat Front Arm, Hard	Pr.
91673	RC10B6 Gull Front Arm - Req. #91663	Pr.
91674	RC10B6 Gull Front Arm, Hard - Req. #91663	Pr.
91680	B6 FT Steering Block Arms, +1	Pr.
91683	RC10B6 Titanium Front Axle	2
91696	RC10B6 Rear Arm, Hard	Pr.
91699	FT Aluminum Rear hub Link	2
91707	RC10B6 Stand-Up Gear Box, 4 Gear - Req. #91711, #91714	1
91711	RC10B6 Gear Cover, 4 Gear - Req. #91707, #91714	1
91714	RC10B6 Stand-Up Motor Plate, 4 Gear Req. #91707, #91711	1
91745	RC10B6 Aluminum Chassis Weight (9g)	1
91746	RC10B6 Aluminum Chassis Weight (13g)	1
91747	RC10B6 Steel Chassis Weight (24g)	1
91748	RC10B6 Steel Chassis Weight (36g)	1
91749	M2 x 3mm FHCS - Use with Chassis Weights	6
91750	HD Titanium Ball Stud, 4mm	2
91751	HD Titanium Ball Stud, 6mm	2
91752	HD Titanium Ball Stud, 8mm	2
91753	HD Titanium Ball Stud, 10mm	2
91754	FT Graphite ESC Plate	1
91755	RC10B6 Titanium Screw Kit	1
91760	B6 FT Blue Aluminum Rear Hubs	Pr.
91761	FT Graphite Servo Plate	1
91773	B6.1 Brass Arm Mount (C)	1
91781	B6.1 Gear Diff Cover, aluminum	1
91784	B6.1 Aluminum Cross Pins	2
91786	B6.1 Gear Diff Kit	1
91788	B6.1 Standup Gearbox	1
91790	B6.1 Layback Gearbox	1
91793	B6.1 Alum. Differential Height Inserts, black	2 Pr.
91796	FT Laydown/Layback Motor Plate, graphite	1
91797	Titanium Top Shaft Screw	1
91798	B6.1 Standup Top Shaft	1
91799	B6.1 Laydown Top Shaft	1
91800	B6.1 Direct Drive Kit	1
91801	B6.1 Slipper Spring	1
91802	B6.1 Vented Slipper Hub, inner	1

**:: Factory Team and Option Parts Cont...**

91806	B6.1 Vented Slipper Hub, outer	1
91807	B6.1 HTC Vented Slipper Hub, outer & center disk	1
91821	B6.1 Anti-Roll Bar Hardware Set	1
91822	B6.1 Front Anti-Roll Bar Set	1
91823	B6.1 Rear Anti-Roll Bar Set	1
91825	B6.1/B6.1D FT Chassis Protective Sheet	1
92100	FT Aluminum Wing Buttons	2

**:: Bodies**

91741	RC10B6 Wing	1
91743	Adhesive Hook and Loop	1
91827	RC10B6.1 Clear Body	1
91828	RC10B6.1 Lightweight Clear Body	1

**:: Lubes & Adhesives / Decals / Misc.**

1105	FT Green Slime Shock Lube	1
1596	FT Locking Adhesive	1
1597	FT Tire Adhesive, medium	1
6588	Black Grease - 4cc	1
6591	S.Diff Lube - 4cc	1
6636	Silicone Grease - 4cc	1
6727	Servo Tape	2
726	Reedy 2016 Sticker Set	1
3840	2016 Team Associated Decal Sheet	1
9787	FT Chassis Protective Sheet	1

**:: MyLaps Transponders**

MLP10R120	MyLaps RC4 (3-wire) Transponder	1
MLP10R147	MyLaps RC4 (3-wire) Pro Transponder, Black	1
MLP40R222	MyLaps Transponder Holder	1

**:: Reedy Batteries**

302	AA Alkaline 1.5V (4)	1
27313	LiPo Pro TX/RX 2400mAh 7.4V Flat	1
27315	LiFe Pro TX/RX 1600mAh 6.6V Flat	1
27318	Wolfpack HV LiPo 50C 4200mAh 7.6V Shorty	1
27319	Wolfpack HV LiPo 50C 3300mAh 7.6V LP Shorty	1
27335	Zappers SG2 4800mAh 7.6V 110C Shorty 37Wh 205g	1
27336	Zappers SG2 5800mAh 7.6V 80C Shorty 45Wh 220g	1
27337	Zap. SG2 3600mAh 7.6V 110C LCG Shrt 28Wh 155g	1
27338	Zap. SG2 4100mAh 7.6V 80C LCG Shrt 32Wh 152g	1



**:: Reedy Competition Motors & Spare Parts**

262	Sonic 540-M3 6.5	1
263	Sonic 540-M3 6.0	1
264	Sonic 540-M3 5.5	1
265	Sonic 540-M3 5.0	1
266	Sonic 540-M3 4.5	1
271	540-M3/S-Plus Spec Rotor 12.0 x 7.25 x 25.3	1
272	540-M3/S-Plus Spec Rotor 12.2 x 7.25 x 25.3	1
273	540-M3/S-Plus Spec Rotor 12.5 x 7.25 x 25.3	1
274	Sonic 540-M3 Mod Rotor 12.3 x 5.0 x 25.3	1
275	Sonic 540-M3 Mod Rotor 12.5 x 5.0 x 25.3	1
276	Sonic 540-M3 Mod Rotor 13.0 x 5.0 x 25.3	1
277	Sonic 540-M3 Stainless Steel Bearing Set	1
279	Sonic 540-M3 Sensor Assembly	1
280	Sonic 540-M3 Rotor Spacer Set	1
281	Sonic 540-M3 Case Screws w/Insulator	1
283	Sonic 540-M3 Motor Mounting Plate	1
286	540-M3/S-Plus Spec Rotor 12.3 x 7.25 x 25.3	1
293	Sonic 540 FT 17.5 Fixed Timing	1
294	Sonic 540 FT 13.5 Fixed Timing	1
295	Sonic 540-FT Spec Rotor 12.0 x 7.25 x 25.3	1
296	Sonic 540-M3 Mod Rotor 12.0 x 5.0 x 24.2	1
27402	S-Plus 17.5 Spec	1
27403	S-Plus 13.5 Spec	1
27404	S-Plus 10.5 Spec - Torque	1
27414	540-M3/S-Plus Spec Rotor 12.5 x 7.15 x 24.2	1
27417	S-Plus Screw Set	1
27418	540-M3/S-Plus Lightweight Sensor Board	1
27419	S-Plus Front Plate	1
27420	540-M3/S-Plus Aluminum Case Screw Set	1
27421	540-M3/S-Plus Aluminum Timing Screw Set	1
27429	S-Plus 17.5 Spec - Torque	1

**:: Reedy Competition Motors Accessories**

978	Flat Sensor Wire 70mm	1
979	Flat Sensor Wire 110mm	1
980	Flat Sensor Wire 150mm	1
981	Flat Sensor Wire 200mm	1
982	Flat Sensor Wire 270mm	1
994	Flat Sensor Wire 125mm	1
995	Flat Sensor Wire 175mm	1
27423	30mm Motor Fan w/195mm extension	1

**:: Reedy ESC's**

260C	Blackbox 1000Z+/540-M3 7.5 Combo	1
261C	Blackbox 1000Z+/540-M3 7.0 Combo	1
262C	Blackbox 1000Z+/540-M3 6.5 Combo	1
27002	Blackbox 800Z 2S Zero-Timing Competition ESC	1
27003	Blackbox 1000Z+ 2S Competition ESC	1
27004	Blackbox 510R Competition ESC	1
27005	Blackbox 510R Competition ESC w/PROgrammer2	1
27006	Blackbox 600Z 2S Zero-Timing Competition ESC	1
27024	Blackbox Pro Capacitor Unit	1
27026	Blackbox 1000Z+ Fan w/Screws	1
27027	Blackbox PROgrammer2	1
27028	Blackbox 30x30x7mm Fan w/screws	1
27029	Blackbox Pro Modified Capacitor Unit	1
27030	Blackbox ESC/Programmer2 Connection Wire	1
27031	Blackbox 510R 30x30x10mm Fan w/screws	1
27033	Blackbox 1000Z+ Pro Competition ESC	1

**:: Reedy Chargers**

27200	1216-C2 Dual AC/DC Competition Batt. Charger	1
27200CN	1216-C2 Dual AC/DC Comp. Charger - CHN Plug	1
27200EU	1216-C2 Dual AC/DC Comp. Charger - EURO Plug	1
27200UK	1216-C2 Dual AC/DC Comp. Charger - UK Plug	1

**:: Reedy Charger Accessories**

996	5.0mm 1S-2S Balance Charge lead w/SP Clip (4mm)	1
997	4.0mm 1S-2S Balance Charge lead w/SP Clip (4mm)	1
27220	7-in-1 Universal Charge Lead (4mm)	1
27222	XH 2-6S Balance Board (4mm)	1
27223	RX Charger Lead FUT (4mm)	1
27224	US to IEC 320 C5 angle 1M AC Power Cord	1
27225	US to IEC 320 C5 angle .5M AC Power Cord	1
27226	EU to IEC 320 C5 angle 1M AC Power Cord	1
27227	UK to IEC 320 C5 angle 1M AC Power Cord	1
27228	AU to IEC 320 C5 angle 1M AC Power Cord	1
27229	CN to IEC 320 C5 angle 1M AC Power Cord	1

**:: Reedy Servos & Accessories**

27100	RS1206 Digital HV Hi-Speed Competition Servo	1
27101	RT1508 Digital HV Hi-Torque Competition Servo	1
27102	RS1206 Servo Case Set w/screws	1
27103	RS1206 Servo Gear Set	1
27104	RT1508 Servo Case Set w/screws	1
27105	RT1508 Servo Gear Set	1
27112	RS1306 Digital HV Low-Profile Brushless Comp. Servo	1
27113	RT1709 Digital HV Low-Profile Brushless Comp. Servo	1
27114	RT2406 Digital HV Brushless Comp. Servo	1
27115	RT2706A Digital HV Alum. Brushless Comp. Servo	1
27122	Reedy Aluminum Servo Horn (25)	1
27123	Reedy Aluminum Clamping Servo Horn (25)	1
27133	RS1306 Gear Set	1
27134	RT1709 Gear Set	1
27135	RT2406 Gear Set	1
27136	RT2706A Gear Set	1
27137	RS1306 Case Set	1
27138	RT1709 Case Set	1
27139	RT2406 Case Set	1

**:: Reedy Accessories**

643	Low Profile Bullet Plug 4mm x 14mm (2)	1
644	Low Profile Bullet Plug 4mm x 14mm (10)	1
645	Low Profile Bullet Plug 5mm x 14mm (2)	1
646	Low Profile Bullet Plug 5mm x 14mm (10)	1
647	Silicone Wire 12AWG-Black (1m)	1
648	Silicone Wire 14AWG-Black (1m)	1
650	Shrink Tubing - 15pcs 4.5mm x 20mm	1
654	4.0mm Bullet Plugs (2M, 2F)	1
655	4.0mm Bullet Plugs (2M, 10F)	1
656	4.0mm Bullet Plugs (10F)	1
658	4.0mm Bullet Plugs (10M)	1
659	4.0mm Bullet Plugs (30M)	1
747	Silicone Wire 12AWG-Black (30m)	1
748	Silicone Wire 14AWG-Black (30m)	1
790	Silicone Wire 13AWG-Black (1m)	1
791	Silicone Wire 13AWG-Black (30m)	1
792	Low Profile Caged Bullet Plug 4mm x 14mm (2)	1
793	Low Profile Caged Bullet Plug 4mm x 14mm (10)	1
794	Low Profile Caged Bullet Plug 5mm x 14mm (2)	1
795	Low Profile Caged Bullet Plug 5mm x 14mm (10)	1
27304	LiPo Battery Weight Set - Shorty	1

**:: Apparel / Promotional****TEE SHIRTS**

<b>SP124*</b>	<b>AE 2017 Worlds Tee, Black (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP126*</b>	<b>Team Associated Tri T-Shirt, Black (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP140*</b>	<b>Reedy Heritage Tee, Black (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP200*</b>	<b>Element RC Logo Tee, Gray (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP201*</b>	<b>Element RC Rhombus Tee, Black (S, M, L, XL-5XL)</b>	<b>1</b>

**HOODIES/JACKETS**

<b>SP142*</b>	<b>Reedy W19 Hoodie - Black (S, M, L, XL-3XL)</b>	<b>1</b>
<b>SP230</b>	<b>Element RC Zip Up, Black (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP231</b>	<b>Element RC Hoodie, Black (S, M, L, XL-5XL)</b>	<b>1</b>
<b>SP250</b>	<b>Element RC Jacket, Black (S, M, L, XL-2XL)</b>	<b>1</b>

**HATS**

<b>SP20</b>	<b>AE Patch Trucker Hat</b>	<b>1</b>
<b>SP430</b>	<b>Reedy Trucker Hat 2018</b>	<b>1</b>
<b>SP260</b>	<b>Element RC Hat, Curved Bill, Black</b>	<b>1</b>
<b>SP261</b>	<b>Element RC Hat, Flat Bill, Black</b>	<b>1</b>
<b>SP262</b>	<b>Element RC Beanie, Black</b>	<b>1</b>

**BANNERS/MATS CARRIERS**

<b>SP29</b>	<b>Team Associated Countertop/Setup Mat</b>	<b>1</b>
<b>SP30</b>	<b>Team Associated Pit Mat</b>	<b>1</b>
<b>SP31</b>	<b>Reedy Countertop/Setup Mat</b>	<b>1</b>
<b>SP115</b>	<b>Reedy Circuit Cloth Banner</b>	<b>1</b>
<b>SP280</b>	<b>Element RC Counter Top Mat</b>	<b>1</b>
<b>SP281</b>	<b>Element RC Pit Mat</b>	<b>1</b>
<b>SP282</b>	<b>Element RC Pit Towel</b>	<b>1</b>
<b>SP425</b>	<b>FT Fluid Carrier</b>	<b>1</b>
<b>SP426</b>	<b>Team Associated Countertop / Setup Mat</b>	<b>1</b>
<b>SP427</b>	<b>Reedy Countertop / Setup Mat</b>	<b>1</b>
<b>110684</b>	<b>Team Associated Track Banner</b>	<b>1</b>
<b>110685</b>	<b>Team Associated Cloth Banner</b>	<b>1</b>

**\*\* Use part number plus the desired size when ordering!**

**:: Tools**

<b>1111</b>	<b>FT Turnbuckle Wrench</b>	<b>1</b>
<b>1112</b>	<b>FT 4mm Turnbuckle Wrench</b>	<b>1</b>
<b>1113</b>	<b>12mm Big Bore Shock Tool</b>	<b>1</b>
<b>1114</b>	<b>FT Dual Turnbuckle Wrench</b>	<b>1</b>
<b>1449</b>	<b>Off Road Ride Height Gauge</b>	<b>1</b>
<b>1452</b>	<b>FT TC Ride Height Gauge</b>	<b>1</b>
<b>1498</b>	<b>FT Universal Tire Balancer</b>	<b>1</b>
<b>1499</b>	<b>FT Body Reamer</b>	<b>1</b>
<b>1500</b>	<b>FT 1.5mm Hex Driver</b>	<b>1</b>
<b>1501</b>	<b>FT 2.0mm Hex Driver</b>	<b>1</b>
<b>1502</b>	<b>FT 2.0mm Ball Hex Driver</b>	<b>1</b>
<b>1503</b>	<b>FT 2.5mm Hex Driver</b>	<b>1</b>
<b>1504</b>	<b>FT 2.5mm Ball Hex Driver</b>	<b>1</b>
<b>1505</b>	<b>FT 3.0mm Hex Driver</b>	<b>1</b>
<b>1506</b>	<b>FT 5.0mm Hex Driver</b>	<b>1</b>
<b>1507</b>	<b>FT 5.5mm Nut Driver</b>	<b>1</b>
<b>1508</b>	<b>FT 7.0mm Nut Driver</b>	<b>1</b>
<b>1510</b>	<b>FT 1.5mm Hex Replacement Tip</b>	<b>1</b>
<b>1511</b>	<b>FT 2.0mm Hex Replacement Tip</b>	<b>1</b>
<b>1512</b>	<b>FT 2.0mm Ball Replacement Tip</b>	<b>1</b>
<b>1513</b>	<b>FT 2.5mm Hex Replacement Tip</b>	<b>1</b>
<b>1514</b>	<b>FT 2.5mm Ball Replacement Tip</b>	<b>1</b>
<b>1515</b>	<b>FT 3.0mm Hex Replacement Tip</b>	<b>1</b>
<b>1518</b>	<b>FT Hex Driver Tool Set (3pcs)</b>	<b>1</b>
<b>1519</b>	<b>FT Hex/Nut Driver Tool Set (5pc)</b>	<b>1</b>
<b>1522</b>	<b>FT Digital Scale, 100/0.01g</b>	<b>1</b>
<b>1555</b>	<b>FT Clutch Gauge, 4 Shoe</b>	<b>1</b>
<b>1568</b>	<b>FT 5.5mm Short Nut Driver</b>	<b>1</b>
<b>1569</b>	<b>FT 7mm Nut Driver, T-Handle</b>	<b>1</b>
<b>1570</b>	<b>FT 5.5mm Short Nut Driver</b>	<b>1</b>
<b>1571</b>	<b>FT 1:8 Wheel Nut Wrench, 17mm Hex</b>	<b>1</b>
<b>1579</b>	<b>FT Ball Cup Wrench</b>	<b>1</b>
<b>1595</b>	<b>Chassis Weights, 1/4 oz</b>	<b>1</b>
<b>1650</b>	<b>7 Piece Hex Driver Set</b>	<b>1</b>
<b>1657</b>	<b>FT 1/4" Hex Drive .050" Tip</b>	<b>1</b>
<b>1658</b>	<b>FT 1/4" Hex Drive 1/16" Tip</b>	<b>1</b>
<b>1659</b>	<b>FT 1/4" Hex Drive 5/64" - 2.0mm Tip</b>	<b>1</b>
<b>1660</b>	<b>FT 1/4" Hex Drive 3/32" Tip</b>	<b>1</b>
<b>1661</b>	<b>FT 1/4" Hex Drive 1.5mm Tip</b>	<b>1</b>
<b>1662</b>	<b>FT 1/4" Hex Drive 2.5mm Tip</b>	<b>1</b>
<b>1666</b>	<b>FT 1/4" Hex Drive 5.5mm Nut Driver Tip</b>	<b>1</b>
<b>1667</b>	<b>FT 1/4" Hex Drive 7.0mm Nut Driver Tip</b>	<b>1</b>
<b>1668</b>	<b>FT 1/4" Hex Drive 8.0mm Nut Driver Tip</b>	<b>1</b>
<b>1673</b>	<b>FT 1/4" Hex Drive 2.5mm Ball End Tip</b>	<b>1</b>
<b>1674</b>	<b>FT 1/4" 5 Piece Power Tool Tips Set (5/64-2.0mm, 1.5mm, 2.5mm, 5/64"- 2.0mm ball, 2.5mm ball)</b>	<b>1</b>
<b>1675</b>	<b>FT Shock Shaft Pliers</b>	<b>1</b>
<b>1679</b>	<b>FT T-Handle Ratchet Driver</b>	<b>1</b>
<b>1719</b>	<b>FT Camber + Track Width Tool</b>	<b>1</b>
<b>1737</b>	<b>FT Body Scissors</b>	<b>1</b>
<b>3718</b>	<b>12 Inch Nylon Wire Ties</b>	<b>12</b>
<b>3719</b>	<b>6 Inch Nylon Wire Ties</b>	<b>12</b>
<b>3720</b>	<b>8 Inch Nylon Wire Ties</b>	<b>12</b>
<b>3987</b>	<b>FT Droop Gauge</b>	<b>1</b>
<b>7709</b>	<b>4 Inch Nylon Wire Ties</b>	<b>12</b>
<b>89240</b>	<b>RC8 FT Turnbuckle Wrench</b>	<b>1</b>

**:: Notes****:: Contact Information**

**Check out the following web sites for all of our electric kits, current products,  
new releases, setup help, tips, and racing info!**

**Associated Electrics, Inc.  
26021 Commercentre Drive  
Lake Forest, CA 92630-8853 USA  
<http://www.TeamAssociated.com>  
<http://www.RC10.com>  
[http://twitter/Team\\_Associated](http://twitter/Team_Associated)  
<http://www.instagram.com/teamassociatedrc/>  
<http://www.facebook.com/TeamAssociated/>**

**call: (949) 544-7500  
fax: (949) 544-7501**

## Front Suspension:

Ride Height:	<b>22mm</b>
Camber:	<b>-1°</b>
Toe:	<b>0°</b>
Arm Type:	<b>Gull-Wing</b>
Tower Type:	<b>Gull-Wing</b>
Caster Block Insert:	<b>+5°</b>
Steering Block:	<b>4mm</b>
Bulkhead Type:	<b>Plastic</b>
Kick-Up Angle:	<b>25°</b>
Wheel Hex:	<b>5.0mm</b>
Notes:	

**Anti Roll Bar:**

None ☒

White (0.8mm) ☐

Gray (0.9mm) ☐

Blue (1.0mm) ☐

Other: \_\_\_\_\_ ☐

**Bump Steer Spacing:** **1mm**

**Axle Height:**

+3 ☐

+2 ☐

+1 ☒

0 ☐

**Ball Stud Spacing:** **1mm**

**Steering Plate:** **+1**

**Steering Stop Spacing:** **0**

**Ball Stud Spacing:** **1mm**

**Caster Block Spacing:** **1mm**

## Rear Suspension:

Ride Height:	<b>22mm</b>	
Camber:	<b>-1°</b>	
Wheel Hex:	<b>7.0mm</b>	
Hub Spacing:		
Forward <input type="checkbox"/>	Middle <input checked="" type="checkbox"/>	Back <input type="checkbox"/>
<b>Shock Mounting Position:</b>		
Front of Arm <input checked="" type="checkbox"/>	Rear of Arm <input type="checkbox"/>	
Notes:		

**Anti Roll Bar:**

None ☒

White (1.2mm) ☐

Gray (1.3mm) ☐

Blue (1.4mm) ☐

Other: \_\_\_\_\_ ☐

**C Mount Inserts:** 1° ☐ 0.5° ☒

Aluminum ☒ Brass ☐

**D Mount Inserts:** 1° ☐ 0.5° ☒

Aluminum ☒ Brass ☐

### Rear Hub Link Setting:

**Up**

E C A

D B

**Down**

D C A

E B

**Ball Stud Spacing:** **2mm**

**Hub Insert:**

+3 ☐ +2 ☐ +1 ☐ 0 ☒

## Electronics:


Radio:	Servo:
EPA: Throttle: _____ %	Brake: _____ %
ESC:	
ESC Settings:	
Motor:	
Wind:	Timing:
Pinion:	Spur:
Battery:	
Battery Position: <b>3F</b>	

## Drivetrain:

Transmission:	Laydown: <input checked="" type="checkbox"/>
3 Gear: <input checked="" type="checkbox"/>	Layback: <input type="checkbox"/>
4 Gear: <input type="checkbox"/>	Stand Up: <input type="checkbox"/>
Differential:	Ball Diff: <input checked="" type="checkbox"/>
Height: <b>0</b>	Gear Diff: <input type="checkbox"/>
Notes:	
<b>Slipper Clutch:</b>	
Type: <b>Kit</b>	
# of Pads: <b>2</b>	

## Shocks:

	Front	Rear
Piston:	<b>2 x 1.6</b>	<b>2 x 1.7</b>
Fluid:	<b>30</b>	<b>30</b>
Spring:	<b>V2 White</b>	<b>V2 White</b>
Limiters:	<b>2</b>	<b>1</b>
Stroke:	<b>20.5</b>	<b>28.0</b>
Eyelet Length:	<b>Long</b>	<b>Short</b>
Cup Offset:	<b>5mm</b>	<b>5mm</b>
Notes:		

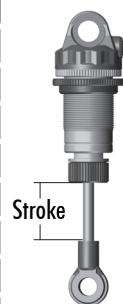

## Track Info:

Size:	Small <input type="checkbox"/>	Medium <input type="checkbox"/>	Large <input type="checkbox"/>	Extra Large <input type="checkbox"/>
Surface:	Dirt <input type="checkbox"/>	Carpet <input type="checkbox"/>	Astroturf <input type="checkbox"/>	Multi Surface <input type="checkbox"/>
Traction:	Low <input type="checkbox"/>	Medium <input type="checkbox"/>	High <input type="checkbox"/>	Very High <input type="checkbox"/>
Moisture:	Dry <input type="checkbox"/>	Damp <input type="checkbox"/>	Wet <input type="checkbox"/>	
Condition:	Indoor <input type="checkbox"/>	Outdoor <input type="checkbox"/>	Dusty <input type="checkbox"/>	Hard Packed <input type="checkbox"/>
	Bumpy <input type="checkbox"/>	Grooved <input type="checkbox"/>	Smooth <input type="checkbox"/>	Loamy <input type="checkbox"/>
Temperature:	Ambient: _____	Track: _____		
Notes:				

## Tires:

Front Tires:
Front Compound:
Front Insert:
Rear Tires:
Rear Compound:
Rear Insert:
Wheel (F/R):
Notes:

## Body, Wing, Weight:

Body:	<b>Kit</b>
Wing:	<b>Kit</b>
Wing Angle:	0° <input type="checkbox"/> 3° <input type="checkbox"/> 6° <input checked="" type="checkbox"/>
Servo Weights:	None <input checked="" type="checkbox"/> Aluminum <input type="checkbox"/> Steel <input type="checkbox"/> Other <input type="checkbox"/>
Electronic Weights:	None <input checked="" type="checkbox"/> Aluminum <input type="checkbox"/> Steel <input type="checkbox"/> Other <input type="checkbox"/>
Total Vehicle Weight:	

## Vehicle Comments:


Notes:




## Front Suspension:

**Ride Height:** \_\_\_\_\_  
**Camber:** \_\_\_\_\_  
**Toe:** \_\_\_\_\_  
**Arm Type:** \_\_\_\_\_  
**Tower Type:** \_\_\_\_\_  
**Caster Block Insert:** \_\_\_\_\_  
**Steering Block:** \_\_\_\_\_  
**Bulkhead Type:** \_\_\_\_\_  
**Kick-Up Angle:** \_\_\_\_\_  
**Wheel Hex:** \_\_\_\_\_  
**Notes:** \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_


**Anti Roll Bar:**  
 None ☐  
 White (0.8mm) ☐  
 Gray (0.9mm) ☐  
 Blue (1.0mm) ☐  
 Other: \_\_\_\_\_ ☐

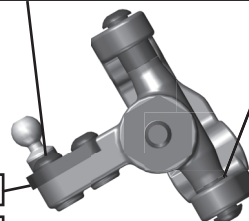**Bump Steer Spacing:** \_\_\_\_\_  


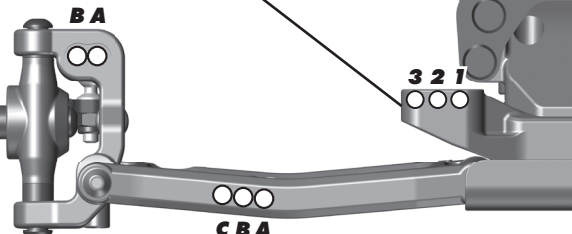
**Axle Height:**  
 +3 ☐  
 +2 ☐  
 +1 ☐  
 0 ☐

**Ball Stud Spacing:** \_\_\_\_\_  


**Steering Plate:** \_\_\_\_\_  
**Steering Stop Spacing:** \_\_\_\_\_

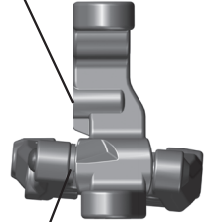**Caster Block Spacing:** \_\_\_\_\_  


**Ball Stud Spacing:** \_\_\_\_\_



**Ball Stud Spacing:** \_\_\_\_\_  




## Rear Suspension:

**Ride Height:** \_\_\_\_\_  
**Camber:** \_\_\_\_\_  
**Wheel Hex:** \_\_\_\_\_  
**Hub Spacing:**  
 Forward ☐ Middle ☐ Back ☐  
**Shock Mounting Position:**  
 Front of Arm ☐ Rear of Arm ☐  
**Notes:** \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

**Anti Roll Bar:**  
 None ☐  
 White (1.2mm) ☐  
 Gray (1.3mm) ☐  
 Blue (1.4mm) ☐  
 Other: \_\_\_\_\_ ☐


**C Mount Inserts:** 1° ☐ 0.5° ☐  
 Aluminum ☐ Brass ☐

**D Mount Inserts:** 1° ☐ 0.5° ☐  
 Aluminum ☐ Brass ☐  
  


**Rear Hub Link Setting:**  
**Up**   
**Down** 

**Hub Insert:**  
 +3 ☐ +2 ☐ +1 ☐ 0 ☐

**Ball Stud Spacing:** \_\_\_\_\_

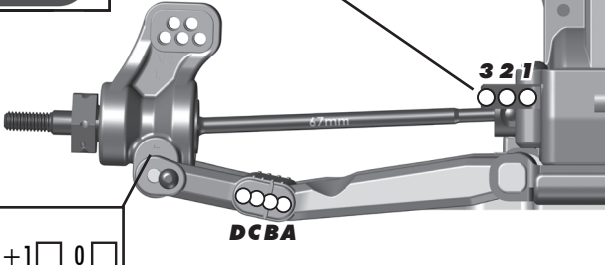**Ball Stud Spacing:** \_\_\_\_\_  


## Electronics:


**Radio:** \_\_\_\_\_ **Servo:** \_\_\_\_\_  
**EPA:** Throttle: \_\_\_\_\_ % Brake: \_\_\_\_\_ %  
**ESC:** \_\_\_\_\_  
**ESC Settings:** \_\_\_\_\_  
**Motor:** \_\_\_\_\_  
**Wind:** \_\_\_\_\_ **Timing:** \_\_\_\_\_  
**Pinion:** \_\_\_\_\_ **Spur:** \_\_\_\_\_  
**Battery:** \_\_\_\_\_  
**Battery Position:** \_\_\_\_\_

## Drivetrain:

**Transmission:** **Laydown:** ☐  
**3 Gear:** ☐ **Layback:** ☐  
**4 Gear:** ☐ **Stand Up:** ☐  
**Differential:** **Ball Diff:** ☐  
**Height:** \_\_\_\_\_ **Gear Diff:** ☐  
**Notes:** \_\_\_\_\_  
**Slipper Clutch:**  
**Type:** \_\_\_\_\_  
**# of Pads:** \_\_\_\_\_

## Shocks:

	Front	Rear
<b>Piston:</b>		
<b>Fluid:</b>		
<b>Spring:</b>		
<b>Limiters:</b>		
<b>Stroke:</b>		
<b>Eyelet Length:</b>		
<b>Cup Offset:</b>		
<b>Notes:</b>		

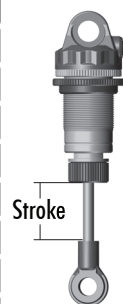

## Track Info:

**Size:** Small ☐ Medium ☐ Large ☐ Extra Large ☐  
**Surface:** Dirt ☐ Carpet ☐ AstroTurf ☐ Multi Surface ☐  
**Traction:** Low ☐ Medium ☐ High ☐ Very High ☐  
**Moisture:** Dry ☐ Damp ☐ Wet ☐  
**Condition:** Indoor ☐ Outdoor ☐ Dusty ☐ Hard Packed ☐  
 Bumpy ☐ Grooved ☐ Smooth ☐ Loamy ☐  
**Temperature:** Ambient: \_\_\_\_\_ Track: \_\_\_\_\_  
**Notes:** \_\_\_\_\_

## Tires:

**Front Tires:** \_\_\_\_\_  
**Front Compound:** \_\_\_\_\_  
**Front Insert:** \_\_\_\_\_  
**Rear Tires:** \_\_\_\_\_  
**Rear Compound:** \_\_\_\_\_  
**Rear Insert:** \_\_\_\_\_  
**Wheel (F/R):** \_\_\_\_\_  
**Notes:** \_\_\_\_\_

## Body, Wing, Weight:

**Body:** \_\_\_\_\_  
**Wing:** \_\_\_\_\_  
**Wing Angle:** 0° ☐ 3° ☐ 6° ☐  
**Servo Weights:**  
 None ☐ Aluminum ☐ Steel ☐ Other ☐  
**Electronic Weights:**  
 None ☐ Aluminum ☐ Steel ☐ Other ☐  
**Total Vehicle Weight:** \_\_\_\_\_

## Vehicle Comments:

**Notes:** \_\_\_\_\_

# **TEAM ASSOCIATED**

W O R L D C H A M P I O N R / C C A R S


***Associated Electrics, Inc.***

***26021 Commercentre Dr. Lake Forest, CA 92630 USA***

***call: (949) 544-7500 - fax: (949) 544-7501***

***Check out the following web sites for all of our kits,  
current products, new releases, setup help, tips, and racing info!  
[www.TeamAssociated.com](http://www.TeamAssociated.com) - [www.RC10.com](http://www.RC10.com)***

## **FOLLOW US ON SOCIAL MEDIA**

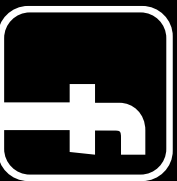

**TeamAssociated  
ReedyPower**



**@TeamAssociatedRC  
@ReedyPower**



**@Team\_Associated  
@ReedyPower**



**AEEFactoryTeam**