



#7036 RC10T2 KIT

PARTS ARRANGED BY BAG NUMBER IN KIT


#7036 TRANNY BAG E

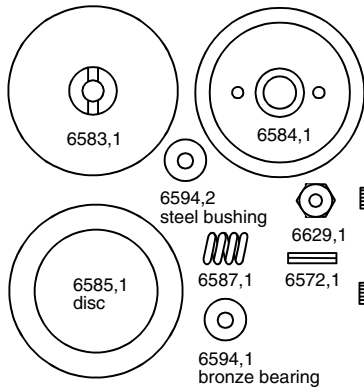


#7036 TRANNY BAG F

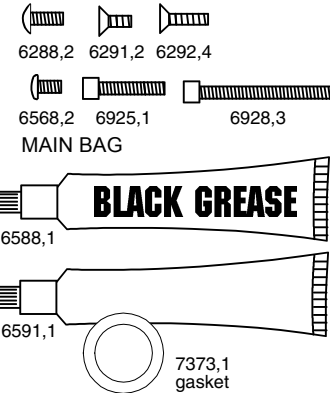


#7036 FRONT TIRE/WHEEL BAG

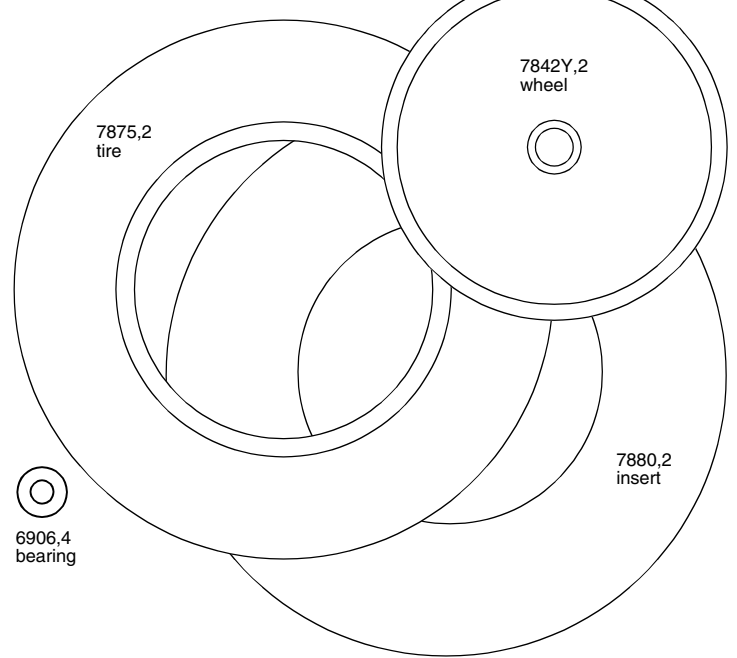


#7036 TRANNY MOTOR PLATE BAG

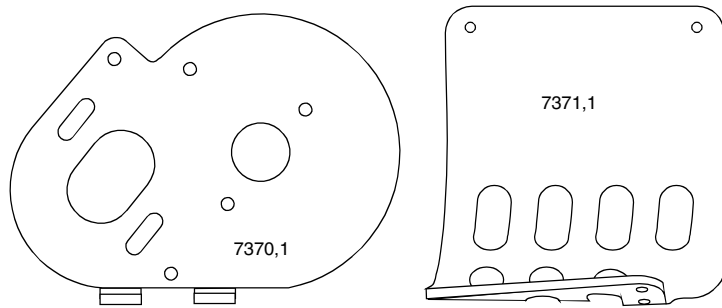


#7036 TRANNY GEAR COVER BAG

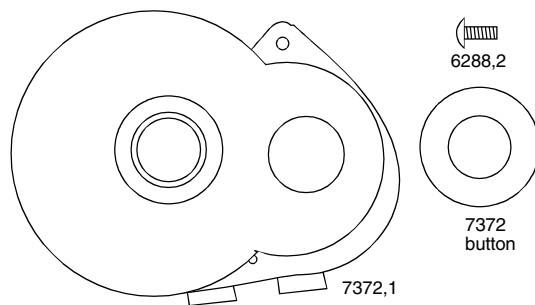


#7036 SUSPENSION ARM BAG

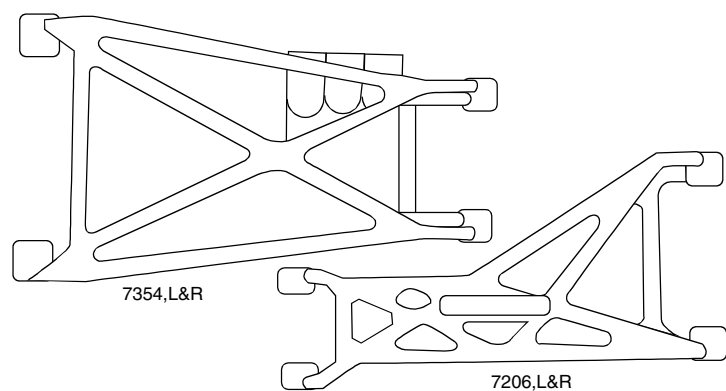

#7036 REAR TIRE/WHEEL BAG

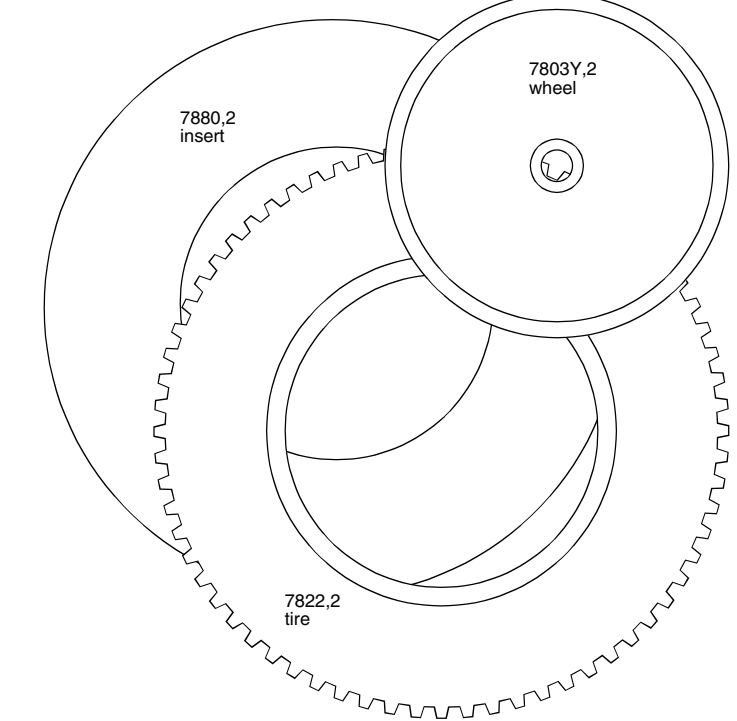

#7036 MASTER KIT BAG

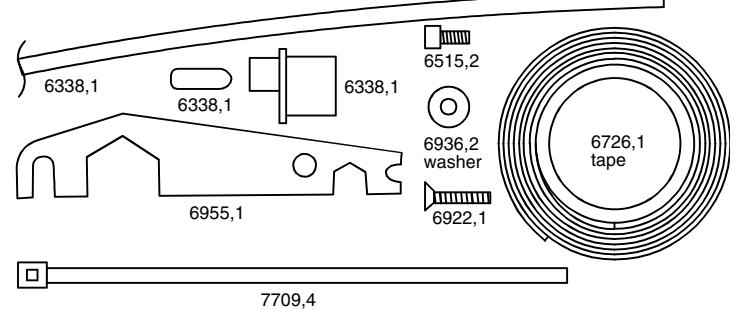

#7036 TOOL BAG

