
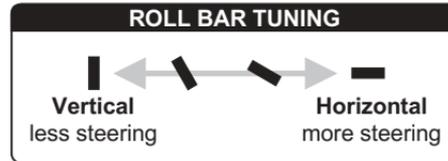


#1715 NTC3 FRONT BLADE ROLL BAR KIT

- 1 Insert #1715 blade (with the cup on the end) into the right #1715 mount. Thread #3862 set screw into the mount, but do not tighten it all the way down.
- 2 Attach the mount with the blade to the right front arm with two #1715 screws.
- 3 Insert #1715 blade (with the ball on the end) into the left #1715 mount. Thread #3862 set screw into the mount, but do not tighten it all the way down.
- 4 Place the ball end of the blade into the cup of the opposite blade. Attach the mount with the ball end blade to the left front arm with two #1715 screws.
- 5 Rotate the blades so both have flat sides facing up. Tighten the set screws.
- 6 With the blades in the horizontal position it will result in the softest setting. As you rotate the blades to the vertical position the roll bar will get stiffer. With the blade at the vertical position it will be the stiffest setting. Adjust both blades to the same angle, equally.

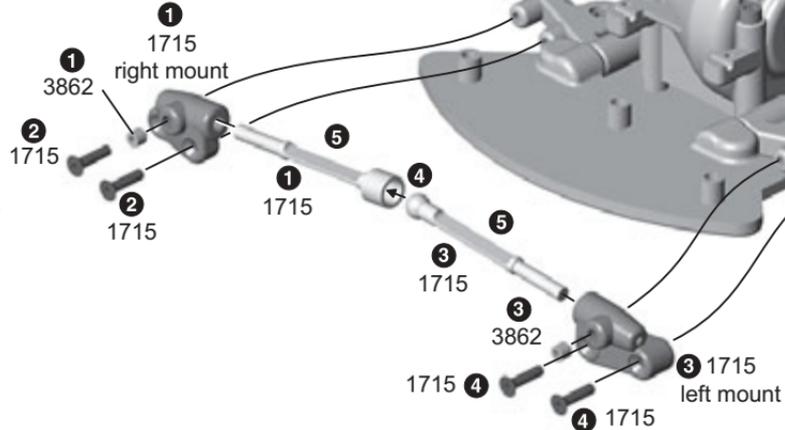

TEAM ASSOCIATED

3585 Cadillac Ave.

Costa Mesa, CA 92626



phone: (714) 850-9342

fax: (714) 850-1744

web site: <http://www.teamassociated.com>