

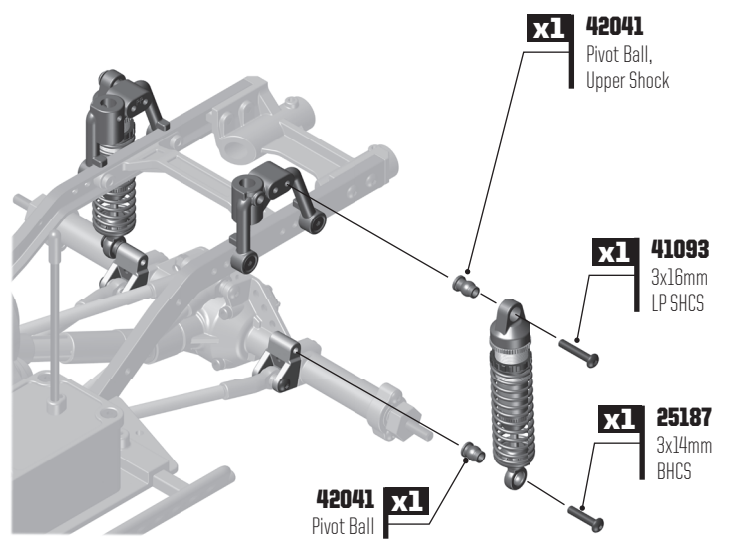
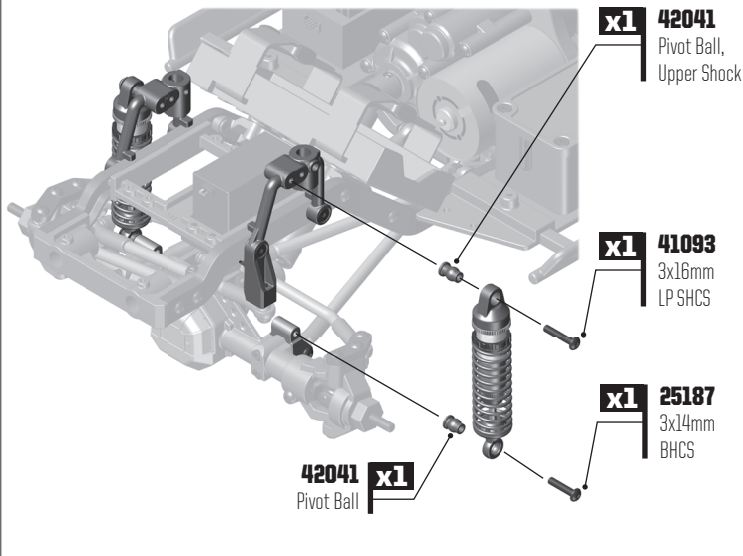



**GATE 04 SHOCK BUILD: BAG 9**

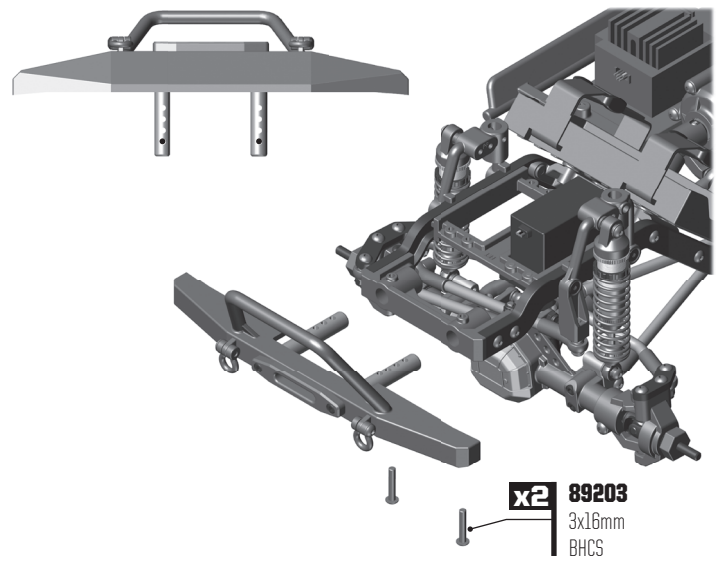


**GATE 01 BUMPER BUILD: BAG 10**

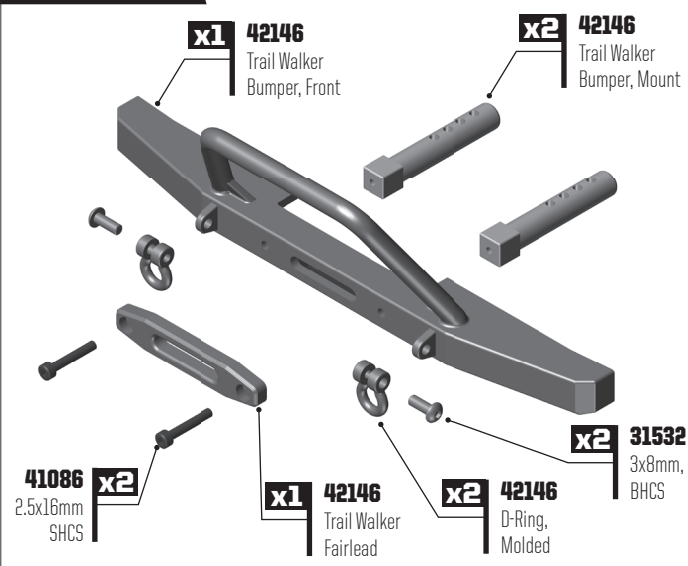

**GATE 01 WHEEL/TIRE BUILD**

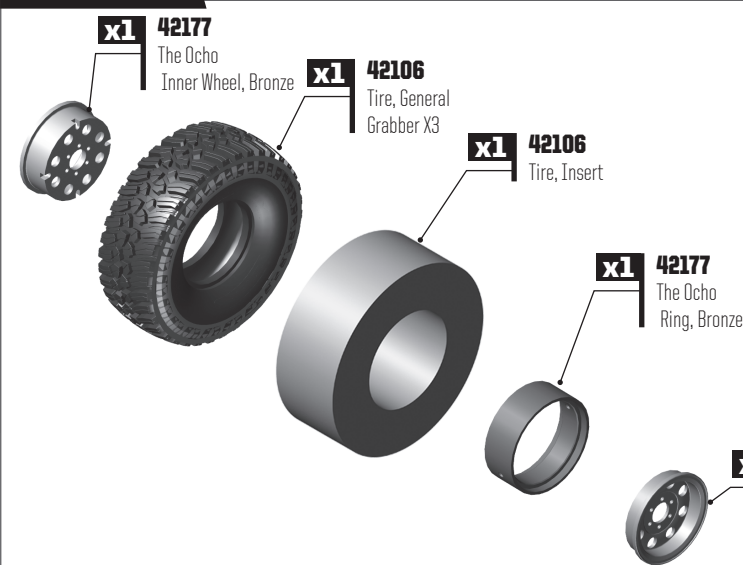

**NOTE:** Install #41088 screws in a crossing pattern

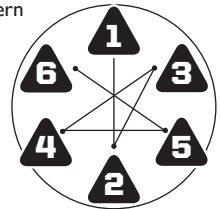


**x6** 41088 2.6x10mm BHCS




**NOTE:** Build 4 wheels/tires

## GATE 02 WHEEL/TIRE BUILD

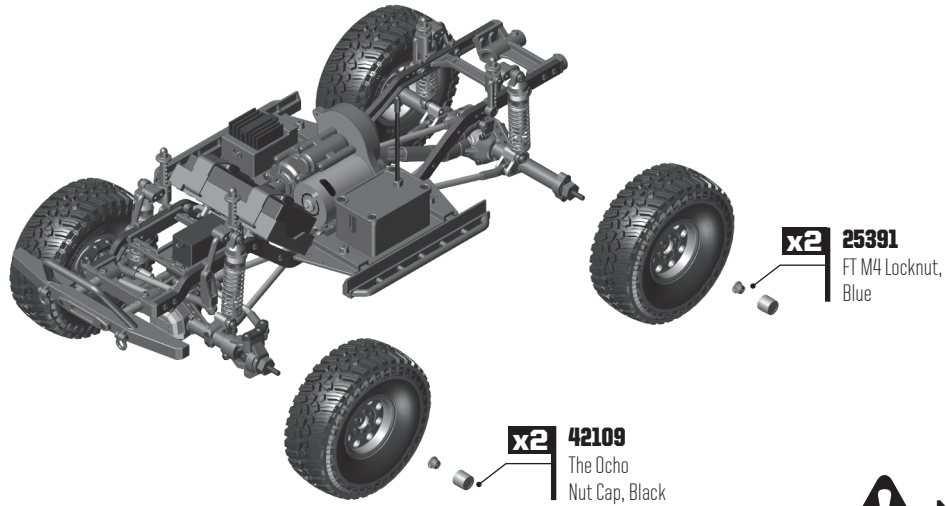


**NOTE:** Install 4 wheels/tires

## GATE 01 BODY BUILD: BAG 11

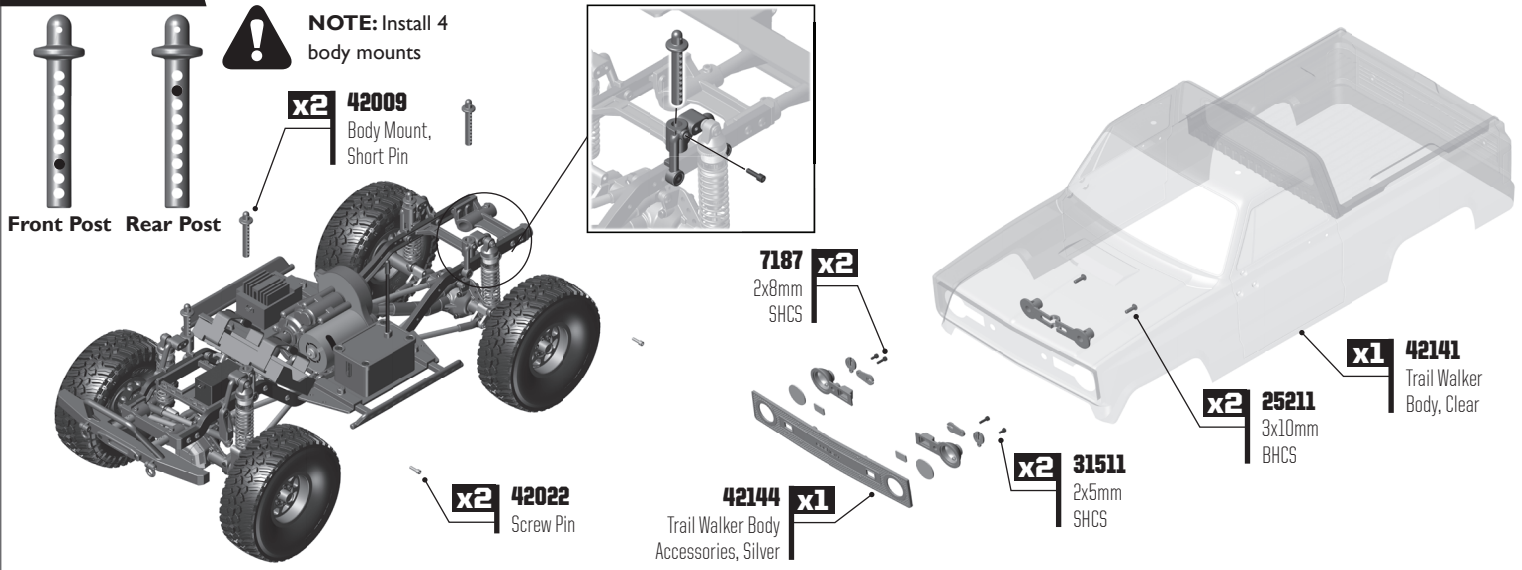


## GATE 02 BODY BUILD: BAG 11

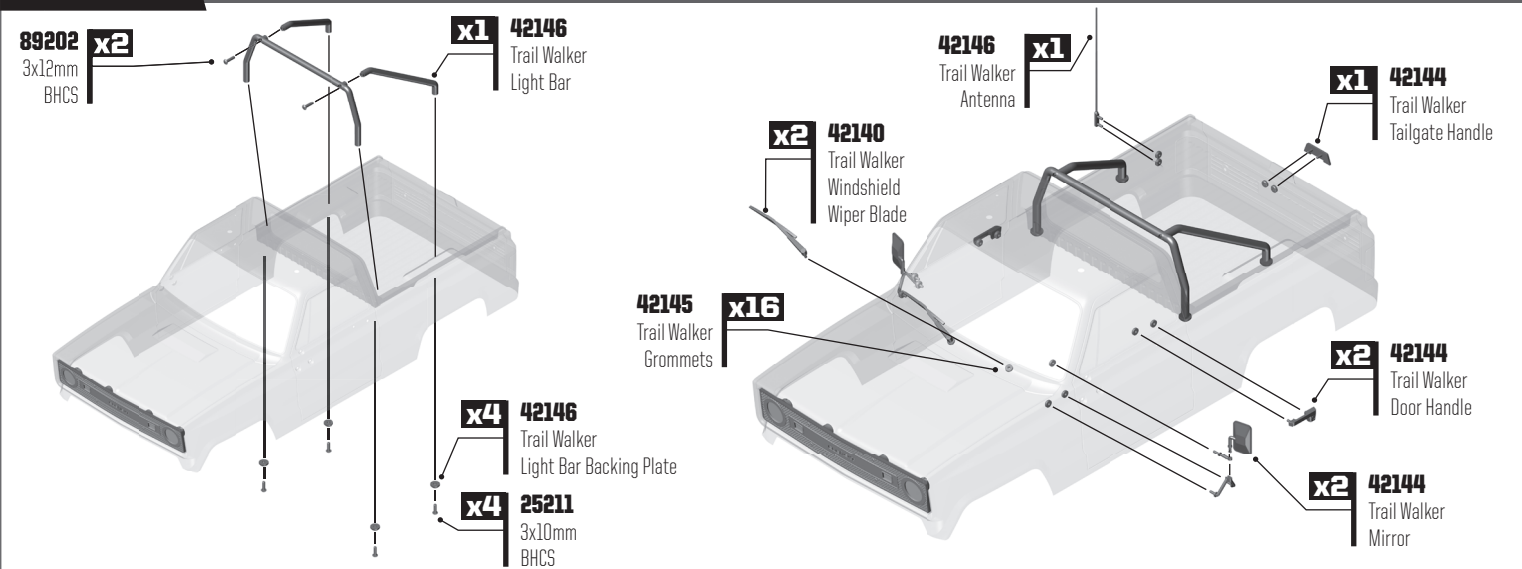

# GATE 03

BODY BUILD: BAG 11

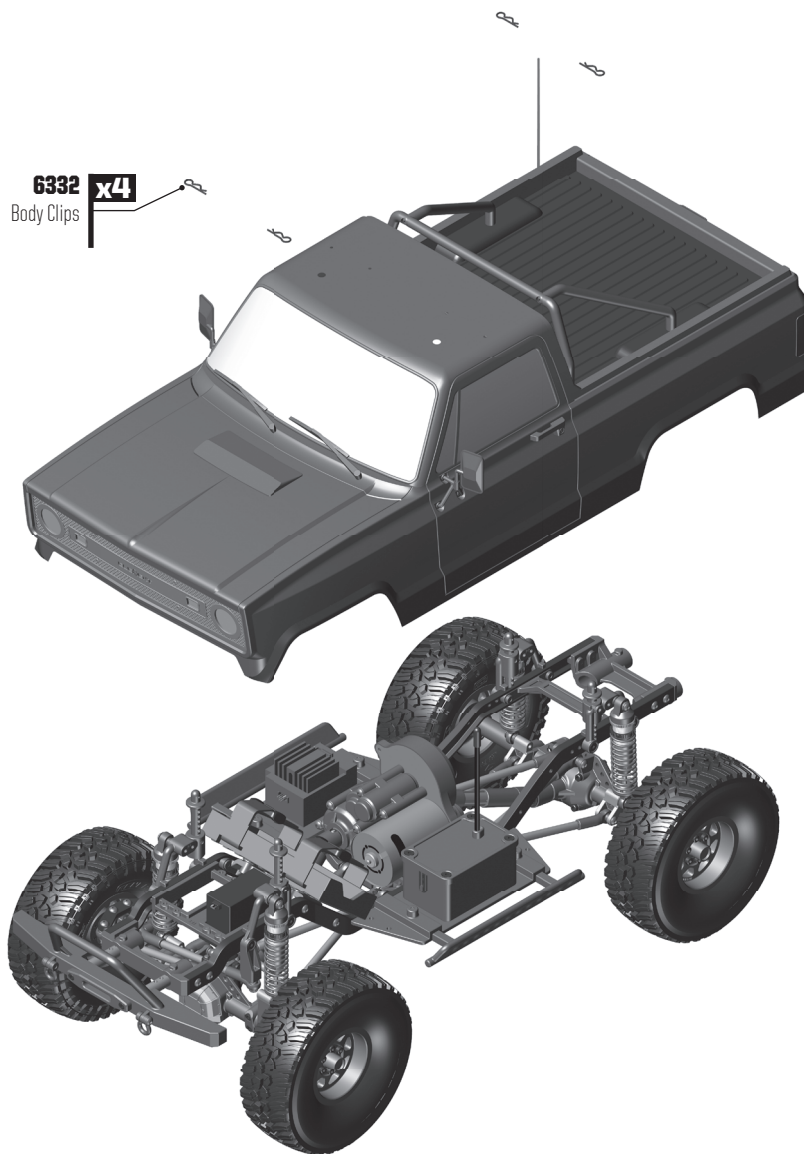

# GATE 05

## WHEELBASE CHART

WB	FRONT UPPER	FRONT LOWER	REAR UPPER	REAR LOWER
11.8"	93mm #42184	100mm #42185 #42186	93mm #42184	100mm #42185 #42186
12.0"	93mm #42184	100mm #42185 #42186	100mm #42185	108mm #42187 #42188
12.3"	93mm #42184	100mm #42185 #42186	108mm #42187	114mm #42189 #42190
12.8"	93mm #42184	100mm #42185 #42186	121mm #42191	127mm #42192 #42193



### Items Needed for Links:

#42040 - Rod Ends

**Panhard Links [CMS]:** Servo on Axle Links

Panhard - #42183


Steering Input - #42182

Steering Link - #42180


**[SOA]:**

Links - #42323


Steering Link - #42180




73mm




83mm




93mm




96mm




100mm




108mm



114mm



121mm



127mm