

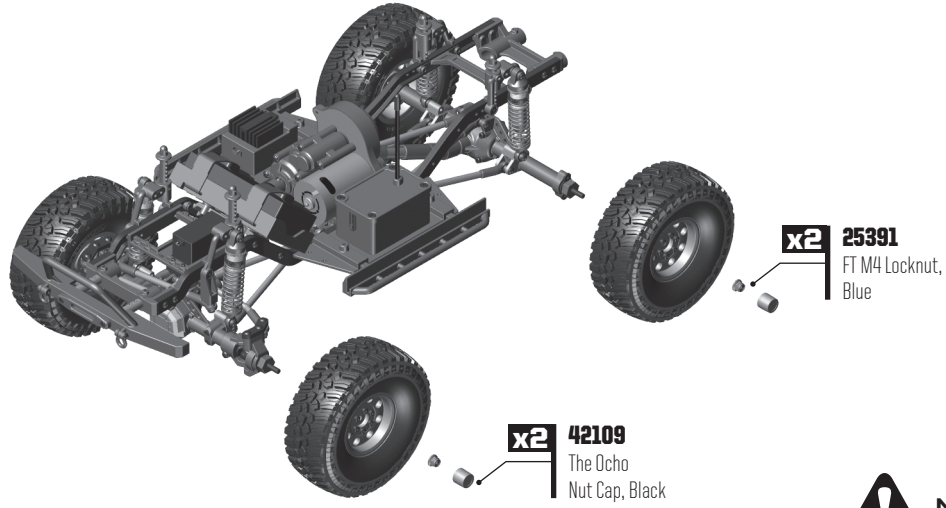


GATE 02 WHEEL/TIRE BUILD


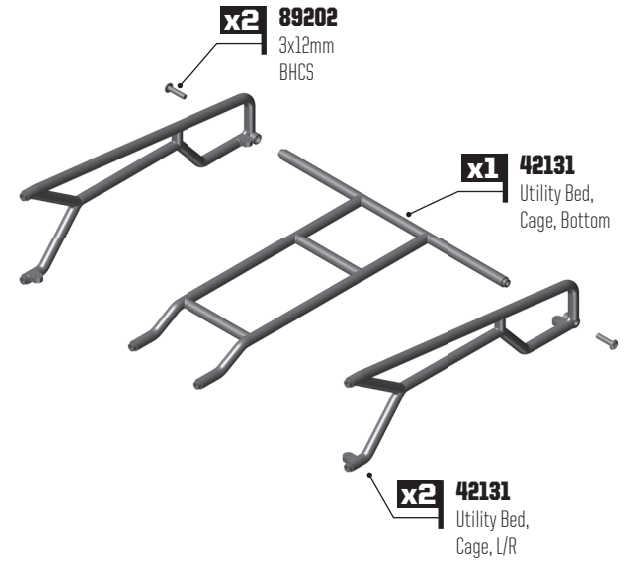


NOTE: Install 4 wheels/tires

GATE 01 BODY BUILD: BAG 11

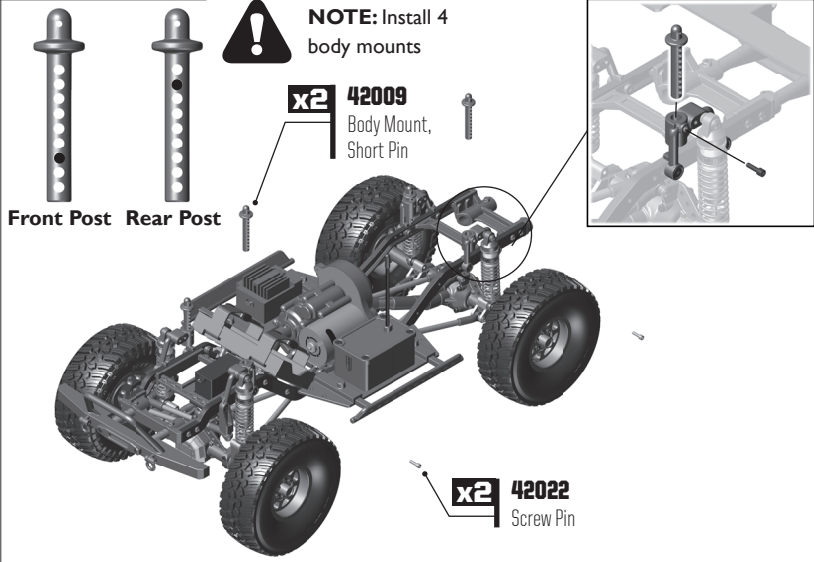

GATE 02 BODY BUILD: BAG 11

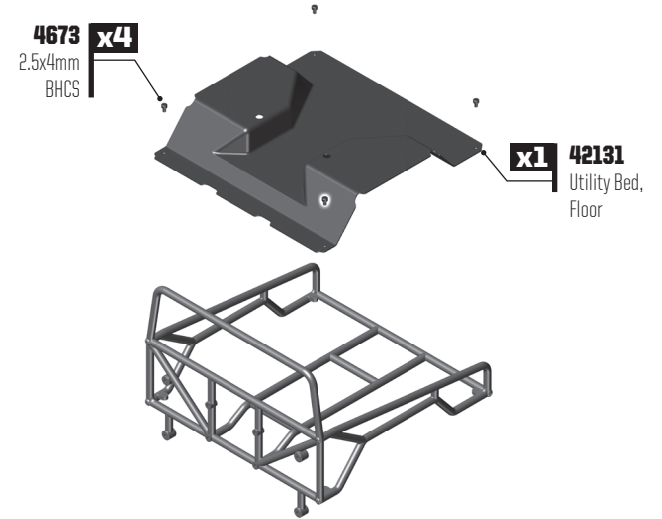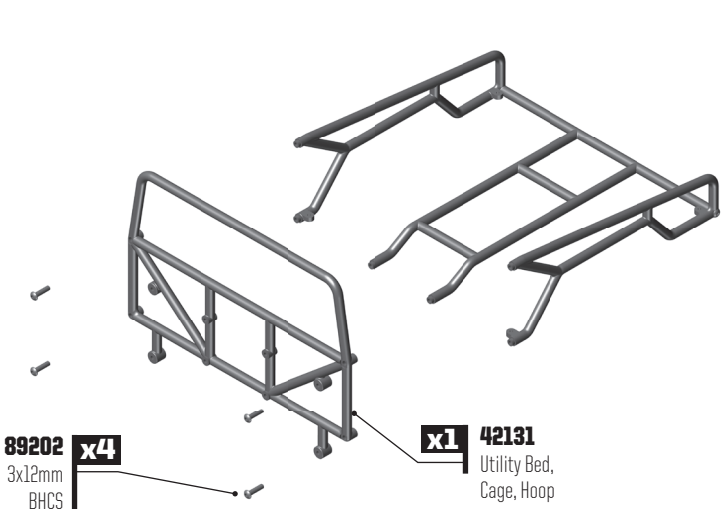

GATE 03 BODY BUILD: BAG 11

x2 42125 Sendero Windshield Wiper Blade

x1 42120 Sendero Body, Cab, Clear

x1 See Chart Sendero HD Body Set

x2 7187 2x8mm SHCS

x2 42125 Side Mirror, Black

x2 42125 Side Mirror Mount, Black

x2 5407 O-Ring

x2 31509 2x3mm BHCS

x2 21173 Body Clip, Small

x2 41079 2.5x6mm SHCS

x2 42125 Sendero LED Mount

x2 42125 Sendero Headlight Lense

x1 42125 Sendero Grill, Black

x2 42125 Sendero Headlight Bucket

x2 42125 Sendero Turn Signal Lense

x7 31531 3x6mm BHCS

x1 42125 Sendero Grill Backing Plate

NOTE: Install body clip and o-ring inside the body

NOTE: Install light buckets and hardware inside the body

GATE 04 BODY BUILD: BAG 11

x1 42131 Utility Bed, Mounting Plate

x2 25202 3x10mm FHCS

x2 89209 3x18mm FHCS

x4 42120 Sendero Body, Bed Mount

x4 25203 3x12mm, FHCS

6332 x4 Body Clips

Bodies


- #42178 - Sendero HD Body Set, Titanium
- #42120 - Sendero Body Set, Clear
- #42122 - Sendero Decal
- #42125 - Sendero Body Accessories
- #42131 - Sendero Utility Bed
- #42194 - Sendero HD Body Set, Black
- #42235 - Sendero HD Body Set, Red

NOTE: Install bed mounts and 3x12mm FHCS inside the body

GATE 05

WHEELBASE CHART

WB	FRONT UPPER	FRONT LOWER	REAR UPPER	REAR LOWER
11.8"	93mm #42184	100mm #42185 #42186	93mm #42184	100mm #42185 #42186
12.0"	93mm #42184	100mm #42185 #42186	100mm #42185	108mm #42187 #42188
12.3"	93mm #42184	100mm #42185 #42186	108mm #42187	114mm #42189 #42190
12.8"	93mm #42184	100mm #42185 #42186	121mm #42191	127mm #42192 #42193

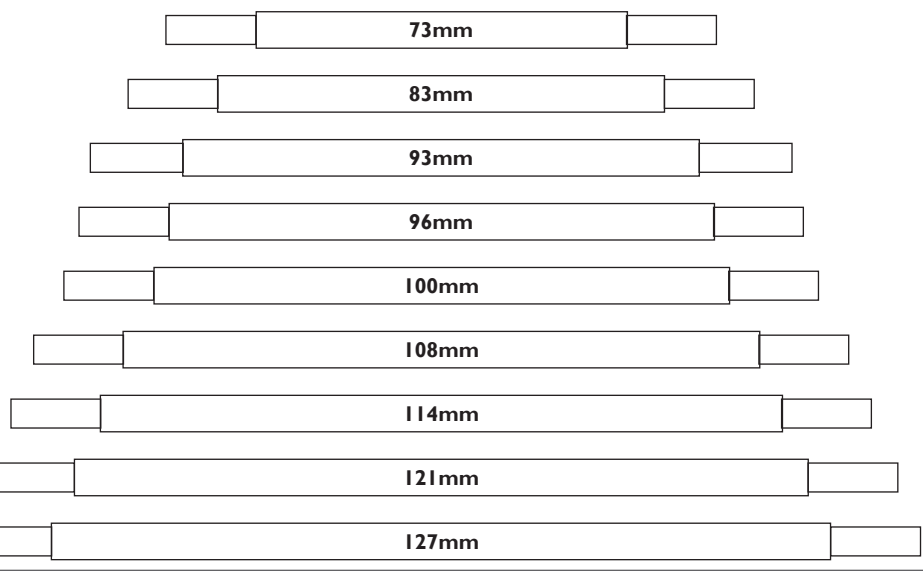

Items Needed for Links:

- #42040 - Rod Ends
- Panhard Links [CMS]:** Servo on Axle Links [SOA]:
- Panhard - #42183
- Steering Input - #42182
- Steering Link - #42180
- Links - #42323
- Steering Link - #42180