

#89481 RC8B Low B Plate Supplement

:: Installation

RC8B Low B Plate Supplement

The Low B Plate kit is meant to be used with the #89476 FT RC8B +3mm Chassis.


1) Installing the low B plate requires you to:

- A) Remove the droop screws.
- B) Use #89040 Inner Hinge Pins or;
 - Cut your existing hinge pins 3mm shorter to a total length of 65mm long.
- C) Modify the bottom of the front A-Arms around the droop screw area to maximize shock travel (see figure 1 & 2).
- D) Re-Install the droop screws. **Racers Tip:** Use #89220 droop screws.

Note:


Install the two clear bushings for the hinge pins when installing the Low B Plate (see figure 3).

Figure 1

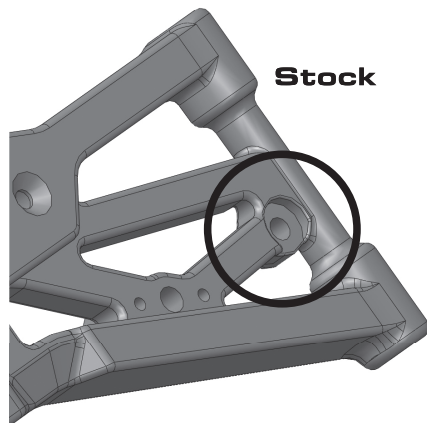

Stock

Figure 2

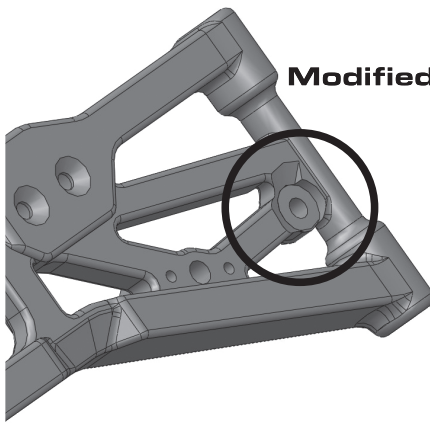

Modified

Figure 3

